

Hardware Documentation Kit Handbook

 


digital

Hardware Documentation Kit Handbook



digital



Hardware Documentation Kit Handbook

Prepared by
Accessories & Supplies Group

digital

The description, price and availability of the products described in this handbook are subject to change without notice and should not be construed as a commitment by Digital Equipment Corporation.

COPYRIGHT © 1978 DIGITAL EQUIPMENT CORPORATION

TABLE OF CONTENTS

| | |
|---|-----|
| HARDWARE DOCUMENTATION KITS | 1 |
| PACKAGED SYSTEMS | 197 |
| ALPHANUMERIC LISTING OF DIAGNOSTICS | 290 |
| INDEX | 291 |

INTRODUCTION

THIS CATALOG CONTAINS DOCUMENTATION KITS WHICH HAVE BEEN DESIGNED TO SUPPORT DIGITALS HARDWARE PRODUCTS. EACH KIT CONSISTS OF ALL CURRENT DOCUMENTATION APPLICABLE TO THAT PRODUCT.

DIAGNOSTICS ARE *NOT* INCLUDED AS PART OF THE DOCUMENTATION KITS, AND MUST BE PURCHASED SEPARATELY.

AVAILABLE UPON REQUEST IS THE TECHNICAL DOCUMENTATION CATALOG. THIS CATALOG WILL ALLOW YOU TO PURCHASE THE INDIVIDUAL ITEMS CONTAINED IN THE DOCUMENTATION LISTS. IN ADDITION THE TECHNICAL DOCUMENTATION CATALOG LISTS ALL CURRENT *SOFTWARE DOCUMENTATION*.

ORDERING INSTRUCTIONS

PLACE YOUR ORDER THROUGH YOUR LOCAL DIGITAL OFFICE. THE BACK COVER OF THIS CATALOG LISTS THE CITIES WHERE DIGITAL OFFICES ARE LOCATED.

PLEASE PROVIDE THE FOLLOWING INFORMATION WITH YOUR PURCHASE:

1. BILL TO ADDRESS
2. SHIP TO ADDRESS
3. PURCHASE ORDER NUMBER
4. TAX INFORMATION
5. PARTIALS ACCEPTED
6. METHOD OF SHIPMENT
7. REQUIRED DELIVERY
8. QUANTITY REQUIRED
9. DIGITAL PART NUMBER
10. DESCRIPTION
11. PRICE
12. RENEGOTIABLE

Hardware Documentation Kit Handbook

Hardware Documentation Kits

The kits presented in this catalog are designed to offer "one stop shopping" for all of your hardware documentation needs.

As you read this section you will note that the contents of each kit vary. This is because the documentation written for each option is dependent upon the complexity and application of the option itself. The kits are, however, designed to completely represent all available documentation.

The following types of documentation, wherever available, are included in each kit.

- Maintenance Manuals
- Illustrated Parts Breakdown
- Operators Manuals
- Print Sets

Not included in the kits but available separately are diagnostics. Each Diagnostic Kit contains papertape(s) and the listing.

digital

KIT NAME: 11/03, LC, LD, WC, WD, DOCUMENTS

Kit Number: FB-11/03-1

Contents

| | |
|--------------|------------------------|
| EK-BA11N-OP | BA11N USER'S GUIDE |
| EK-BA11N-IP | BA11N IPB MANUAL |
| EK-BDV11-UG | BDV11 USER'S GUIDE |
| EK-BDV11-TM | BDV11 TECHNICAL MANUAL |
| MP-000486-00 | 11/03-L, PRINT |

Microcomputer Handbook Series

| | |
|-------------|---|
| EB-15115-86 | MICROCOMPUTER PROCESSOR HANDBOOK |
| EB-15114-86 | MEMORIES AND PERIPHERALS MICROCOMPUTER HANDBOOK VOL 2 |

Diagnostic

| | |
|----------|-----------------------|
| ZJF01-RB | LSI-11/03, DIAGNOSTIC |
|----------|-----------------------|

KIT NAME: 11/03, EA, EB, FA, FB, KA, KB, JA, JB
DOCUMENTS

Kit Number: FB-11/03-2

Contents

| | |
|-------------|------------------|
| EK-BA11M-IP | BA11M IPB MANUAL |
| MP-11003-00 | 11/03, PRINT |

Microcomputer Handbook Series

| | |
|-------------|---|
| EB-15115-86 | MICROCOMPUTER PROCESSOR HANDBOOK |
| EB-15115-78 | MEMORIES AND PERIPHERALS MICROCOMPUTER HANDBOOK VOL 2 |

Diagnostic

| | |
|----------|-----------------------|
| ZJF01-RB | LSI-11/03, DIAGNOSTIC |
|----------|-----------------------|

KIT NAME: 11/04, BC,BD,DC,DD,LC,LD, DOCUMENTS

Kit Number: FB-11/04-1

Contents

| | |
|-------------|-------------------------------------|
| EK-04105-IP | PDP-11/04 16 BIT IPB (10-1/2") |
| EK-04525-IP | PDP-11/04 16 BIT COMPUTER IPB |
| EK-11004-OP | PDP-11/04 SYSTEM USERS MANUAL |
| EK-KD11D-MM | KD11-D MAINTENANCE MANUAL |
| EK-KY11L-IP | KY11-L CONSOLE IPB |
| EK-MS11E-MM | MS11-E/J MOS MEMORY MAINT MANUAL |
| EK-MS11E-OP | MS11-E/J MOS MEMORY USERS MANUAL |
| EK-BA11L-MM | BA11-L MOUNTING BOX |
| EK-BA11L-IP | BA11-L MOUNTING BOX IPB |
| EK-M9301-TM | M9301 BOOTSTRAP TECHNICAL MANUAL |
| MP-00019-00 | 11/04, PRINT |

Diagnostic

| | |
|----------|-----------------------|
| ZJF02-RB | PDP-11/04, DIAGNOSTIC |
|----------|-----------------------|

KIT NAME: 11/04, DH, DJ, LH, LJ, DOCUMENTS

Kit Number: FB-11/04-2

Contents

| | |
|-------------|-------------------------------------|
| EK-04105-IP | PDP-11/04 16 BIT IPB (10-1/2") |
| EK-04525-IP | PDP-11/04 16 BIT COMPUTER IPB |
| EK-11004-OP | PDP-11/04 SYSTEM USERS MANUAL |
| EK-KD11D-MM | KD11-D MAINTENANCE MANUAL |
| EK-KY11L-IP | KY11-L CONSOLE IPB |
| EK-MS11E-MM | MS11-E/J MOS MEMORY MAINT MANUAL |
| EK-MS11E-OP | MS11-E/J MOS MEMORY USERS MANUAL |
| EK-M9301-TM | M9301 BOOTSTRAP TECHNICAL MANUAL |
| EK-BA11K-IP | BA11-K MOUNTING BOX IPB |
| EK-BA11K-MM | BA11-K MOUNTING BOX MANUAL |
| EK-BA11K-OP | BA11-K MOUNTING BOX USERS MANUAL |
| MP-00019-00 | 11/04, PRINT |

Diagnostic

| | |
|----------|-----------------------|
| ZJF02-RB | PDP-11/04, DIAGNOSTIC |
|----------|-----------------------|

KIT NAME: 11/04, DM, DN, DOCUMENTS

Kit Number: FB-11/04-3

Contents

| | |
|-------------|-------------------------------------|
| EK-04105-IP | PDP-11/04 16 BIT IPB (10-1/2") |
| EK-04525-IP | PDP-11/04 16 BIT COMPUTER IPB |
| EK-11004-OP | PDP-11/04 SYSTEM USERS MANUAL |
| EK-MS11E-MM | MS11-E/J MOS MEMORY MAINT MANUAL |

(Continued on Next Page)

KIT NAME: 11/04, DM, DN, DOCUMENTS (Continued)

Contents

| | |
|-------------|-------------------------------------|
| EK-MS11E-OP | MS11-E/J MOS MEMORY USERS MANUAL |
| EK-BA11K-IP | BA11-K MOUNTING BOX IPB |
| EK-BA11K-MM | BA11-K MOUNTING BOX MANUAL |
| EK-BA11K-OP | BA11-K MOUNTING BOX USERS MANUAL |
| EK-DL11W-MM | DL11-W MAINTENANCE MANUAL |
| EK-DL11W-OP | DL11-W OPERATORS MANUAL |
| EK-M7850-MM | M7850 MAINTENANCE MANUAL |
| MP-00019-00 | 11/04, PRINT |
| MP-DD11D-00 | DD11-D, PRINT |
| MP-00311-00 | BA11-K, PRINT |

Diagnostic

| | |
|----------|-----------------------|
| ZJF02-RB | PDP-11/04, DIAGNOSTIC |
| ZJ235-RB | DL11-W, DIAGNOSTIC |

KIT NAME: 11/04, FC, FD, DOCUMENTS

Kit Number: FB-11/04-4

Contents

| | |
|-------------|-------------------------------------|
| EK-04105-IP | PDP-11/04 16 BIT IPB (10-1/2") |
| EK-04525-IP | PDP-11/04 16 BIT COMPUTER IPB |
| EK-11004-OP | PDP-11/04 SYSTEM USERS MANUAL |
| EK-KD11D-TM | KD11-D MAINTENANCE MANUAL |
| EK-KY11L-IP | KY11-L CONSOLE IPB |
| EK-M9301-TM | M9301 BOOTSTRAP TECHNICAL MANUAL |
| EK-BA11L-MM | BA11-L MOUNTING BOX |

(Continued on Next Page)

KIT NAME: 11/04, FC, FD, DOCUMENTS (Continued)

Contents

| | |
|-------------|---|
| EK-BA11L-IP | BA11-L MOUNTING BOX IPB |
| EK-MM11C-TM | MM11-C/CP MANUAL (INCLUDES MM11-B/BP |
| MP-00019-00 | 11/04, PRINT |

Diagnostic

| | |
|----------|-----------------------|
| ZJF02-RB | PDP-11/04, DIAGNOSTIC |
|----------|-----------------------|

KIT NAME: 11/04, HC, HD, DOCUMENTS

Kit Number: FB-11/04-5

Contents

| | |
|-------------|---------------------------------------|
| EK-04105-IP | PDP-11/04 16 BIT IPB (10-1/2") |
| EK-04525-IP | PDP-11/04 16 BIT COMPUTER IPB |
| EK-11004-OP | PDP-11/04 SYSTEM USERS MANUAL |
| EK-KD11D-TM | KD11-D MAINTENANCE MANUAL |
| EK-KY11L-IP | KY11-L CONSOLE IPB |
| EK-M9301-TM | M9301 BOOTSTRAP TECHNICAL MANUAL |
| EK-BA11L-MM | BA11-L MOUNTING BOX |
| EK-BA11L-IP | BA11-L MOUNTING BOX IPB |
| EK-MM11D-TM | MM11-D/DP CORE MEMORY MANUAL |
| EK-MM11D-OP | MM11-D/DP CORE MEMORY USERS MANUAL |
| MP-00019-00 | 11/04, PRINT |

Diagnostic

| | |
|----------|-----------------------|
| ZJF02-RB | PDP-11/04, DIAGNOSTIC |
|----------|-----------------------|

KIT NAME: 11/04, HH, HJ, MH, MJ, DOCUMENTS

Kit Number: FB-11/04-6

Contents

| | |
|-------------|---------------------------------------|
| EK-04105-IP | PDP-11/04 16 BIT IPB (10-1/2") |
| EK-04525-IP | PDP-11/04 16 BIT COMPUTER IPB |
| EK-11004-OP | PDP-11/04 SYSTEM USERS MANUAL |
| EK-KD11D-TM | KD11-D MAINTENANCE MANUAL |
| EK-KY11L-IP | KY11-L CONSOLE IPB |
| EK-M9301-TM | M9301 BOOTSTRAP TECHNICAL MANUAL |
| EK-BA11K-IP | BA11-K MOUNTING BOX IPB |
| EK-BA11K-MM | BA11-K MOUNTING BOX MANUAL |
| EK-BA11K-OP | BA11-K MOUNTING BOX USERS MANUAL |
| EK-MM11D-TM | MM11-D/DP CORE MEMORY MANUAL |
| EK-MM11D-OP | MM11-D/DP CORE MEMORY USERS MANUAL |
| MP-00019-00 | 11/04, PRINT |
| MP-00311-00 | BA11-K, PRINT |
| MP-DD11D-00 | DD11-D, PRINT |

Diagnostic

| | |
|----------|-----------------------|
| ZJF02-RB | PDP-11/04, DIAGNOSTIC |
|----------|-----------------------|

KIT NAME: 11/04, HM, HN, DOCUMENTS

Kit Number: FB-11/04-7

Contents

| | |
|-------------|--------------------------------|
| EK-04105-IP | PDP-11/04 16 BIT IPB (10-1/2") |
| EK-04525-IP | PDP-11/04 16 BIT COMPUTER IPB |
| EK-11004-OP | PDP-11/04 SYSTEM USERS MANUAL |
| EK-BA11K-IP | BA11-K MOUNTING BOX IPB |
| EK-BA11K-MM | BA11-K MOUNTING BOX MANUAL |

(Continued on Next Page)

KIT NAME: 11/04, HM, HN, DOCUMENTS (Continued)

Contents

| | |
|-------------|---------------------------------------|
| EK-BA11K-OP | BA11-K MOUNTING BOX USERS MANUAL |
| EK-DL11W-MM | DL11-W MAINTENANCE MANUAL |
| EK-DL11W-OP | DL11-W OPERATORS MANUAL |
| EK-MM11D-TM | MM11-D/DP CORE MEMORY MANUAL |
| EK-MM11D-OP | MM11-D/DP CORE MEMORY USERS MANUAL |
| EK-KD11D-MM | KD11-D MAINTENANCE MANUAL |
| EK-KY11L-IP | KY11-L CONSOLE IPB |
| EK-M9301-TM | M9301 BOOTSTRAP TECHNICAL MANUAL |
| EK-M7850-MM | M7850 MAINTENANCE MANUAL |
| MP-00019-00 | 11/04, PRINT |
| MP-DD11D-00 | DD11-D, PRINT |
| MP-00311-00 | BA11-K, PRINT |

Diagnostic

| | |
|----------|-----------------------|
| ZJF02-RB | PDP-11/04, DIAGNOSTIC |
| ZJ235-RB | DL11-W, DIAGNOSTIC |

KIT NAME: 11/04, MC, MD, DOCUMENTS

Kit Number: FB-11/04-8

Contents

| | |
|-------------|-------------------------------------|
| EK-04105-IP | PDP-11/04 16 BIT IPB (10-1/2") |
| EK-04525-IP | PDP-11/04 16 BIT COMPUTER IPB |
| EK-11004-OP | PDP-11/04 SYSTEM USERS MANUAL |
| EK-KD11D-MM | KD11-D MAINTENANCE MANUAL |
| EK-KY11L-IP | KY11-L CONSOLE IPB |
| EK-M9301-TM | M9301 BOOTSTRAP TECHNICAL MANUAL |

(Continued on Next Page)

KIT NAME: 11/04, MC, MD, DOCUMENTS (Continued)

Contents

| | |
|-------------|---------------------------------------|
| EK-BA11L-MM | BA11-L MOUNTING BOX |
| EK-BA11L-IP | BA11-L MOUNTING BOX IPB |
| EK-MM11D-TM | MM11-D/DP CORE MEMORY MANUAL |
| EK-MM11D-OP | MM11-D/DP CORE MEMORY USERS MANUAL |
| MP-00019-00 | 11/04, PRINT |

Diagnostic

| | |
|----------|-----------------------|
| ZJF02-RB | PDP-11/04, DIAGNOSTIC |
|----------|-----------------------|

KIT NAME: 11/05, LA, LB, NC, ND, DOCUMENTS

Kit Number: FB-11/05-LN

Contents

| | |
|-------------|---|
| EK-11005-TM | PDP-11/05 11/10 COMPUTER MANUAL |
| EK-11005-IP | PDP-11/05 16 BIT COMPUTER IPB |
| EK-01105-IP | PDP-11/05 16 BIT COMPUTER |
| EK-11005-ED | PDP-11/05 NC, ND DISASSEMBLY |
| EK-KD11B-MM | KD11-B PROCESSOR MAINTENANCE MANUAL |
| EK-MM11S-TM | MM11-S/L/LP CORE MEMORY SYSTEM |
| EK-MM11S-OP | MM11-S/L/OP CORE MEMORY USERS MANUAL |
| EK-KY11J-IP | KY11-J CONSOLE IPB |
| EK-OH765-IP | H765 POWER SUPPLY IPB |
| MP-11005-00 | 11/05, PRINT |

Diagnostic

| | |
|----------|-----------------------|
| ZJF03-RB | PDP-11/05, DIAGNOSTIC |
|----------|-----------------------|

KIT NAME: 11/05, S, DOCUMENTS

Kit Number: FB-11/05-S

Contents

| | |
|-------------|--|
| EK-1105S-TM | PDP-11/05S 11/10-S SYSTEM |
| EK-1105S-IP | PDP-11/05S 16 BIT COMPUTER IPB |
| EK-KD11B-MM | KD11-B PROCESSOR MAINTENANCE MANUAL |
| EK-KY11J-IP | KY11-J CONSOLE IPB |
| EK-BA11K-IP | BA11-K MOUNTING BOX IPB |
| EK-BA11K-MM | BA11-K MOUNTING BOX MANUAL |
| EK-BA11K-OP | BA11-K MOUNTING BOX USERS MANUAL |
| MP-11005-S0 | 11/05S, PRINT |

Diagnostic

| | |
|----------|-----------------------|
| ZJF03-RB | PDP-11/05, DIAGNOSTIC |
|----------|-----------------------|

KIT NAME: 11/15, DOCUMENTS

Kit Number: FB-11/15

Contents

| | |
|-----------------------|--|
| EK-11015-TM 19H165 | PDP-11/15 SYSTEM MANUAL KC11 PROCESSOR MANUAL (LP11A, KF11A) |
| EK-OH720-TM | H720 POWER SUPPLY/MOUNTING BOX |
| EK-OH720-OP | H720 POWER SUPPLY/MOUNTING USERS MANUAL |
| MP-11015-00 | 11/15, PRINT |

Diagnostic

| | |
|----------|-------------------|
| ZJ201-RB | 11/15, DIAGNOSTIC |
|----------|-------------------|

KIT NAME: 1134A, DC, DD, LC, LD, DOCUMENTS

Kit Number: FB-1134A-1

Contents

| | |
|-------------|-------------------------------------|
| EK-KD1EA-MM | KD11-EA MAINTENANCE MANUAL |
| EK-BA11L-MM | BA11-L MOUNTING BOX |
| EK-BA11L-IP | BA11-L MOUNTING BOX IPB |
| EK-M7850-MM | M7850 MAINTENANCE MANUAL |
| EK-M9301-TM | M9301 BOOTSTRAP TECHNICAL MANUAL |
| EK-KY11L-IP | KY11-L CONSOLE IPB |
| EK-34105-IP | PDP-11/34 (10-1/2") 16 BIT |
| EK-34525-IP | PDP-11/34 16 BIT COMPUTER IPB |
| EK-11034-UG | PDP-11/34 SYSTEM USERS |
| EK-1134A-TM | PDP-11/34A POWER SYSTEM |
| MP-00190-00 | 1134-A, PRINT |
| MP-00082-00 | 11/34 VOL 2, PRINT |

Diagnostic

| | |
|----------|-------------------|
| ZRF04-RB | 11/34, DIAGNOSTIC |
|----------|-------------------|

KIT NAME: 1134A, DE, DF, LE, LF, DOCUMENTS

Kit Number: FB-1134A-2

Contents

| | |
|-------------|-------------------------------------|
| EK-KD1EA-MM | KD11-EA MAINTENANCE MANUAL |
| EK-M7850-MM | M7850 MAINTENANCE MANUAL |
| EK-MS11E-MM | MS11-E/J MOS MEMORY MAINT MANUAL |
| EK-MS11E-OP | MS11-E/J MOS MEMORY USERS MANUAL |
| EK-M9301-TM | M9301 BOOTSTRAP TECHNICAL MANUAL |
| EK-BA11K-IP | BA11-K MOUNTING BOX IPB |

(Continued on Next Page)

**KIT NAME: 1134A, DE, DF, LE, LF, DOCUMENTS
(Continued)**

Contents

| | |
|-------------|--------------------------------------|
| EK-BA11K-MM | BA11-K MOUNTING BOX MANUAL |
| EK-BA11K-OP | BA11-K MOUNTING BOX USER'S MANUAL |
| EK-34105-IP | PDP-11/34 (10-1/2") 16 BIT |
| EK-34525-IP | PDP-11/34 16 BIT COMPUTER IPB |
| EK-11034-UG | PDP-11/34 SYSTEM USERS |
| EK-1134A-TM | PDP-11/34A POWER SYSTEM |
| EK-OH765-IP | H765 POWER SUPPLY IPB |
| EK-OH745-IP | H745 REGULATOR IPB |
| EK-DL11W-MM | DL11-W MAINTENANCE MANUAL |
| EK-DL11W-OP | DL11-W OPERATORS MANUAL |
| MP-00190-00 | 1134-A, PRINT |
| MP-00082-00 | 11/34 VOL 2, PRINT |

Diagnostic

| | |
|----------|-------------------|
| ZRF04-RB | 11/34, DIAGNOSTIC |
|----------|-------------------|

KIT NAME: 1134A, DH, DJ, LH, LJ, DOCUMENTS

Kit Number: FB-1134A-3

Contents

| | |
|-------------|-------------------------------------|
| EK-KD1EA-MM | KD11-EA MAINTENANCE MANUAL |
| EK-M7850-MM | M7850 MAINTENANCE MANUAL |
| EK-M9301-TM | M9301 BOOTSTRAP TECHNICAL MANUAL |
| EK-KY11L-IP | KY11-L CONSOLE IPB |
| EK-34105-IP | PDP-11/34 (10-1/2") 16 BIT |
| EK-34525-IP | PDP-11/34 16 BIT COMPUTER IPB |
| EK-11034-UG | PDP-11/34 SYSTEM USERS |
| EK-1134A-TM | PDP-11/34A POWER SYSTEM |

(Continued on Next Page)

KIT NAME: 1134A, DH, DJ, LH, LJ, DOCUMENTS
(Continued)

Contents

| | |
|-------------|----------------------------|
| EK-OH765-IP | H765 POWER SUPPLY IPB |
| EK-OH745-IP | H745 REGUALTOR IPB |
| EK-BA11K-IP | BA11-K MOUNTING BOX IPB |
| EK-BA11K-MM | BA11-K MOUNTING BOX MANUAL |
| EK-BA11K-OP | BA11-K MOUNTING BOX MANUAL |
| MP-00190-00 | 1134A, PRINT |
| MP-00082-00 | 11/34 VOL 2 PRINT |

Diagnostic

| | |
|----------|-------------------|
| ZRF04-RB | 11/34, DIAGNOSTIC |
|----------|-------------------|

KIT NAME: 1134A, HC, HD, MC, MD, DOCUMENTS

Kit Number: FB-1134A-4

Contents

| | |
|-------------|-------------------------------------|
| EK-KD1EA-MM | KD11-EA MAINTENANCE MANUAL |
| EK-BA11L-MM | BA11-L MOUNTING BOX |
| EK-BA11L-IP | BA11-L MOUNTING BOX IPB |
| EK-M7850-MM | M7850 MAINTENANCE MANUAL |
| EK-M9301-TM | M9301 BOOTSTRAP TECHNICAL MANUAL |
| EK-KY11L-IP | KY11-L CONSOLE IPB |
| EK-MM11D-TM | MM11-D/DP CORE MEMORY MANUAL |

(Continued on Next Page)

KIT NAME: 1134A, HC, HD, MC, MD, DOCUMENTS
(Continued)

Contents

| | |
|-------------|-------------------------------------|
| EK-MM11D-OP | MM11-D/DP CORE MEMORY USER'S MANUAL |
| EK-34105-IP | PDP-11/34 (10-1/2") 16 BIT |
| EK-34525-IP | PDP-11/34 16 BIT COMPUTER IPB |
| EK-11034-UG | PDP-11/34 SYSTEM USERS |
| EK-1134A-TM | PDP-11/34A POWER SYSTEM |
| MP-00190-00 | 1134-A, PRINT |
| MP-00082-00 | 11/34 VOL 2, PRINT |

Diagnostic

| | |
|----------|-------------------|
| ZRF04-RB | 11/34, DIAGNOSTIC |
|----------|-------------------|

KIT NAME: 1134A, HE, HF, DOCUMENTS

Kit Number: FB-1134A-5

Contents

| | |
|-------------|----------------------------------|
| EK-KD1EA-MM | KD11-EA MAINTENANCE MANUAL |
| EK-M7850-MM | M7850 MAINTENANCE MANUAL |
| EK-M9301-TM | M9301 BOOTSTRAP TECHNICAL MANUAL |
| EK-BA11K-IP | BA11-K MOUNTING BOX IPB |
| EK-BA11K-OP | MOUNTING BOX USER'S MANUAL |
| EK-BA11K-MM | BA11-K MOUNTING BOX MANUAL |
| EK-OH765-IP | H765 POWER SUPPLY IPB |
| EK-OH745-IP | H745 REGULATOR IPB |
| EK-DL11W-MM | DL11-W MAINTENANCE MANUAL |
| EK-DL11W-OP | DL11W OPERATORS MANUAL |
| EK-34105-IP | PDP-11/34 (10-1/2") 16 BIT |
| EK-34525-IP | PDP-11/34 16 BIT COMPUTER IPB |
| EK-11034-UG | PDP-11/34 SYSTEM USERS |

(Continued on Next Page)

KIT NAME: 1134A, HE, HF, DOCUMENTS (Continued)

Contents

| | |
|-------------|---------------------------------------|
| EK-1134A-TM | PDP-11/34A POWER SYSTEM |
| EK-MM11D-TM | MM11-D/DP CORE MEMORY MANUAL |
| EK-MM11D-OP | MM11-D/DP CORE MEMORY USERS MANUAL |
| EK-OH754-IP | H754 REGULATOR IPB |
| EK-KY1LB-MM | KY11-LB MAINTENANCE MANUAL |
| MP-00190-00 | 1134A, PRINT |
| MP-00082-00 | 11/34 VOL 2, PRINT |

Diagnostic

| | |
|----------|-------------------|
| ZRF04-RB | 11/34, DIAGNOSTIC |
|----------|-------------------|

KIT NAME: 1134A, HH, HJ, MH, MJ, DOCUMENTS

Kit Number: FB-1134A-6

Contents

| | |
|-------------|--|
| EK-KD1EA-MM | KD11-EA MAINTENANCE MANUAL |
| EK-M7850-MM | M7850 MAINTENANCE MANUAL |
| EK-M9301-TM | M9301 BOOTSTRAP TECHNICAL MANUAL |
| EK-KY11L-IP | KY11-L CONSOLE IPB |
| EK-BA11K-IP | BA11-K MOUNTING BOX IPB |
| EK-BA11K-MM | BA11-K MOUNTING BOX MANUAL |
| EK-BA11K-OP | BA11-K MOUNTING BOX USER'S MANUAL |
| EK-OH765-IP | H765 POWER SUPPLY IPB |
| EK-OH745-IP | H745 REGULATOR IPB |
| EK-OH754-IP | H754 REGULATOR IPB |
| EK-MM11D-TM | MM11-D/DP CORE MEMORY MANUAL |
| EK-MM11D-OP | MM11-D/DP CORE MEMORY USER'S MANUAL |

(Continued on Next Page)

**KIT NAME: 1134A, HH, HJ, MH, MJ, DOCUMENTS
(Continued)**

Contents

| | |
|-------------|-------------------------------|
| EK-34105-IP | PDP-11/34 (10-1/2") 16 BIT |
| EK-34525-IP | PDP-11/34 16 BIT COMPUTER IPB |
| EK-11034-UG | PDP-11/34 SYSTEM USERS |
| EK-1134A-TM | PDP-11/34A POWER SYSTEM |
| MP-00190-00 | 1134A, PRINT |
| MP-00082-00 | 11/34 VOL 2, PRINT |

Diagnostic

| | |
|----------|-------------------|
| ZRF04-RB | 11/34, DIAGNOSTIC |
|----------|-------------------|

KIT NAME: 1134A, ME, MF, DOCUMENTS

Kit Number: FB-1134A-7

Contents

| | |
|-------------|--|
| EK-KD1EA-MM | KD11-EA MAINTENANCE MANUAL |
| EK-M7850-MM | M7850 MAINTENANCE MANUAL |
| EK-M9301-TM | M9301 BOOTSTRAP TECHNICAL MANUAL |
| EK-KY11L-IP | KY11-L CONSOLE IPB |
| EK-BA11K-IP | BA11-K MOUNTING BOX IPB |
| EK-BA11K-MM | BA11-K MOUNTING BOX MANUAL |
| EK-BA11K-OP | BA11-K MOUNTING BOX USER'S MANUAL |
| EK-OH765-IP | H765 POWER SUPPLY IPB |
| EK-OH745-IP | H745 REGULATOR IPB |
| EK-DL11W-MM | DL11-W MAINTENANCE MANUAL |
| EK-DL11W-OP | DL11-W OPERATORS MANUAL |
| EK-MM11D-TM | MM11-D/DP CORE MEMORY MANUAL |
| EK-MM11D-OP | MM11-D/DP CORE MEMORY USER'S MANUAL |

(Continued on Next Page)

KIT NAME: 1134A, ME, MF, DOCUMENTS (Continued)

Contents

| | |
|-------------|-------------------------------|
| EK-OH754-IP | H754 REGULATOR IPB |
| EK-KY1LB-MM | KY11-LB MAINTENANCE MANUAL |
| EK-34105-IP | PDP-11/34 (10-1/2") 16 BIT |
| EK-34525-IP | PDP-11/34 16 BIT COMPUTER IPB |
| EK-11034-UG | PDP-11/34 SYSTEM USERS |
| EK-1134A-TM | PDP-11/34A POWER SYSTEM |
| MP-00190-00 | 1134A, PRINT |
| MP-00082-00 | 11/34 VOL 2, PRINT |

Diagnostic

| | |
|----------|-------------------|
| ZRF04-RB | 11/34, DIAGNOSTIC |
|----------|-------------------|

KIT NAME: 11/35, FC, FD, DOCUMENTS

Kit Number: FB-11/35-F

Contents

| | |
|-------------|--|
| EK-11035-IP | PDP-11/35 16 BIT COMPUTER IPB |
| EK-11035-TM | PDP-11/35 SYSTEM MANUAL |
| EK-11035-OP | PDP-11/35 SYSTEM USERS GUIDE |
| EK-KD11A-TM | KD11-A PROCESSOR MAINTENANCE MANUAL |
| EK-BA11F-IP | BA11-F MOUNTING BOX IPB |
| MP-11035-F0 | 11/35F, PRINT |
| MP-MF11U-P0 | MF11-U/UP, PRINT |

Diagnostic

| | |
|----------|-----------------------|
| ZJF05-RB | PDP-11/35, DIAGNOSTIC |
|----------|-----------------------|

KIT NAME: 11/35, JA, JB, DOCUMENTS

Kit Number: FB-11/35-JA

Contents

| | |
|-------------|---|
| EK-11035-IP | PDP-11/35 16 BIT COMPUTER IPB |
| EK-11035-TM | PDP-11/35 SYSTEM MANUAL |
| EK-11035-OP | PDP-11/35 SYSTEM USERS GUIDE |
| EK-KD11A-TM | KD11-A PROCESSOR MAINTENANCE MANUAL |
| EK-MM11S-TM | MM11-S/L/LP CORE MEMORY SYSTEM |
| EK-MM11S-OP | MM11-S/L/OP CORE MEMORY USERS MANUAL |
| MP-11035-00 | PDP-11/35, PRINT |
| MP-MM11L-00 | MM11-L, PRINT |

Diagnostic

| | |
|----------|-----------------------|
| ZJF05-RB | PDP-11/35, DIAGNOSTIC |
|----------|-----------------------|

KIT NAME: 11/35, JC, JD, DOCUMENTS

Kit Number: FB-11/35-JC

Contents

| | |
|-------------|---|
| EK-11035-IP | PDP-11/35 16 BIT COMPUTER IPB |
| EK-11035-TM | PDP-11/35 SYSTEM MANUAL |
| EK-11035-OP | PDP-11/35 SYSTEM USERS GUIDE |
| EK-KD11A-TM | KD11-A PROCESSOR MAINTENANCE MANUAL |
| EK-MM11S-TM | MM11-S/L/LP CORE MEMORY SYSTEM |
| EK-MM11S-OP | MM11-S/L/OP CORE MEMORY USERS MANUAL |
| MP-MM11S-00 | MM11-S, PRINT |
| MP-11035-00 | PDP-11/35, PRINT |

Diagnostic

| | |
|----------|-----------------------|
| ZJF05-RB | PDP-11/35, DIAGNOSTIC |
|----------|-----------------------|

KIT NAME: 11/35, SE, SF, DOCUMENTS

Kit Number: FB-11/35-S

Contents

| | |
|-------------|--|
| EK-1135S-TM | PDP-11/35S SYSTEM MANUAL |
| 9412765 | PDP-11/35S 16 BIT COMPUTER IPB |
| EK-KD11A-TM | KD11-A PROCESSOR MAINTENANCE MANUAL |
| EK-BA11K-IP | BA11-K MOUNTING BOX IPB |
| EK-BA11K-OP | MOUNTING BOX USER'S MANUAL |
| EK-BA11K-MM | BA11-K MOUNTING BOX MANUAL |
| MP-MF11U-P0 | MF11-U/UP, PRINT |
| MP-11035-S0 | 11/35S, PRINT |

Diagnostic

| | |
|----------|-----------------------|
| ZJF05-RB | PDP-11/35, DIAGNOSTIC |
|----------|-----------------------|

KIT NAME: 11/40, DOCUMENTS

Kit Number: FB-11/40

Contents

| | |
|-------------|---|
| EK-11040-IP | PDP-11/40 16 BIT COMPUTER IPB |
| EK-11040-TM | PDP-11/40/35 SYSTEM MANUAL |
| EK-861AB-MM | 861-A/B/C/D/E/F MAINTENANCE MANUAL |
| EK-861AB-OP | 861-A/B/C/D/E/F POWER CONTROLLER |
| EK-00861-IP | 861-A/B/C/D/E/F POWER IPB |
| EK-ODL11-TM | DL11 ASYNCHRONOUS LINE INTER- FACE MAN |
| EK-ODL11-OP | DL11 INTERFACE USERS MANUAL |
| EK-OLA36-IP | LA36 DECWRITER II IPB |

(Continued on Next Page)

KIT NAME: 11/40, DOCUMENTS (Continued)

Contents

| | |
|-------------|-------------------------------|
| EK-2LA36-MM | LA36 MAINTENANCE MANUAL |
| EK-1LA36-MM | LA36 MAINTENANCE MANUAL VOL I |
| MP-0LA36-00 | LA36, PRINT |
| MP-00158-00 | 11/40, PRINT |

Diagnostic

| | |
|----------|----------------------|
| ZJF05-RB | 11/35-40, DIAGNOSTIC |
|----------|----------------------|

KIT NAME: 11/45, DOCUMENTS

Kit Number: FB-11/45

Contents

| | |
|-------------|---|
| EK-861AB-MM | 861-A/B/C/D/E/F MAINTENANCE MANUAL |
| EK-861AB-OP | 861-A/B/C/D/E/F POWER CONTROLLER |
| EK-00861-IP | 861-A/B/C/D/E/F POWER IPB |
| EK-11MOS-TM | PDP-11/45 11/50 TROUBLESHOOTING GUIDE |
| EK-11045-IP | PDP-11/45 16 BIT IPB |
| EK-11001-HR | PDP-11/45 MAINTENANCE |
| EK-11045-MM | PDP-11/45 MAINTENANCE MANUAL |
| EK-11045-OP | PDP-11/45/50/55 USERS MANUAL |
| EK-KB11A-MM | KB11-A MAINTENANCE MANUAL |
| EK-KT11C-MM | KT11C/CD MAINTENANCE MANUAL |
| EK-KT11C-OP | KT11-C/CD USERS MANUAL |
| EK-OLA36-IP | LA36 DECWRITER II IPB |
| EK-2LA36-MM | LA36 MAINTENANCE MANUAL |
| EK-1LA36-MM | LA36 MAINTENANCE MANUAL VOL I |
| EK-ODL11-TM | DL11 ASYNCHRONOUS LINE INTER- FACE MAN |
| EK-ODL11-OP | DL11 INTERFACE USERS MANUAL |
| EK-MF11U-MM | MF11-U/UP MAINTENANCE MANUAL |

(Continued on Next Page)

KIT NAME: 11/45 DOCUMENTS (Continued)

Contents

| | |
|-------------|---------------|
| MP-0LA36-00 | LA36, PRINT |
| MP-KW11L-00 | KW11-L, PRINT |
| MP-KT11C-00 | KT11-C, PRINT |
| MP-11045-00 | 11/45, PRINT |

Diagnostic

| | |
|----------|-----------------------|
| ZR104-RB | KT11-C, DIAGNOSTIC |
| ZJ137-RB | KW11, DIAGNOSTIC |
| ZRF01-RB | PDP-11/45, DIAGNOSTIC |

KIT NAME: 11/55, BA, BB, DOCUMENTS

Kit Number: FB-11/55-B1

Contents

| | |
|-------------|---------------------------------------|
| EK-861AB-MM | 861-A/B/C/D/E/F MAINTENANCE MANUAL |
| EK-861AB-OP | 861-A/B/C/D/E/F POWER CONTROLLER |
| EK-00861-IP | 861-A/B/C/D/E/F POWER IPB |
| EK-OLA36-IP | LA36 DECWRITER II IPB |
| EK-2LA36-MM | LA36 MAINTENANCE MANUAL |
| EK-1LA36-MM | LA36 MAINTENANCE MANUAL VOL I |
| EK-M9301-TM | M9301 BOOTSTRAP TECHNICAL MANUAL |
| EK-DL11W-MM | DL11-W MAINTENANCE MANUAL |
| EK-DL11W-OP | DL11-W OPERATORS MANUAL |
| EK-KY11L-IP | KY11-L CONSOLE IPB |
| EK-KY11C-MM | KY11-C/CD MAINTENANCE MANUAL |
| EK-KT11C-OP | KT11-C/CD USERS MANUAL |
| EK-MS11A-MM | MS11-A/B/C MAINTENANCE MANUAL |
| EK-MS11A-OP | MS11-A/B/C USERS MANUAL |
| EK-11045-OP | PDP-11/45/50/55 USERS MANUAL |
| MP-00196-00 | M9301, PRINT |

(Continued on Next Page)

KIT NAME: 11/55, BA, BB, DOCUMENTS (Continued)

Contents

| | |
|-------------|-------------------|
| MP-00106-00 | DL11-W, PRINT |
| MP-OKT11-C0 | KT11-C, PRINT |
| MP-OLA36-00 | LA36, PRINT |
| MP-OMS11-C0 | MS11-C, PRINT |
| MP-00039-00 | 11/55 VOL 1 PRINT |
| MP-00040-00 | 11/55 VOL 2 PRINT |

Diagnostic

| | |
|----------|--------------------|
| ZJ137-RB | KW11-L, DIAGNOSTIC |
| ZR104-RB | KT11-C, DIAGNOSTIC |
| ZJ232-RB | M9301, DIAGNOSTIC |
| ZRF01-RB | 11/45, DIAGNOSTIC |

KIT NAME: 11/55, BC, BD, DOCUMENTS

Kit Number: FB-11/55-B2

Contents

| | |
|-------------|---------------------------------------|
| EK-861AB-MM | 861-A/B/C/D/E/F MAINTENANCE MANUAL |
| EK-861AB-OP | 861-A/B/C/D/E/F POWER CONTROLLER |
| EK-00861-IP | 861-A/B/C/D/E/F POWER IPB |
| EK-OLA36-IP | LA36 DECWRITER II IPB |
| EK-2LA36-MM | LA36 MAINTENANCE MANUAL |
| EK-1LA36-MM | LA36 MAINTENANCE MANUAL VOL I |
| EK-MS11A-MM | MS11-A/B/C MAINTENANCE MANUAL |
| EK-MS11A-OP | MS11-A/B/C USERS MANUAL |
| EK-KT11C-MM | KT11-C/CD MAINTENANCE MANUAL |
| EK-KT11C-OP | KT11-C/CD USERS MANUAL |
| EK-MF11U-MM | MF11-U/UP MAINTENANCE MANUAL |
| EK-11045-OP | PDP-11/45/50/55 USERS MANUAL |
| EK-M9301-TM | M9301 BOOTSTRAP TECHNICAL MANUAL |

(Continued on Next Page)

KIT NAME: 11/55, BC, BD, DOCUMENTS (Continued)

Contents

| | |
|-------------|-------------------|
| MP-0LA36-00 | LA36, PRINT |
| MP-00196-00 | M9301, PRINT |
| MP-00106-00 | DL11-W, PRINT |
| MP-KT11C-C0 | KT11-C, PRINT |
| MP-0MS11-C0 | MS11-C, PRINT |
| MP-00039-00 | 11/55 VOL 1 PRINT |
| MP-00040-00 | 11/55 VOL 2 PRINT |

Diagnostic

| | |
|----------|--------------------|
| ZR104-RB | KT11-C, DIAGNOSTIC |
| ZJ137-RB | KW11-L, DIAGNOSTIC |
| ZJ232-RB | M9301, DIAGNOSTIC |
| ZRF01-RB | 11/45, DIAGNOSTIC |

KIT NAME: 11L03, CA, CC, CD, DOCUMENTS

Kit Number: FB-11L03-C

Contents

| | |
|-------------|--------------------------------|
| EK-LSI11-TM | LSI-11, PDP-11/03 USERS MANUAL |
| EK-OLA36-IP | LA36 DECWRITER II IPB |
| EK-2LA36-MM | LA36 MAINTENANCE MANUAL |
| EK-1LA36-MM | LA36 MAINTENANCE MANUAL VOL I |
| MP-11003-00 | 11/03, PRINT |
| MP-OLA36-00 | LA36, PRINT |

Diagnostic

| | |
|----------|-----------------------|
| ZJF01-RB | LSI-11/03, DIAGNOSTIC |
| ZJ183-RB | LA36, DIAGNOSTIC |

KIT NAME: 11/70 ALL N & V VAR. DOCUMENTS

Kit Number: FB-11/70-NV

Contents

| | |
|-------------|--|
| EK-861AB-MM | 861-A/B/C/D/E/F MAINTENANCE MANUAL |
| EK-861AB-OP | 861-A/B/C/D/E/F POWER CONTROLLER |
| EK-00861-IP | 861-A/B/C/D/E/F POWER IPB |
| EK-KB11C-TM | KB11-C PROCESSOR MANUAL |
| EK-0LA36-IP | LA36 DECWRITER II IPB |
| EK-2LA36-MM | LA36 MAINTENANCE MANUAL |
| EK-1LA36-MM | LA36 MAINTENANCE MANUAL VOL I |
| EK-OMJ11-MM | MJ11 MEMORY SYSTEM MAINTENANCE MANUAL |
| EK-OMJ11-OP | MJ11 MEMORY SYSTEM USERS MANUAL |
| EK-ODL11-TM | DL11 ASYNCHRONOUS LINE INTERFACE MANUAL |
| EK-ODL11-OP | DL11 INTERFACE USERS MANUAL |
| EK-11070-IP | PDP-11/70 16 BIT COMPUTER IPB |
| EK-11070-MM | PDP-11/70 MAINTENANCE/ INSTAL MANUAL |
| EK-11070-OP | PDP-11/70 SYSTEM USERS MANUAL |
| EK-KW11L-TM | KW11-L LINE TIME CLOCK MANUAL |
| EK-M9301-TM | M9301 BOOTSTRAP TECHNICAL MANUAL |
| MP-00453-00 | 11/70, PRINT |
| MP-0LA36-00 | LA36, PRINT |
| MP-00861-00 | 861, PRINT |
| MP-0MJ11-00 | MJ11, PRINT |

Diagnostic

| | |
|----------|-----------------------|
| ZRF02-RB | PDP-11/70, DIAGNOSTIC |
|----------|-----------------------|

KIT NAME: 11L03, DA, DC, DD, DOCUMENTS

Kit Number: FB-11L03-D

Contents

| | |
|-------------|--------------------------------|
| EK-LSI11-TM | LSI-11, PDP-11/03 USERS MANUAL |
| EK-VT55E-TM | VT55-E/F/H/J USER'S MANUAL |
| MP-11003-00 | 11/03, PRINT |
| MP-00098-00 | VT55, PRINT |

Diagnostic

| | |
|----------|-----------------------|
| ZJF01-RB | LSI-11/03, DIAGNOSTIC |
|----------|-----------------------|

KIT NAME: 11L34, EF, HE, HF, JE, JF, DOCUMENTS

Kit Number: FB-11L34-1

Contents

| | |
|-------------|--------------------------------------|
| EK-KDIEA-MM | KD11-EA MAINTENANCE MANUAL |
| EK-M7850-MM | M7850 MAINTENANCE MANUAL |
| EK-MS11E-MM | MS11-E/J MOS MEMORY MAINT MANUAL |
| EK-MS11E-OP | MS11-E/J MOS MEMORY USERS MANUAL |
| EK-M9301-TM | M9301 BOOTSTRAP TECHNICAL MANUAL |
| EK-BA11K-MM | BA11-K MOUNTING BOX MANUAL |
| EK-BA11K-IP | BA11-K MOUNTING BOX IPB |
| EK-BA11K-OP | BA11-K MOUNTING BOX USER'S MANUAL |
| EK-34105-IP | PDP-11/34 (10-1/2") 16 BIT |
| EK-34525-IP | PDP-11/34 16 BIT COMPUTER IPB |
| EK-1134A-TM | PDP-11/34A POWER SYSTEM |
| EK-11034-UG | PDP-11/34 SYSTEM USERS |
| EK-OH765-IP | H765 POWER SUPPLY IPB |
| EK-OH745-IP | H745 REGULATOR IPB |
| EK-DL11W-MM | DL11-W MAINTENANCE MANUAL |

(Continued on Next Page)

**KIT NAME: 11L34, EF, HE, HF, JE, JF, DOCUMENTS
(Continued)**

Contents

| | |
|-------------|--|
| EK-DL11W-OP | DL11-W OPERATORS MANUAL |
| EK-ORX01-OP | RX8/RX11 FLOPPY DISK SYSTEM USERS MAN |
| EK-ORK01-MM | RX8/RX11 FLOPPY DISK SYSTEM USERS MAN |
| EK-0LA36-IP | LA36 DECWRITER II IPB |
| EK-2LA36-MM | LA36 MAINTENANCE MANUAL |
| EK-1LA36-MM | LA36 MAINTENANCE MANUAL VOL I |
| MP-00190-00 | 1134A, PRINT |
| MP-00082-00 | 11/34 VOL 2, PRINT |
| MP-ORX11-00 | RX11, PRINT |
| MP-0LA36-00 | LA36, PRINT |
| MP-0H960-C0 | H960-C, PRINT |

Diagnostic

| | |
|----------|-----------------------|
| ZRF04-RB | 11/34, DIAGNOSTIC |
| ZJ183-RB | LA36, DIAGNOSTIC |
| ZJF07-RB | RX01/RX11, DIAGNOSTIC |

KIT NAME: 11L34, FE, FF, DOCUMENTS

Kit Number: FB-11L34-2

Contents

| | |
|-------------|-------------------------------------|
| EK-KD1EA-MM | KD11-EA MAINTENANCE MANUAL |
| EK-M7850-MM | M7850 MAINTENANCE MANUAL |
| EK-M9301-TM | M9301 BOOTSTRAP TECHNICAL MANUAL |
| EK-BA11K-OP | BA11-K MOUNTING BOX USER'S MANUAL |
| EK-BA11K-IP | BA11-K MOUNTING BOX IPB |
| EK-BA11K-MM | BA11-K MOUNTING BOX MANUAL |
| EK-0H765-IP | H765 POWER SUPPLY IPB |
| EK-0H745-IP | H745 REGULATOR IPB |

(Continued on Next Page)

KIT NAME: 11L34, FE, FF, DOCUMENTS (Continued)

Contents

| | |
|--------------|--|
| EK-DL11W-MM | DL11-W MAINTENANCE MANUAL |
| EK-DL11W-OP | DL11W OPERATORS MANUAL |
| EK-34105-IP | PDP-11/34 (10-1/2") 16 BIT |
| EK-34525-IP | PDP-11/34 16 BIT COMPUTER IPB |
| EK-11034-UG | PDP-11/34 SYSTEM USERS |
| EK-1134A-TM | PDP-11/34A POWER SYSTEM |
| EK-MM11D-TM | MM11-D/DP CORE MEMORY MANUAL |
| EK-MM11D-OP | MM11-D/DP CORE MEMORY USERS MANUAL |
| EK-0H754-IP | H754 REGULATOR IPB |
| EK-KY11LB-MM | KY11-LP MAINTENANCE MANUAL |
| EK-ORX01-OP | RX8/RX11 FLOPPY DISK SYSTEM USERS MAN |
| EK-ORX01-MM | RX8-RX11 MAINTENANCE MANUAL |
| EK-0LA36-IP | LA36 DECWRITER II IPB |
| EK-2LA36-MM | LA36 MAINTENANCE MANUAL |
| EK-1LA36-MM | LA36 MAINTENANCE MANUAL VOL I |
| MP-00190-00 | 1134A, PRINT |
| MP-00082-00 | 11/34 VOL 2, PRINT |
| MP-ORX11-00 | RX11, PRINT |
| MP-0LA36-00 | LA36, PRINT |
| MP-0H960-C0 | H960-C, PRINT |

Diagnostic

| | |
|----------|-----------------------|
| ZRF04-RB | 11/34, DIAGNOSTIC |
| ZJ183-RB | LA36, DIAGNOSTIC |
| ZJF07-RB | RX01/RX11, DIAGNOSTIC |

KIT NAME: 11L34, KE, KF, ME, MF, DOCUMENTS

Kit Number: FB-11L34-3

Contents

| | |
|-------------|--------------------------------------|
| EK-KDIEA-MM | KD11-EA MAINTENANCE MANUAL |
| EK-M7850-MM | M7850 MAINTENANCE MANUAL |
| EK-MS11E-MM | MS11-E/J MOS MEMORY MAINT MANUAL |
| EK-MS11E-OP | MS11-E/J MOS MEMORY USERS MANUAL |
| EK-M9301-TM | M9301 BOOTSTRAP TECHNICAL MANUAL |
| EK-BA11K-MM | BA11-K MOUNTING BOX MANUAL |
| EK-BA11K-IP | BA11-K MOUNTING BOX IPB |
| EK-BA11K-OP | BA11-K MOUNTING BOX USER'S MANUAL |
| EK-34105-IP | PDP-11/34 (10-1/2") 16 BIT |
| EK-34525-IP | PDP-11/34 16 BIT COMPUTER IPB |
| EK-1134A-TM | PDP-11/34A POWER SYSTEM |
| EK-11034-UG | PDP-11/34 SYSTEM USERS |
| EK-OH765-IP | H765 POWER SUPPLY IPB |
| EK-OH745-IP | H745 REGULATOR IPB |
| EK-DL11W-MM | DL11-W MAINTENANCE MANUAL |
| EK-DL11W-OP | DL11-W OPERATORS MANUAL |
| EK-0LA36-IP | LA36 DECWRITER II IPB |
| EK-1LA36-MM | LA36 MAINTENANCE MANUAL VOL I |
| EK-2LA36-MM | LA36-MAINTENANCE MANUAL |
| EK-RK5JF-MM | RK05/RK05J/RK05F MAINTENANCE MAN |
| EK-RK05X-MM | RK05 EXERCISER MAINTENANCE MANUAL |
| MP-00190-00 | 1134A, PRINT |
| MP-00082-00 | 11/34 VOL 2, PRINT |
| MP-0LA36-00 | LA36, PRINT |

Diagnostic

| | |
|----------|----------------------|
| ZRF04-RB | 11/34, DIAGNOSTIC |
| ZJ183-RB | LA36, DIAGNOSTIC |
| ZJF06-RB | RK11/RK05 DIAGNOSTIC |

KIT NAME: 11L34, LE, LF, NE, NF, DOCUMENTS

Kit Number: FB-11L34-4

Contents

| | |
|-------------|--|
| EK-KD1EA-MM | KD11-EA MAINTENANCE MANUAL |
| EK-M7850-MM | M7850 MAINTENANCE MANUAL |
| EK-M9301-TM | M9301 BOOTSTRAP TECHNICAL MANUAL |
| EK-KY11L-IP | KY11-L CONSOLE IPB |
| EK-BA11K-IP | BA11-K MOUNTING BOX IPB |
| EK-BA11K-MM | BA11-K MOUNTING BOX MANUAL |
| EK-BA11K-OP | BA11-K MOUNTING BOX USERS'S MANUAL |
| EK-OH765-IP | H765 POWER SUPPLY IPB |
| EK-OH745-IP | H745 REGULATOR IPB |
| EK-DL11W-MM | DL11-W MAINTENANCE MANUAL |
| EK-DL11W-OP | DL11-W OPERATORS MANUAL |
| EK-MM11D-TM | MM11-D/DP CORE MEMORY MANUAL |
| EK-MM11D-OP | MM11-D/DP CORE MEMORY USER'S MANUAL |
| EK-OH754-IP | H754 REGULATOR IPB |
| EK-KY1LB-MM | KY11-LB MAINTENANCE MANUAL |
| EK-34105-IP | PDP-11/34 (10-1/2") 16 BIT |
| EK-34525-IP | PDP-11/34 16 BIT COMPUTER IPB |
| EK-11034-UG | PDP-11/34 SYSTEM USERS |
| EK-1134A-TM | PDP-11/34A POWER SYSTEM |
| EK-0LA36-IP | LA36 DECWRITER II IPB |
| EK-1LA36-MM | LA36 MAINTENANCE MANUAL VOL I |
| EK-2LA36-MM | LA36 MAINTENANCE MANUAL |

(Continued on Next Page)

**KIT NAME: 11L34, LE, LF, NE, NF, DOCUMENTS
(Continued)**

Contents

| | |
|-------------|--------------------------------------|
| EK-RK5JF-MM | RK-05/RK05J/RK05F MAINTENANCE MAN |
| EK-RK05X-MM | RK05 EXERCISER MAINTENANCE MANUAL |
| MP-00190-00 | 1134A, PRINT |
| MP-00082-00 | 11/34 VOL 2, PRINT |

Diagnostic

| | |
|----------|-----------------------|
| ZRF04-RB | 11/34 DIAGNOSTIC |
| ZJ183-RB | LA36, DIAGNOSTIC |
| ZJF06-RB | RK11/RK05, DIAGNOSTIC |

KIT NAME: 11L34, PE, PF, DOCUMENTS

Kit Number: FB-11L34-5

Contents

| | |
|-------------|-------------------------------------|
| EK-KD1EA-MM | KD11-EA MAINTENANCE MANUAL |
| EK-M7850-MM | M7850 MAINTENANCE MANUAL |
| EK-MS11E-MM | MS11-E/J MOS MEMORY MAINT MANUAL |
| EK-MS11E-OP | MS11-E/J MOS MEMORY USERS MANUAL |
| EK-M9301-TM | M9301 BOOTSTRAP TECHNICAL MANUAL |
| EK-BA11K-IP | BA11-K MOUNTING BOX IPB |
| EK-BA11K-MM | BA11-K MOUNTING BOX MANUAL |
| EK-BA11K-OP | BA11-K MOUNTING BOX USERS MANUAL |
| EK-34105-IP | PDP-11/34 (10-1/2") 16 BIT |
| EK-11034-UG | PDP-11/34 SYSTEM USERS |
| EK-34525-IP | PDP-11/34 16 BIT COMPUTER IPB |
| EK-1134A-TM | PDP-11/34A POWER SYSTEM |

(Continued on Next Page)

KIT NAME: 11L34, PE, PF, DOCUMENTS (Continued)

Contents

| | |
|-------------|--|
| EK-OH745-IP | H745 REGULATOR IPB |
| EK-OH765-IP | H765 POWER SUPPLY IPB |
| EK-DL11W-MM | DL11-W MAINTENANCE MANUAL |
| EK-DL11W-OP | DL11-W OPERATORS MANUAL |
| EK-OLA36-MM | LA36 DECWRITER II IPB |
| EK-1LA36-MM | LA36 MAINTENANCE MANUAL VOL I |
| EK-2LA36-MM | LA36 MAINTENANCE MANUAL |
| EK-RK5JF-MM | RK05/RK05J/RK05F MAINTENANCE MANUAL |
| EK-RK05X-MM | RK05 EXERCISER MAINTENANCE MANUAL |
| EK-OVT11-TM | VT11 GRAPHIS DISPLAY PROCESSOR |
| EK-OVT11-OP | VT11 USERS MANUAL |
| MP-00190-00 | 1134-A, PRINT |
| MP-00082-00 | 11/34 VOL 2, PRINT |
| MP-0LA36-00 | LA36, PRINT |
| MP-OVT11-00 | VT11, PRINT |

Diagnostic

| | |
|----------|-----------------------|
| ZRF04-RB | 11/34, DIAGNOSTIC |
| ZJ183-RB | LA36, DIAGNOSTIC |
| ZJF06-RB | RK11/RK05, DIAGNOSTIC |

KIT NAME: 11L34, RE, RF, DOCUMENTS

Kit Number: FB-11L34-6

Contents

| | |
|-------------|-------------------------------------|
| EK-KD1EA-MM | KD11-EA MAINTENANCE MANUAL |
| EK-M7850-MM | M7850 MAINTENANCE MANUAL |
| EK-M9301-TM | M9301 BOOTSTRAP TECHNICAL MANUAL |
| EK-KY11L-IP | KY11-L CONSOLE IPB |

(Continued on Next Page)

KIT NAME: 11L34, RE, RF, DOCUMENTS (Continued)

Contents

| | |
|-------------|--|
| EK-BA11K-IP | BA11-K MOUNTING BOX IPB |
| EK-BA11K-MM | BA11-K MOUNTING BOX USER'S MANUAL |
| EK-BA11K-OP | BA11-K MOUNTING BOX USER'S MANUAL |
| EK-OH765-IP | H765 POWER SUPPLY IPB |
| EK-OH745-IP | H745 REGULATOR IPB |
| EK-DL11W-MM | DL11-W MAINTENANCE MANUAL |
| EK-DL11W-OP | DL11-W OPERATORS MANUAL |
| EK-MM11D-TM | MM11-D/DP CORE MEMORY MANUAL |
| EK-MM11D-OP | MM11-D/DP CORE MEMORY USER'S MANUAL |
| EK-OH754-IP | H754 REGULATOR IPB |
| EK-KY1LB-MM | KY11-LB MAINTENANCE MANUAL |
| EK-34105-IP | PDP-11/34 (10-1/2") 16 BIT |
| EK-34525-IP | PDP-11/34 16 BIT COMPUTER IPB |
| EK-11034-UG | PDP-11/34 SYSTEM USERS |
| EK-1134A-TM | PDP-11/34A POWER SYSTEM |
| EK-OLA36-IP | LA36 DECWRITER II IPB |
| EK-1LA36-MM | LA36 MAINTENANCE MANUAL VOL I |
| EK-2LA36-MM | LA36 MAINTENANCE MANUAL |
| EK-RK5JF-MM | RK05/RK05J/RK05F MAINTENANCE MANUAL |
| EK-RK05X-MM | RK05 EXERCISER MAINTENANCE MANUAL |
| EK-OVT11-TM | VT11 GRAPHIC DISPLAY PROCESSOR |
| EK-OVT11-OP | VT11 USER'S MANUAL |
| MP-00190-00 | 1134A, PRINT |
| MP-00082-00 | 11/34 VOL 2, PRINT |
| MP-0LA36-00 | LA36, PRINT |
| MP-0VT11-00 | VT11, PRINT |

Diagnostic

| | |
|----------|-----------------------|
| ZRF04-RB | 11/34, DIAGNOSTIC |
| ZJ183-RB | LA36, DIAGNOSTIC |
| ZJF06-RB | RK11/RK05, DIAGNOSTIC |

KIT NAME: 11S55, BC, BD, DOCUMENTS

Kit Number: FB-11S55-B

Contents

| | |
|-------------|--|
| EK-11045-OP | PDP-11/45/50/55 USER'S MANUAL |
| EK-FP11C-OP | FP11C FLOATING POINT USER'S MANUAL |
| EK-RK611-IP | RK611 CONTROLLER IPB |
| EK-RK611-TM | RK611 TECHNICAL DESCRIPTION MANUAL |
| EK-RK611-IN | RK611/RK06 INSTALLATION MANUAL |
| EK-RK611-OP | RK611/RK06 USER'S MANUAL (CROSS PRODUCTS) |
| EK-RK611-SV | RK611/RK06 SERVICE MANUAL |
| EK-RK06-IP | RK06 DISK DRIVE IPB |
| EK-ORK06-TD | RK06 TECHNICAL DESCRIPTION |
| EK-OLA36-IP | LA36 DECWRITER II IPB |
| EK-2LA36-MM | LA36 MAINTENANCE MANUAL |
| EK-1LA36-MM | LA36 MAINTENANCE MANUAL VOL I |
| EK-MS11A-MM | MS11-A/B/C MAINTENANCE MANUAL |
| EK-MS11A-OP | MS11-A/B/C USER'S MANUAL |
| EK-MF11U-MM | MF11-U/UP MAINTENANCE MANUAL |
| EK-KT11C-MM | KT11-C/CD MAINTENANCE MANUAL |
| EK-KT11C-OP | KT11-C/CD USER'S MANUAL |
| EK-DL11W-MM | DL11-W MAINTENANCE MANUAL |
| EK-DL11W-OP | DL11-W-OP OPERATOR'S MANUAL |
| EK-M9301-TM | M9301 BOOTSTRAP TECHNICAL MANUAL |
| MP-00039-00 | 11/55 VOL 1 PRINT |
| MP-00040-00 | 11/55 VOL 2 PRINT |
| MP-0LA36-00 | LA36, PRINT |
| MP-00038-00 | FP11-C, PRINT |
| MP-00237-00 | RK06-E, PRINT |
| MP-00236-00 | RK611-E, PRINT |

Diagnostic

| | |
|----------|---------------------------|
| ZRF01-RB | PDP-/45/50/55, DIAGNOSTIC |
| ZJF13-RB | RK06, DIAGNOSTIC |
| ZJ183-RB | LA36, DIAGNOSTIC |

KIT NAME: 11S60, B, DOCUMENTS

Kit Number: FB-11S60-B

Contents

| | |
|-------------|-------------------------------------|
| EK-11060-OP | PDP-11/60 INSTALLATION/OPERATION |
| EK-MF11W-MM | MF11-W/WP MAINTENANCE MANUAL |
| EK-MF11W-OP | MF11-W/WP USER'S MANUAL |
| EK-M9301-TM | M9301 BOOTSTRAP TECHNICAL MANUAL |
| EK-DL11W-MM | DL11-W MAINTENANCE MANUAL |
| EK-DL11W-OP | DL11-W OPERATOR'S MANUAL |
| EK-0LA36-IP | LA36 DECWRITER II IPB |
| EK-2LA36-MM | LA36 MAINTENANCE MANUAL |
| EK-1LA36-MM | LA36 MAINTENANCE MANUAL VOL I |
| MP-00166-00 | 11/60 SYSTEM PRINT |
| MP-00409-00 | 11/60 BASIC, PRINT |
| MP-00410-00 | BA11-P, PRINT |
| MP-00034-00 | MF11-W/WP, PRINT |

Diagnostic

| | |
|----------|---------------------|
| ZJ232-RB | M9301, DIAGNOSTIC |
| ZJ183-RB | LA36, DIAGNOSTIC |
| ZJ147-RB | MM11, DIAGNOSTIC |
| ZJ235-RB | DL11W, DIAGNOSTIC |
| ZJ130-RB | DEC/X11, DIAGNOSTIC |

KIT NAME: 11S60, C, DOCUMENTS

Kit Number: FB-11S60-C

Contents

| | |
|-------------|--|
| EK-11060-OP | PDP-11/60 INSTALLATION/ OPERATION |
| EK-MF11K-TM | MF11S-K MOS MEMORY TECHNICAL MANUAL |
| EK-MF11K-UG | MF11S-K MOS MEMORY USER'S GUIDE |
| EK-M9301-TM | M9301 BOOTSTRAP TECHNICAL MANUAL |
| EK-DL11W-MM | DL11-W MAINTENANCE MANUAL |
| EK-DL11W-OP | DL11-W OPERATOR'S MANUAL |
| EK-0LA36-IP | LA36 DECWRITER II IPB |
| EK-2LA36-MM | LA36 MAINTENANCE MANUAL |
| EK-1LA36-MM | LA36 MAINTENANCE MANUAL VOL I |
| MP-00166-00 | 11/60 SYSTEM, PRINT |
| MP-00409-00 | 11/60 BASIC, PRINT |
| MP-00310-00 | MF11S-K, PRINT |
| MP-00410-00 | BA11-P, PRINT |

Diagnostic

| | |
|----------|---------------------|
| ZJ232-RB | M9301, DIAGNOSTIC |
| ZJ183-RB | LA36, DIAGNOSTIC |
| ZJ147-RB | MM11, DIAGNOSTIC |
| ZJ235-RB | DL11W, DIAGNOSTIC |
| ZJ130-RB | DEC/X11, DIAGNOSTIC |

KIT NAME: 11T05, DOCUMENTS

Kit Number: FB-11T05

Contents

| | |
|-------------|--|
| EK-KD11B-MM | KD11-B PROCESSOR MAINTENANCE MANUAL |
| EK-BA11K-IP | BA11-K MOUNTING BOX IPB |
| EK-BA11K-MM | BA11-K MOUNTING BOX MANUAL |
| EK-BA11K-OP | BA11-K MOUNTING BOX USER'S MANUAL |
| EK-KY11J-IP | KY11-J CONSOLE IPB |
| EK-861AB-MM | 861-A/B/C/D/E/F MAINTENANCE MANUAL |
| EK-861AB-OP | 861-A/B/C/D/E/F POWER CONTROLLER |
| EK-00861-IP | 861-A/B/C/D/E/F POWER IPB |
| EK-ORK05-OP | RK05 DISK DRIVE USER'S MANUAL |
| EK-RK05X-MM | RK05 EXERCISER MAINTENANCE MANUAL |
| EK-RK5JF-MM | RK05/RK05J/RK05F MAINTENANCE MANUAL |
| EK-RK11D-OP | RK11-D RK11-E USER'S MANUAL |
| EK-RK11D-MM | RK11-D/E MOVING HEAD DISK MANUAL |
| EK-1105S-TM | PDP-11/05-S 11/10-S SYSTEM |
| EK-1105S-IP | PDP-11/05S 16 BIT COMPUTER IPB |
| MP-11005-S0 | 11/05-S, PRINT |
| MP-00501-00 | RK05/PRINT |
| MP-RK11D-00 | RK11-D, PRINT |

Diagnostic

| | |
|----------|-----------------------|
| ZJF03-RB | PDP-11/05, DIAGNOSTIC |
| ZJF06-RB | RK11-RK05, DIAGNOSTIC |
| ZJ232-RB | M9301, DIAGNOSTIC |

KIT NAME: 11T35, A, DOCUMENTS

Kit Number: FB-11T35-A

Contents

| | |
|-------------|---|
| EK-861AB-MM | 861-A/B/C/D/E/F MAINTENANCE MANUAL |
| EK-861AB-OP | 861-A/B/C/D/E/F POWER CONTROLLER |
| EK-00861-IP | 861-A/B/C/D/E/F POWER IPB |
| EK-11035-TM | PDP-11/35 SYSTEM MANUAL |
| EK-11035-OP | PDP-11/35 SYSTEM USER'S GUIDE |
| EK-ORK05-OP | RK05 DISK DRIVE USER'S MANUAL |
| EK-RK05X-MM | RK05 EXERCISER MAINTENANCE MANUAL |
| EK-RK5JF-MM | RK05/RK05J/RK05F MAINTENANCE MANUAL |
| EK-RK11D-OP | RK11-D RK11-E USER'S MANUAL |
| EK-RK11D-MM | RK11-D/E MOVING HEAD DISK MANUAL |
| EK-KT11D-TM | KT11-D MEMORY MANAGEMENT OPTION MANUAL |
| EK-KT11D-OP | KT11-D OPTION USER'S MANUAL |
| MP-11035-F0 | 11/35F, PRINT |
| MP-0LA36-00 | LA36, PRINT |
| MP-00501-00 | RK05, PRINT |
| MP-ORK11-D0 | RK11-D, PRINT |
| MP-OKT11-D0 | KT11-D, PRINT |
| MP-00196-00 | M9301, PRINT |
| MP-OMF11-UP | MF11-UP, PRINT |

Diagnostic

| | |
|----------|--------------------------|
| ZJF05-RB | PDP-11/35/40, DIAGNOSTIC |
| ZJF06-RB | RK11/RK05, DIAGNOSTIC |
| ZJ137-RB | KW11, DIAGNOSTIC |
| ZJ232-RB | M9301, DIAGNOSTIC |
| ZP103-RB | KT11D, DIAGNOSTIC |

KIT NAME: 11T40, A, DOCUMENTS

Kit Number: FB-11T40-A

Contents

| | |
|-------------|--|
| EK-11040-IP | PDP-11/40 16 BIT COMPUTER IPB |
| EK-11040-TM | PDP-11/40/35 SYSTEM MANUAL |
| EK-KD11A-MM | KD11-A PROCESSOR MAINTENANCE MANUAL |
| EK-MF11U-MM | MF11-U/UP MAINTENANCE MANUAL |
| EK-KT11D-TM | KT11-D MEMORY MANAGEMENT OPTION MANUAL |
| EK-KT11D-OP | KT11-D OPTION USER'S MANUAL |
| EK-861AB-MM | 861-A/B/C/D/E/F MAINTENANCE MANUAL |
| EK-861AB-OP | 861-A/B/C/D/E/F POWER CONTROLLER |
| EK-00861-IP | 861-A/B/C/D/E/F POWER IPB |
| EK-0DL11-TM | DL11 ASYNCHRONOUS LINE INTER- FACE MANUAL |
| EK-0DL11-OP | DL11 INTERFACE USER'S MANUAL |
| EK-0LA36-IP | LA36 DECWRITER II IPB |
| EK-2LA36-MM | LA36 MAINTENANCE MANUAL |
| EK-1LA36-MM | LA36 MAINTENANCE MANUAL VOL I |
| EK-RK11D-OP | RK11-D RK11-E USER'S MANUAL |
| EK-RK11D-MM | RK11-D/E MOVING HEAD DISK MANUAL |
| EK-0RK05-OP | RK05 DISK DRIVE USER'S MANUAL |
| EK-RK05X-MM | RK05 EXERCISER MAINTENANCE MANUAL |
| EK-RK5JF-MM | RK05/RK05J/RK05F MAINTENANCE MANUAL |
| MP-00158-00 | 11/40, PRINT |
| MP-0KT11-D0 | KT11-D, PRINT |
| MP-0DD11-D0 | DD11-D, PRINT |
| MP-0LA36-00 | LA36, PRINT |
| MP-0RK11-D0 | RK11-D, PRINT |
| MP-00501-00 | RK05, PRINT |
| MP-BM873-YA | BM873-YA, PRINT |

(Continued on Next Page)

KIT NAME: 11T40, A, DOCUMENTS (Continued)

Diagnostic

| | |
|----------|--------------------------|
| ZJF05-RB | PDP-11/35/40, DIAGNOSTIC |
| ZR106-RZ | MF11P, DIAGNOSTIC |
| ZJ129-RZ | DEC/X11, DIAGNOSTIC |
| ZJ183-RB | LA36, DIAGNOSTIC |
| ZJF06-RB | RK11/RK05, DIAGNOSTIC |

KIT NAME: 11T55, BC, BD, DOCUMENTS

Kit Number: FB-11T55-B

Contents

| | |
|-------------|--|
| EK-11045-OP | PDP-11/45/50/55 USER'S MANUAL |
| EK-861AB-MM | 861-A/B/C/D/E/F MAINTENANCE MANUAL |
| EK-861AB-OP | 861-A/B/C/D/E/F POWER CONTROLLER |
| EK-00861-IP | 861-A/B/C/D/E/F POWER IPB |
| EK-MS11A-MM | MS11-A/B/C MAINTENANCE MANUAL |
| EK-MS11A-OP | MS11-A/B/C/ USER'S MANUAL |
| EK-KT11C-MM | KT11-C/CD MAINTENANCE MANUAL |
| EK-KT11C-OP | KT11-C/CD USER'S MANUAL |
| EK-ORK05-OP | RK05 DISK DRIVE USER'S MANUAL |
| EK-RK05X-MM | RK05 EXERCISER MAINTENANCE MANUAL |
| EK-RK5JF-MM | RK05/RK05J/RK05F MAINTENANCE MANUAL |
| EK-RK11D-OP | RK11-D RK11-E USER'S MANUAL |
| EK-RK11D-MM | RK11-D/E MOVING HEAD DISK MANUAL |
| EK-OLA36-IP | LA36 DECWRITER II IPB |
| EK-1LA36-MM | LA36 MAINTENANCE MANUAL VOL I |
| EK-2LA36-MM | LA36 MAINTENANCE MANUAL |
| EK-MF11U-MM | MF11-U/UP MAINTENANCE MANUAL |
| EK-DL11W-MM | DL11-W MAINTENANCE MANUAL |
| EK-DL11W-OP | DL11-W OPERATOR'S MANUAL |

(Continued on Next Page)

KIT NAME: 11T55, BC, BD, DOCUMENTS (Continued)

Contents

| | |
|-------------|-------------------------------------|
| EK-M9301-TM | M9301 BOOTSTRAP TECHNICAL MANUAL |
| MP-00039-00 | 11/55 VOL 1 PRINT |
| MP-00040-00 | 11/55 VOL 2 PRINT |
| MP-OMS11-C0 | MS11-C, PRINT |
| MP-OLA36-00 | LA36, PRINT |
| MP-OKT11-C0 | KT11-C, PRINT |
| MP-00106-00 | DL11-W, PRINT |
| MP-ORK11-D0 | RK11-D, PRINT |
| MP-ORK05-J0 | RK05-J, PRINT |
| MP-00038-00 | FP11C, PRINT |

Diagnostic

| | |
|----------|-----------------------------|
| ZRF01-RB | PDP-11/45/50/55, DIAGNOSTIC |
| ZJF06-RB | RK11/RK05, DIAGNOSTIC |
| ZJ232-RB | M9301, DIAGNOSTIC |
| ZR104-RB | KT11C, DIAGNOSTIC |
| ZJ137-RB | KW11, DIAGNOSTIC |

KIT NAME: 11W40, DOCUMENTS

Kit Number: FB-11W40

Contents

| | |
|-------------|--|
| EK-OLA36-IP | LA36 DECWRITER II IPB |
| EK-1LA36-MM | LA36 MAINTENANCE MANUAL VOL I |
| EK-2LA36-MM | LA36 MAINTENANCE MANUAL |
| EK-MF11U-MM | MF11-U/UP MAINTENANCE MANUAL |
| EK-KD11A-MM | KD11-A PROCESSOR MAINTENANCE MANUAL |
| EK-BA11F-IP | BA11-F MOUNTING BOX IPB |
| EK-11040-IP | PDP-11/40 16 BIT COMPUTER IPB |

(Continued on Next Page)

KIT NAME: 11W40, DOCUMENTS (Continued)

Contents

| | |
|-------------|--|
| EK-11040-TM | PDP-11/40/35 SYSTEM MANUAL |
| EK-ODL11-TM | DL11 ASYNCHRONOUS LINE INTERFACE MANUAL |
| EL-ODL11-OP | DL11 INTERFACE USER'S MANUAL |
| MP-OLA36-00 | LA36, PRINT |
| MP00158-00 | 11/40, PRINT |

Diagnostic

| | |
|----------|--------------------------|
| ZJ183-RB | LA36, DIAGNOSTIC |
| ZJF05-RB | PDP-11/35/40, DIAGNOSTIC |

KIT NAME: 11W45, DOCUMENTS

Kit Number: FB-11W45

Contents

| | |
|-------------|--|
| EK-861AB-MM | 861-A/B/C/D/E/F MAINTENANCE MANUAL |
| EK-861AB-OP | 861-A/B/C/D/E/F POWER CONTROLLER |
| EK-00861-IP | 861-A/B/C/D/E/F POWER IPB |
| EK-KB11B-TM | KB11-B PROCESSOR MANUAL (11/70) |
| EK-MF11U-MM | MF11-U/UP MAINTENANCE MANUAL |
| EK-11MOS-TM | PDP-11/45 11/50 TROUBLESHOOTING GUIDE |
| EK-11045-IP | PDP-11/45 16 BIT IPB |
| EK-11001-HR | PDP-11/45 MAINTENANCE |
| EK-ODL11-TM | DL11 ASYNCHRONOUS LINE INTERFACE MANUAL |
| EK-ODL11-OP | DL11 INTERFACE USER'S MANUAL |
| MP-00861-00 | 861, PRINT |
| MP-00039-00 | 11/45, PRINT |

Diagnostic

| | |
|----------|----------------------------|
| ZRF01-RB | PDP-11/45/50/55 DIAGNOSTIC |
|----------|----------------------------|

KIT NAME: 11X60, B, DOCUMENTS

Kit Number: FB-11X60-B

Contents

| | |
|-------------|--------------------------------------|
| EK-11060-OP | PDP-11/60 INSTALLATION/ OPERATION |
| EK-MF11W-MM | MF11-W/WP MAINTENANCE MANUAL |
| EK-MF11W-OP | MF11-W/WP USER'S MANUAL |
| EK-M9301-TM | M9301 BOOTSTRAP TECHNICAL MANUAL |
| EK-DL11W-MM | DL11-W MAINTENANCE MANUAL |
| EK-DL11W-OP | DL11-W OPERATOR'S MANUAL |
| EK-OLA36-IP | LA36 DECWRITER II IPB |
| EK-2LA36-MM | LA36 MAINTENANCE MANUAL |
| EK-1LA36-MM | LA36 MAINTENANCE MANUAL VOL I |
| MP-00166-00 | 11/60 SYSTEM, PRINT |
| MP-00034-00 | MF11-W/WP, PRINT |
| MP-00409-00 | 11/60 BASIC, PRINT |
| MP-00410-00 | BA11-P, PRINT |

Diagnostic

| | |
|----------|---------------------|
| ZJ147-RB | MM11, DIAGNOSTIC |
| ZJ232-RB | M9301, DIAGNOSTIC |
| ZJ235-RB | DL11W, DIAGNOSTIC |
| ZJ129-RZ | DEC/X11, DIAGNOSTIC |

KIT NAME: 11X60, C, DOCUMENTS

Kit Number: FB-11X60-C

Contents

| | |
|-------------|--|
| EK-11060-OP | PDP-11/60 INSTALLATION/ OPERATION |
| EK-MF11K-TM | MF11S-K MOS MEMORY TECHNICAL MANUAL |
| EK-MF11K-UG | MF11S-K MOS MEMORY USER'S GUIDE |
| EK-M9301-TM | M9301 BOOTSTRAP TECHNICAL MANUAL |
| EK-DL11W-MM | DL11W MAINTENANCE MANUAL |
| EK-DL11W-OP | DL11-W OPERATOR'S MANUAL |
| EK-OLA36-IP | LA36 DECWRITER II IPB |
| EK-2LA36-MM | LA36 MAINTENANCE MANUAL |
| EK-1LA36-MM | LA36 MAINTENANCE MANUAL VOL I |
| MP-00166-00 | 11/60 SYSTEM, PRINT |
| MP-00409-00 | 11/60 BASIC, PRINT |
| MP-00310-00 | MF11S-K, PRINT |
| MP-00410-00 | BA11-P, PRINT |

Diagnostic

| | |
|----------|---------------------|
| ZJ147-RB | MM11, DIAGNOSTIC |
| ZJ232-RB | M9301, DIAGNOSTIC |
| ZJ235-RB | DL11W, DIAGNOSTIC |
| ZJ129-RZ | DEC/X11, DIAGNOSTIC |

KIT NAME: 11Y60, BA, BB, DOCUMENTS

Kit Number: FB-11Y60-B

Contents

| | |
|-------------|-------------------------------------|
| EK-DL11W-OP | DL11-W OPERATORS MANUAL |
| EK-DL11W-MM | DL11-W MAINTENANCE MANUAL |
| EK-CABNT-UG | H9500 SYSTEM USER'S MANUAL |
| EK-BA11P-IP | BA11P UNIT ASSEMBLY IPB |
| EK-866DE-IP | 866D/E POWER CONTROLLER IPB |
| EK-KD11K-TM | KD11-K DESCRIPTION MANUAL |
| EK-MF11W-OP | MF11-W/WP USERS MANUAL |
| EK-MF11W-MM | MF11-W/WP MAINTENANCE MANUAL |
| EK-M9301-TM | M9301 BOOTSTRAP TECHNICAL MANUAL |
| MP-00058-00 | H9500, PRINT |
| MP-00410-00 | BA11-P, PRINT |
| MP-00156-00 | KD11-K, PRINT |
| MP-00034-00 | MF11-W, PRINT |
| MP-00196-00 | M9301, PRINT |
| MP-00106-00 | DL11-W, PRINT |

Diagnostic

| | |
|----------|--------------------|
| ZJ232-RB | M9301, DIAGNOSTIC |
| ZJ235-RB | DL11-W, DIAGNOSTIC |

KIT NAME: 11Y60, CA, DOCUMENTS

Kit Number: FB-11Y60-CA

Contents

| | |
|-------------|-----------------------------|
| EK-CABNT-UG | H9500 SYSTEM USERS MANUAL |
| EK-BA11P-IP | BA11P UNIT ASSEMBLY IPB |
| EK-866DE-IP | 866D/E POWER CONTROLLER IPB |
| EK-KD11K-TM | KD11-K DESCRIPTION MANUAL |
| EK-DL11W-MM | DL11-W MAINTENANCE MANUAL |
| EK-DL11W-OP | DL11-W OPERATORS MANUAL |

(Continued on Next Page)

KIT NAME: 11Y60, CA, DOCUMENTS (Continued)

Contents

| | |
|-------------|-------------------------------------|
| EK-M9301-TM | M9301 BOOTSTRAP TECHNICAL MANUAL |
| EK-MF11K-TM | MF11S-K MOS MEMORY TECHNICAL MANUAL |
| EK-MF11K-UG | MF11S-K, MOS MEMORY USERS GUIDE |
| MP-00058-00 | H9500, PRINT |
| MP-00410-00 | BA11-P, PRINT |
| MP-00156-00 | KD11-K, PRINT |
| MP-00310-00 | MF11S-K, PRINT |
| MP-00196-00 | M9301, PRINT |
| MP-00106-00 | DL11-W, PRINT |

Diagnostic

| | |
|----------|--------------------|
| ZJ232-RB | M9301, DIAGNOSTIC |
| ZJ235-RB | DL11-W, DIAGNOSTIC |

KIT NAME: 11Y60, CB, DOCUMENTS

Kit Number: FB-11Y60-CB

Contents

| | |
|-------------|-------------------------------------|
| EK-CABNT-UG | H9500 SYSTEMS USER'S MANUAL |
| EK-BA11P-IP | BA11P UNIT ASSEMBLY IPB |
| EK-KD11K-TM | KD11-K DESCRIPTION MANUAL |
| EK-DL11W-MM | DL11-W MAINTENANCE MANUAL |
| EK-DL11W-OP | DL11-W OPERATORS MANUAL |
| EK-M9301-TM | M9301 BOOTSTRAP TECHNICAL MANUAL |
| EK-MF11K-TM | MF11S-K MOS MEMORY TECHNICAL MANUAL |
| EK-MF11K-UG | MF11S-K, MOS MEMORY USER'S GUIDE |
| MP-00058-00 | H9500, PRINT |

(Continued on Next Page)

KIT NAME: 11Y60, CB, DOCUMENTS (Continued)

Contents

| | |
|-------------|----------------|
| MP-00410-00 | BA11P, PRINT |
| MP-00156-00 | KD11-K, PRINT |
| MP-00310-00 | MF11S-K, PRINT |
| MP-00106-00 | DL11-W, PRINT |
| MP-00196-00 | M9301, PRINT |

Diagnostic

| | |
|----------|--------------------|
| ZJ232-RB | M9301, DIAGNOSTIC |
| ZJ235-RB | DL11-W, DIAGNOSTIC |

KIT NAME: 861, A, B, C, D, E, DOCUMENTS

Kit Number: FB-861

Contents

| | |
|-------------|--|
| EK-861AB-MM | 861, A/B/C/D/E/F MAINTENANCE MANUAL |
| EK-861AB-OP | 861, A/B/C/D/E/F POWER CONTROLLER |
| EK-00861-IP | 861, A/B/C/D/E/F POWER IPB |
| MP-00861-00 | 861, PRINT |

KIT NAME: 8A100, A, DOCUMENTS

Kit Number: FB-8A100-A

Contents

| | |
|-------------|----------------------------|
| EK-H9300-IP | H9300 CHASSIS ASSEMBLY IPB |
| EK-0MS8C-TM | MS8-C MAINTENANCE MANUAL |
| EK-8A001-OP | PDP-8A OPERATORS HANDBOOK |
| EK-8A002-MM | PDP-8A MINIPROCESSOR USERS |
| MP-00177-00 | PDP-8A, PRINT |

Diagnostic

| | |
|----------|-----------------------|
| ZF006-RB | PDP-8A 4K, DIAGNOSTIC |
|----------|-----------------------|

KIT NAME: 8A100, F, DOCUMENTS

Kit Number: FB-8A100-F

Contents

| | |
|-------------|-----------------------------|
| EK-H9300-IP | H9300 CHASSIS ASSEMBLY IPB |
| EK-8A001-OP | PDP-8A OPERATORS HANDBOOK |
| EK-8A002-MM | PDP-8A MINIPROCESSOR USERS |
| 89H290 | MR8-F 1K MAINTENANCE MANUAL |
| MP-00177-00 | PDP-8A, PRINT |

Diagnostic

| | |
|----------|-----------------------|
| ZF006-RB | PDP-8A 4K, DIAGNOSTIC |
| ZF197-RB | MR8-F, DIAGNOSTIC |

KIT NAME: 8A205, DOCUMENTS

Kit Number: FB-8A205

Contents

| | |
|-------------|----------------------------|
| EK-H9300-IP | H9300 CHASSIS ASSEMBLY IPB |
| EK-OMS8C-TM | MS8-C MAINTENANCE MANUAL |
| EK-8A001-OP | PDP-8A OPERATORS HANDBOOK |
| EK-8A002-MM | PDP-8A MINIPROCESSOR USERS |
| MP-00177-00 | PDP-8A, PRINT |

Diagnostic

| | |
|----------|-----------------------|
| ZF006-RB | PDP-8A 4K, DIAGNOSTIC |
| ZF209-RB | KM8-A, DIAGNOSTIC |

KIT NAME: 8A400, B, DOCUMENTS

Kit Number: FB-8A400-B

Contents

| | |
|-------------|----------------------------|
| EK-8A001-OP | PDP-8A OPERATORS HANDBOOK |
| EK-8A002-MM | PDP-8A MINIPROCESSOR USERS |
| MP-00177-00 | PDP-8A, PRINT |

Diagnostic

| | |
|----------|-----------------------|
| ZF006-RB | PDP-8A 4K, DIAGNOSTIC |
| ZF209-RB | KM8-A, DIAGNOSTIC |

KIT NAME: 8A400, CM, CN, CP, CR, CS, CT, DOCUMENTS

Kit Number: FB-8A400-C1

Contents

| | |
|-------------|----------------------------|
| EK-8A001-OP | PDP-8A OPERATORS HANDBOOK |
| EK-8A002-MM | PDP-8A MINIPROCESSOR USERS |
| MP-00177-00 | PDP-8A, PRINT |

Diagnostic

| | |
|----------|-----------------------|
| ZF006-RB | PDP-8A 4K, DIAGNOSTIC |
| ZF207-RB | DKC8-A, DIAGNOSTIC |
| ZF209-RB | KM8-A, DIAGNOSTIC |

KIT NAME: 8A400, CU, CV, DOCUMENTS

Kit Number: FB-8A400-C2

Contents

| | |
|-------------|----------------------------|
| EK-8A001-OP | PDP-8A OPERATORS HANDBOOK |
| EK-8A002-MM | PDP-8A MINIPROCESSOR USERS |
| MP-00177-00 | PDP-8A, PRINT |

Diagnostic

| | |
|----------|-----------------------|
| ZF006-RB | PDP-8A 4K, DIAGNOSTIC |
| ZF207-RB | DKC8-A, DIAGNOSTIC |

KIT NAME: 8A400, DM, DN, DP, DR, DOCUMENTS

Kit Number: FB-8A400-D1

Contents

| | |
|-------------|----------------------------|
| EK-8A001-OP | PDP-8A OPERATORS HANDBOOK |
| EK-8A002-MM | PDP-8A MINIPROCESSOR USERS |
| EK-0KC8A-IP | KC8-A CONSOLE IPB |
| MP-00177-00 | PDP-8A, PRINT |

Diagnostic

| | |
|----------|-----------------------|
| ZF006-RB | PDP-8A 4K, DIAGNOSTIC |
| ZF207-RB | DKC8-A, DIAGNOSTIC |
| ZF209-RB | KM8-A, DIAGNOSTIC |

KIT NAME: 8A400, DS, DT, EM, EN, DOCUMENTS

Kit Number: FB-8A400-DE

Contents

| | |
|-------------|----------------------------|
| EK-8A001-OP | PDP-8A OPERATORS HANDBOOK |
| EK-8A002-MM | PDP-8A MINIPROCESSOR USERS |
| EK-0KC8A-IP | KC8-A CONSOLE IPB |
| MP-00177-00 | PDP-8A, PRINT |

Diagnostic

| | |
|----------|--------------------|
| ZF006-RB | PDP-8A, DIAGNOSTIC |
| ZF207-RB | DKC8-A, DIAGNOSTIC |

KIT NAME: 8A400, DU, DV, DOCUMENTS

Kit Name: FB-8A400-D2

Contents

| | |
|-------------|----------------------------|
| EK-8A001-OP | PDP-8A OPERATORS HANDBOOK |
| EK-8A002-MM | PDP-8A MINIPROCESSOR USERS |
| EK-OKC8A-IP | KC8-A CONSOLE IPB |
| MP-00177-00 | PDP-8A, PRINT |

Diagnostic

| | |
|----------|--------------------|
| ZF006-RB | PDP-8A, DIAGNOSTIC |
|----------|--------------------|

KIT NAME: 8A400, EP, ER, ES, ET, EU, EV, DOCUMENTS

Kit Number: FB-8A400-E

Contents

| | |
|-------------|----------------------------|
| EK-8A001-OP | PDP-8A OPERATORS HANDBOOK |
| EK-8A002-MM | PDP-8A MINIPROCESSOR USERS |
| MP-00177-00 | PDP-8A, PRINT |

Diagnostic

| | |
|----------|-----------------------|
| ZF006-RB | PDP-8A 4K, DIAGNOSTIC |
| ZF146-RB | KM8-E, DIAGNOSTIC |

KIT NAME: 8A420, B, DOCUMENTS

Kit Number: FB-8A420-B

Contents

| | |
|-------------|----------------------------|
| EK-OBA8C-IP | BA8-C CHASSIS ASSEMBLY IPB |
| EK-8A001-OP | 8A, OPERATORS HANDBOOK |
| MP-00177-00 | 8A, PRINT |
| EK-8A002-MM | PDP-8A MINIPROCESSOR USERS |

Diagnostic

| | |
|----------|------------------------|
| ZF006-RB | PDP-8/A 4K, DIAGNOSTIC |
| ZF209-RB | KM8-A, DIAGNOSTIC |

KIT NAME: 8A420, C, DOCUMENTS

Kit Number: FB-8A420-C

Contents

| | |
|-------------|-----------------------------|
| EK-OBA8C-IP | BA8-C CHASSIS ASSEMBLY IPB |
| EK-8A001-OP | PDP-8A OPERATORS HANDBOOK |
| EK-8A002-MM | PDP-8A MINIPROCESSORS USERS |
| MP-00177-00 | PDP-8A, PRINT |

Diagnostic

| | |
|----------|-----------------------|
| ZF209-RB | KM8-A, DIAGNOSTIC |
| ZF208-RB | DKC8-AA, DIAGNOSTIC |
| ZF006-RB | PDP-8A 4K, DIAGNOSTIC |

KIT NAME: 8A420, D, DOCUMENTS

Kit Number: FB-8A420-D

Contents

| | |
|-------------|-----------------------------|
| EK-OKC8A-IP | KC8-A CONSOLE IPB |
| EK-8A001-OP | PDP-8A OPERATORS HANDBOOK |
| EK-OBA8C-IP | BA8-C CHASSIS ASSEMBLY IPB |
| EK-8A002-MM | PDP-8A MINIPROCESSORS USERS |
| MP-00177-00 | PDP-8A 4K, PRINT |

Diagnostic

| | |
|----------|-----------------------|
| ZF006-RB | PDP-8A 4K, DIAGNOSTIC |
| ZF209-RB | KM8-A, DIAGNOSTIC |
| ZF208-RB | DKC8-AA, DIAGNOSTIC |

KIT NAME: 8A425, DOCUMENTS

Kit Number: FB-8A425

Contents

| | |
|-------------|----------------------------|
| EK-OBA8C-IP | BA8-C CHASSIS ASSEMBLY IPB |
| EK-OMS8C-TM | MS8-C MAINTENANCE MANUAL |
| EK-8A001-OP | PDP-8A OPERATORS HANDBOOK |
| EK-8A002-MM | PDP-8A MINIPROCESSOR USERS |
| MP-00177-00 | PDP-8A, PRINT |

Diagnostic

| | |
|----------|-----------------------|
| ZF006-RB | PDP-8A 4K, DIAGNOSTIC |
| ZF209-RB | KM8-A, DIAGNOSTIC |

KIT NAME: 8A600, B, DOCUMENTS

Kit Number: FB-8A600-B

Contents

| | |
|-------------|----------------------------|
| EK-H9300-IP | H9300 CHASSIS ASSEMBLY IPB |
| EK-8A001-OP | PDP-8A OPERATORS HANDBOOK |
| EK-8A002-MM | PDP-8A MINIPROCESSOR USERS |
| MP-00177-00 | PDP-8A 4K, PRINT |

Diagnostic

| | |
|----------|----------------------|
| ZF006-RB | PDP-8A 4K DIAGNOSTIC |
| ZF209-RB | KM8-A, DIAGNOSTIC |
| ZF002-RB | 8E, DIAGNOSTIC |

KIT NAME: 8A600, C, DOCUMENTS

Kit Number: FB-8A600-C

Contents

| | |
|-------------|----------------------------|
| EK-H9300-IP | H9300 CHASSIS ASSEMBLY IPB |
| EK-8A001-OP | PDP-8A OPERATORS HANDBOOK |
| EK-8A002-MM | PDP-8A MINIPROCESSOR USERS |
| MP-00177-00 | PDP-8A 4K, PRINT |

Diagnostic

| | |
|----------|-----------------------|
| ZF006-RB | PDP-8A 4K, DIAGNOSTIC |
| ZF209-RB | KM8-A, DIAGNOSTIC |
| ZF208-RB | DKC8-A, DIAGNOSTIC |
| ZF002-RB | 8E, DIAGNOSTIC |

KIT NAME: 8A600, D, DOCUMENTS

Kit Number: FB-8A600-D

Contents

| | |
|-------------|----------------------------|
| EK-H9300-IP | H9300 CHASSIS ASSEMBLY IPB |
| EK-OKC8A-IP | KC8-A CONSOLE IPB |
| EK-8A001-OP | PDP-8A OPERATORS HANDBOOK |
| EK-8A002-MM | PDP-8A MINIPROCESSOR USERS |
| MP-00177-00 | PDP-8A 4K, PRINT |

Diagnostic

| | |
|----------|-----------------------|
| ZF006-RB | PDP-8A 4K, DIAGNOSTIC |
| ZF209-RB | KM8-A, DIAGNOSTIC |
| ZF208-RB | DKC8-A, DIAGNOSTIC |
| ZF002-RB | 8E, DIAGNOSTIC |

KIT NAME: 8A620, B, DOCUMENTS

Kit Number: FB-8A620-B

Contents

| | |
|-------------|----------------------------|
| EK-8A001-OP | PDP-8A OPERATORS HANDBOOK |
| EK-8A002-MM | PDP-8A MINIPROCESSOR USERS |
| EK-OBA8C-IP | BA8-C CHASSIS ASSEMBLY IPB |
| MP-00177-00 | PDP-8A, PRINT |

Diagnostic

| | |
|----------|-------------------|
| ZF002-RB | 8E, DIAGNOSTIC |
| ZF209-RB | KM8-A, DIAGNOSTIC |

KIT NAME: 8A620, C, DOCUMENTS

Kit Number: FB-8A620-C

Contents

| | |
|-------------|----------------------------|
| EK-8A001-OP | PDP-8A OPERATORS HANDBOOK |
| EK-8A002-MM | PDP-8A MINIPROCESSOR USERS |
| EK-OBA8C-IP | BA8-C CHASSIS ASSEMBLY IPB |
| MP-00177-00 | PDP-8A, PRINT |

Diagnostic

| | |
|----------|--------------------|
| ZF002-RB | PDP-8E, DIAGNOSTIC |
| ZF209-RB | KM8-A, DIAGNOSTIC |
| ZF208-RB | DKC8, DIAGNOSTIC |

KIT NAME: 8A620, D, DOCUMENTS

Kit Number: FB-8A620-D

Contents

| | |
|-------------|----------------------------|
| EK-OKC8A-IP | KC8-A CONSOLE IPB |
| EK-8A002-MM | PDP-8A MINIPROCESSOR USERS |
| EK-8A001-OP | PDP-8A OPERATORS HANDBOOK |
| EK-OBA8C-IP | BA8-C CHASSIS ASSEMBLY IPB |
| MP-00177-00 | PDP-8A, PRINT |

Diagnostic

| | |
|----------|--------------------|
| ZF002-RB | PDP-8E, DIAGNOSTIC |
| ZF209-RB | KM8-A, DIAGNOSTIC |
| ZF208-RB | DKC8, DIAGNOSTIC |

KIT NAME: 8A620, E, DOCUMENTS

Kit Number: FB-8A620-E

Contents

| | |
|-------------|----------------------------|
| EK-OBA8C-IP | BA8-C CHASSIS ASSEMBLY IPB |
| EK-8A001-OP | PDP-8A OPERATORS HANDBOOK |
| EK-8A002-MM | PDP-8A MINIPROCESSOR USERS |
| MP-00177-00 | PDP-8A, PRINT |

Diagnostic

| | |
|----------|--------------------|
| ZF002-RB | PDP-8E, DIAGNOSTIC |
| ZF146-RB | KM8-E, DIAGNOSTIC |

KIT NAME: 8A625, DOCUMENTS

Kit Number: FB-8A625

Contents

| | |
|-------------|----------------------------|
| EK-8A001-OP | PDP-8A OPERATORS HANDBOOK |
| EK-8A002-MM | PDP-8A MINIPROCESSOR USERS |
| EK-OMS8C-TM | MS8-C MAINTENANCE MANUAL |
| EK-OBA8C-IP | BA8-C CHASSIS ASSEMBLY IPB |
| MP-00177-00 | PDP-8A, PRINT |

Diagnostic

| | |
|----------|-----------------------|
| ZF006-RB | PDP-8A 4K, DIAGNOSTIC |
| ZF209-RB | KM8-A, DIAGNOSTIC |

KIT NAME: 8A800-P, DOCUMENTS

Kit Number: FB-8A800-P

Contents

| | |
|-------------|----------------------------|
| EK-FPP8A-MM | FPP8A MAINTENANCE MANUAL |
| EK-FPP8A-OP | FPP8A USERS MANUAL |
| EK-H9300-IP | H9300 CHASSIS ASSEMBLY IPB |
| EK-8A001-OP | PDP-8A OPERATORS HANDBOOK |
| EK-8A002-MM | PDP-8A MINIPROCESSOR USERS |
| MP-00177-00 | PDP-8A, PRINT |

Diagnostic

| | |
|----------|-----------------------|
| ZF006-RB | PDP-8A 4K, DIAGNOSTIC |
| ZF209-RB | KM8-A, DIAGNOSTIC |
| ZF226-RB | FPP-8A, DIAGNOSTIC |

KIT NAME: 8A800, R, DOCUMENTS

Kit Number: FB-8A800-R

Contents

| | |
|-------------|----------------------------|
| EK-FPP8A-MM | FPP8-A MAINTENANCE MANUAL |
| EK-FPP8A-OP | FPP8-A USERS MANUAL |
| EK-H9300-IP | H9300 CHASSIS ASSEMBLY IPB |
| EK-8A001-OP | PDP-8A OPERATORS HANDBOOK |
| EK-8A002-MM | PDP-8A MINIPROCESSOR USERS |
| MP-00177-00 | PDP-8A, PRINT |

Diagnostic

| | |
|----------|-----------------------|
| ZF006-RB | PDP-8A 4K, DIAGNOSTIC |
| ZF209-RB | KM8-A, DIAGNOSTIC |
| ZF226-RB | FPP-8A, DIAGNOSTIC |
| ZF208-RB | DKC8-AA, DIAGNOSTIC |

KIT NAME: 8A820, P, DOCUMENTS

Kit Number: FB-8A820-P

Contents

| | |
|-------------|----------------------------|
| EK-FPP8A-MM | FPP8-A MAINTENANCE MANUAL |
| EK-FPP8A-OP | FPP8-A USERS MANUAL |
| EK-OBA8C-IP | BA8-C CHASSIS ASSEMBLY IPB |
| EK-8A001-OP | PDP-8A OPERATORS HANDBOOK |
| EK-8A002-MM | PDP-8A MINIPROCESSOR USERS |
| MP-00177-00 | PDP-8A, PRINT |

Diagnostic

| | |
|----------|------------------------|
| ZF226-RB | FPP-8A, DIAGNOSTIC |
| ZF209-RB | KM8-A, DIAGNOSTIC |
| ZF006-RB | PDP-8A, 4K, DIAGNOSTIC |

KIT NAME: 8A820, R, DOCUMENTS

Kit Number: FB-8A820-R

Contents

| | |
|-------------|----------------------------|
| EK-FPP8A-MM | FPP8-A MAINTENANCE MANUAL |
| EK-FPP8A-OP | FPP8-A USERS MANUAL |
| EK-OBA8C-IP | BA8-C CHASSIS ASSEMBLY IPB |
| EK-8A001-OP | PDP-8A OPERATORS HANDBOOK |
| EK-8A002-MM | PDP-8A MINIPROCESSOR USERS |
| MP-00177-00 | PDP-8A, PRINT |

Diagnostic

| | |
|----------|-----------------------|
| ZF226-RB | FPP-8A, DIAGNOSTIC |
| ZF209-RB | KM8-A, DIAGNOSTIC |
| ZF006-RB | PDP-8A 4K, DIAGNOSTIC |
| ZF208-RB | DKC8, DIAGNOSTIC |

KIT NAME: 8A820, S, DOCUMENTS

Kit Number: FB-8A820-S

Contents

| | |
|-------------|----------------------------|
| EK-OKC8A-IP | KC8-A CONSOLE IPB |
| EK-FPP8A-MM | FPP8-A MAINTENANCE MANUAL |
| EK-FPP8A-OP | FPP8-A USERS MANUAL |
| EK-OBA8C-IP | BA8-C CHASSIS ASSEMBLY IPB |
| EK-8A001-OP | PDP-8A OPERATORS HANDBOOK |
| EK-8A002-MM | PDP-8A MINIPROCESSOR USERS |
| MP-00177-00 | PDP-8A, PRINT |

Diagnostic

| | |
|----------|-----------------------|
| ZF226-RB | FPP-8A, DIAGNOSTIC |
| ZF209-RB | KM8-A, DIAGNOSTIC |
| ZF006-RB | PDP-8A 4K, DIAGNOSTIC |
| ZF208-RB | DKC8, DIAGNOSTIC |

KIT NAME: AA11, DOCUMENTS

Kit Number: FB-AA11-D

Contents

| | |
|-------------|---------------|
| MP-0AA11-D0 | AA11-D, PRINT |
|-------------|---------------|

Diagnostic

| | |
|----------|------------------|
| ZJ101-RB | AA11, DIAGNOSTIC |
|----------|------------------|

KIT NAME: AA11-FA, DOCUMENTS

Kit Number: FB-AA11-FA

Contents

MP-OAA11-F0 AA11-F, PRINT

Diagnostic

ZJ101-RB AA11, DIAGOSTIC

KIT NAME: AA11, K, KT, DOCUMENTS

Kit Number: FB-AA110-KT

Contents

EK-AA11K-TM AA11-K TECHNICAL MANUAL
MP-00161-00 AA11-K, PRINT

Diagnostic

ZJ230-RB AA11K, DIAGNOSTIC

KIT NAME: AA50, AN, BN, BP, DOCUMENTS

Kit Number: FB-AA50

Contents

EK-OAA50-TM AA50 CONVERTER TECHNICAL
MANUAL
MP-OAA50-00 AA50, PRINT

Diagnostic

ZF102-RB AA-50, DIAGNOSTIC

KIT NAME: AAV11, A, DOCUMENTS

Kit Number: FB-AAV11-A

Contents

| | |
|-------------|--|
| EK-ADV11-OP | ADV11-A, KWV11-A, DRV11 AAV11-A USER'S MANUAL |
| MP-00186-00 | AAV11, PRINT |

Diagnostic

| | |
|----------|-------------------|
| ZJ248-RB | AAV11, DIAGNOSTIC |
|----------|-------------------|

KIT NAME: AD01, DOCUMENTS

Kit Number: FB-AD01

Contents

| | |
|-------------|-------------------------------|
| 47H076 | AD01 A/D CONVERSION SUBSYSTEM |
| MP-0AD01-00 | AD01, PRINT |
| MP-0A124-00 | A124, PRINT |
| MP-0AH04-00 | AH04, PRINT |

Diagnostic

| | |
|----------|------------------|
| ZJ103-RB | AD01, DIAGNOSTIC |
|----------|------------------|

KIT NAME: AD11, K, DOCUMENTS

Kit Number: FB-AD11-K

Contents

| | |
|-------------|---------------------|
| EK-AD11K-OP | AD11-K USERS MANUAL |
| MP-AD11K-00 | AD11-K, PRINT |

KIT NAME: AD8, A, DOCUMENTS

Kit Number: FB-AD8-A

Contents

MP-00AD8-E0 AD8-E, PRINT

Diagnostic

ZF216-RB AD8-A, DIAGNOSTIC

KIT NAME: AD8, B, DOCUMENTS

Kit Number: FB-AD8-B

Contents

MP-00AD8-A0 AD8-A, PRINT

MP-AD8EA-00 AD8EA, PRINT

MP-LAB8E-00 LAB8E, PRINT

MP-0H322-00 H322, PRINT

Diagnostic

ZF216-RB AD8-A, DIAGNOSTIC

ZF103-RB AD8-E, DIAGNOSTIC

KIT NAME: ADK11, KT, DOCUMENTS

Kit Number: FB-ADK11-KT

Contents

EK-AD11K-OP AD11-K USERS MANUAL

EK-KW11K-OP KW11-K REAL TIME CLOCK USER
MANUAL

Diagnostic

ZJ217-RB KW11K, DIAGNOSTIC

ZJ220-RB AD11K, DIAGNOSTIC

KIT NAME: ADV11, A, DOCUMENTS

Kit Number: FB-ADV11

Contents

| | |
|-------------|--|
| EK-ADV11-OP | ADV11-A, KVV11-A, AAV11-A, DRV11 USERS MANUAL |
| MP-00193-00 | ADV11-A, PRINT |

KIT NAME: AFC8, DOCUMENTS

Kit Number: FB-AFC8

Contents

| | |
|-------------|--------------------------------------|
| EK-AFC08-TM | AFC8 MULTIPLEXER TECHNICAL MANUAL |
|-------------|--------------------------------------|

Diagnostic

| | |
|----------|------------------|
| ZF106-RB | AFC8, DIAGNOSTIC |
|----------|------------------|

KIT NAME: AFC8, PA, DOCUMENTS

Kit Number: FB-AFC8-PA

Contents

| | |
|-------------|-------------|
| MP-0AFC8-00 | AFC8, PRINT |
| MP-0H704-00 | H704, PRINT |

Diagnostic

| | |
|----------|-------------------|
| ZF106-RB | AFC-8, DIAGNOSTIC |
|----------|-------------------|

KIT NAME: AH04, DOCUMENTS

Kit Number: FB-AH04

Contents

MP-0AH04-00 AH04, PRINT

KIT NAME: AH05, DOCUMENTS

Kit Number: FB-AH05

Contents

MP-0AH05-00 AH05, PRINT

KIT NAME: AM11, K, DOCUMENTS

Kit Number: FB-AM11-K

Contents

EK-AM11K-TM AM11-K MULTIPLE GAIN USERS
MANUAL

MP-00090-00 AM11-K, PRINT

KIT NAME: AR11, DOCUMENTS

Kit Number: FB-AR11

Contents

84H550 AR11 USERS GUIDE

MP-0AR11-00 AR11, PRINT

Diagnostic

ZJ181-RB AR11, DIAGNOSTIC

KIT NAME: AR11, KT, DOCUMENTS

Kit Number: FB-AR11-K

Contents

| | |
|-------------|------------------|
| 84H550 | AR11 USERS GUIDE |
| MP-0AR11-00 | AR11, PRINT |
| MP-0322-00 | H322, PRINT |

Diagnostic

| | |
|----------|------------------|
| ZJ181-RB | AR11, DIAGNOSTIC |
|----------|------------------|

KIT NAME: BA11, ES, DOCUMENTS

Kit Number: FB-BA11-E

Contents

| | |
|-------------|----------------|
| MP-0BA11-ES | BA11-ES, PRINT |
|-------------|----------------|

KIT NAME: BA11, FD, FE, DOCUMENTS

Kit Number: FB-BA11-F

Contents

| | |
|-------------|-------------------------|
| EK-BA11F-IP | BA11-F MOUNTING BOX IPB |
| MP-0BA11-F0 | BA11-F, PRINT |

KIT NAME: BA11, K, DOCUMENTS

Kit Number: FB-BA11-K

Contents

| | |
|-------------|-------------------------------------|
| EK-BA11K-IP | BA11-K MOUNTING BOX IPB |
| EK-BA11K-MM | BA11-K MOUNTING BOX MANUAL |
| EK-BA11K-OP | BA11-K MOUNTING BOX USERS MANUAL |
| MP-00311-00 | BA11-K, PRINT |

KIT NAME: BA11, L, DOCUMENTS

Kit Number: FB-BA11-L

Contents

| | |
|-------------|-------------------------|
| EK-BA11L-MM | BA11-L, MOUNTING BOX |
| EK-BA11L-IP | BA11-L MOUNTING BOX IPB |
| MP-00018-00 | BA11-L, PRINT |

KIT NAME: BA11, ME, DOCUMENTS

Kit Number: FB-BA11-M

Contents

| | |
|-------------|---------------|
| MP-OBA11-M0 | BA11-M, PRINT |
|-------------|---------------|

KIT NAME: BA11, MF, DOCUMENTS

Kit Number: FB-BA11-MF

Contents

| | |
|-------------|---------------|
| MP-0A124-00 | A124, PRINT |
| MP-OBA11-M0 | BA11-M, PRINT |

KIT NAME: BA614, DOCUMENTS

Kit Number: FB-BA614

Contents

MP-BA614-00 BA614, PRINT

KIT NAME: BA8, AA, AB, DOCUMENTS

Kit Number: FB-BA8-A

Contents

MP-OBA8A-00 BA8-A, PRINT

KIT NAME: BA8, C, DOCUMENTS

Kit Number: FB-BA8-C

Contents

EK-OBA8C-IP BA8-C CHASSIS ASSEMBLY IPB
MP-00140-00 BA8-C, PRINT

KIT NAME: BARII, EC, DOCUMENTS

Kit Number: FB-BARII-EC

Contents

MP-BARII-00 BARII, PRINT

KIT NAME: BB11, A, B, DOCUMENTS

Kit Number: FB-BB11

Contents

MP-0BB11-00 BB11, PRINT

Diagnostic

ZJ177-RB BB11, DIAGNOSTIC

KIT NAME: BB11, D, DOCUMENTS

Kit Number: FB-BB11-D

Contents

MP-0BB11-D0 BB11-D, PRINT

Diagnostic

ZJ177-RB BB11, DIAGNOSTIC

KIT NAME: BB11, F, DOCUMENTS

Kit Number: FB-BB11-F

Contents

MP-0BB11-F0 BB11-F, PRINT

Diagnostic

ZJ177-RB BB11, DIAGNOSTIC

KIT NAME: BB11, H, DOCUMENTS

Kit Number: FB-BB11-H

Contents

MP-0BB11-H0 BB11-H, PRINT

Diagnostic

ZJ177-RB BB11, DIAGNOSTIC

KIT NAME: BB11, K, DOCUMENTS

Kit Number: FB-BB11-K

Contents

MP-0BB11-K0 BB11-K, PRINT

Diagnostic

ZJ177-RB BB11, DIAGNOSTIC

KIT NAME: BB11, M, DOCUMENTS

Kit Number: FB-BB11-M

MP-0BB11-M0 BB11-M, PRINT

Diagnostic

ZJ177-RB BB11, DIAGNOSTIC

KIT NAME: BL01, DOCUMENTS

Kit Number: FB-BL01

Contents

| | |
|-------------|----------------------|
| EK-BL01A-MM | BL01 AC LINE MONITOR |
| MP-OBL01-00 | BL01, PRINT |

KIT NAME: BM792, DOCUMENTS

Kit Number: FB-BM792

Contents

| | |
|-------------|---------------------------------------|
| EK-BM792-TM | BM792 AND MR11-DB BOOTSTRAP MANUAL |
| MP-BM792-00 | BM792, PRINT |

Diagnostic

| | |
|----------|-------------------|
| ZJ170-RB | BM792, DIAGNOSTIC |
|----------|-------------------|

KIT NAME: BM873, YB, DOCUMENTS

Kit Number: FB-BM873-YB

Contents

| | |
|-------------|-----------------------------|
| EK-BM873-TM | BM873 RESTART/LOADER MANUAL |
| MP-BM873-00 | BM873, PRINT |

Diagnostic

| | |
|----------|-------------------|
| ZJ106-RB | BM873, DIAGNOSTIC |
|----------|-------------------|

KIT NAME: CB11, B, DOCUMENTS

Kit Number: FB-CB11

Contents

| | |
|-------------|--|
| EK-OCB11-OP | CB11 TELEPLANT INTERFACE USERS MANUAL |
| MP-00207-00 | CB11, PRINT |

Diagnostic

| | |
|----------|------------------|
| ZJ107-RB | CB11, DIAGNOSTIC |
|----------|------------------|

KIT NAME: CD11, DOCUMENTS

Kit Number: FB-CD11

Contents

| | |
|-------------|---|
| EK-OCD11-TM | CD11 CARD READER SYSTEM MANUAL |
| EK-OCD11-OP | CD11 CARD READER SYSTEM USERS MANUAL |
| MP-OCD11-00 | CD11, PRINT |

Diagnostic

| | |
|----------|------------------|
| ZJ108-RB | CD11, DIAGNOSTIC |
|----------|------------------|

KIT NAME: CM11, FA, DOCUMENTS

Kit Number: FB-CM11-FA

Contents

| | |
|-------------|--|
| EK-OCR11-TM | CR11/CM11 CARD READER SYSTEM MANUAL |
| EK-OCR11-OP | CR11/CM11 CARD READERS USERS MANUAL |
| MP-0CM11-00 | CM11, PRINT |

Diagnostic

| | |
|----------|------------------------|
| ZJ203-RB | CR11/CM11F, DIAGNOSTIC |
|----------|------------------------|

KIT NAME: CM11, FB, DOCUMENTS

Kit Number: FB-CM11-FB

Contents

| | |
|-------------|---|
| EK-OCR11-TM | CR11/CM11 CARD READER SYSTEM MANUAL |
| EK-OCR11-OP | CR11/ CM11 CARD READERS USERS MANUAL |
| MP-OCR11-00 | CR11, PRINT |

Diagnostic

| | |
|----------|--------------------|
| ZJ110-RB | CM11-F, DIAGNOSTIC |
|----------|--------------------|

KIT NAME: CM8, FA, FB, DOCUMENTS

Kit Number: FB-CM8-F

Contents

MP-00CM8-F0 CM8-F, PRINT

Diagnostic

ZJ114-RB CM8F, DIAGNOSTIC

KIT NAME: CR11, DOCUMENTS

Kit Number: FB-CR11

Contents

EK-OCR11-TM CR11/CM11 CARD READER SYSTEM
MANUAL

EK-OCR11-OP CR11/CM11 CARD READERS USERS
MANUAL

MP-OCR11-00 CR11, PRINT

Diagnostic

ZJ111-RB CR11, DIAGNOSTIC

KIT NAME: CSV11, B, DOCUMENTS

Kit Number: FB-CSV11-B

Contents

EK-CSV11-IN CSV11 INSTALLATION AND
OPERATION

MP-00151-00 CSV11-B, PRINT

KIT NAME: DA11, B, DOCUMENTS

Kit Number: FB-DA11-B

Contents

| | |
|-------------|---|
| EK-DR11B-OP | DR11-B/DA11-B INTERFACE USERS MANUAL |
| EK-DR11B-TM | DR11-B/DA11-B MANUAL |
| MP-0DA11-B0 | DA11-B, PRINT |
| MP-0DR11-B0 | DR11-B, PRINT |

Diagnostic

| | |
|----------|--------------------|
| ZJ124-RB | DR11-B, DIAGNOSTIC |
| ZJ112-RB | BA11-B, DIAGNOSTIC |

KIT NAME: DB11, A, DOCUMENTS

Kit Number: FB-DB11-A

Contents

| | |
|-------------|----------------------------|
| EK-DB11A-TM | DB11-A BUS REPEATER MANUAL |
| MP-0DB11-A0 | DB11-A, PRINT |

KIT NAME: DB8, EA, EB, DOCUMENTS

Kit Number: FB-DB8-E

Contents

| | |
|-------------|--------------|
| MP-00DB8-E0 | DB8-E, PRINT |
|-------------|--------------|

Diagnostic

| | |
|----------|-------------------|
| ZF120-RB | DB8-E, DIAGNOSTIC |
|----------|-------------------|

KIT NAME: DC08, CM, DOCUMENTS

Kit Number: FB-DC08-CM

Contents

| | |
|-------------|-------------------------|
| 68H120 | DC08 MAINTENANCE MANUAL |
| MP-0DC08-CM | DC08-CM, PRINT |

Diagnostic

| | |
|----------|------------------|
| ZF126-RB | DC08, DIAGNOSTIC |
|----------|------------------|

KIT NAME: DC08, CS, DOCUMENTS

Kit Number: FB-DC08-CS

Contents

| | |
|-------------|-------------------------|
| 68H120 | DC08 MAINTENANCE MANUAL |
| MP-0DC08-CS | DC08-CS, PRINT |

Diagnostic

| | |
|----------|------------------|
| ZF126-RB | DC08, DIAGNOSTIC |
|----------|------------------|

KIT NAME: DC08, D, DOCUMENTS

Kit Number: FB-DC08-D

Contents

| | |
|-------------|-------------------------|
| 68H120 | DC08 MAINTENANCE MANUAL |
| MP-0DC08-E0 | DC08-E, PRINT |

Diagnostic

| | |
|----------|------------------|
| ZF126-RB | DC08, DIAGNOSTIC |
|----------|------------------|

KIT NAME: DC08, EB, DOCUMENTS

Kit Number: FB-DC08-EB

Contents

| | |
|-------------|-------------------------|
| 68H120 | DC08 MAINTENANCE MANUAL |
| MP-ODC08-E0 | DC08-E, PRINT |

Diagnostic

| | |
|----------|------------------|
| ZF126-RB | DC08, DIAGNOSTIC |
|----------|------------------|

KIT NAME: DC10, B, DOCUMENTS

Kit Number: FB-DC10-B

Contents

| | |
|-------------|-------------|
| MP-ODC10-00 | DC10, PRINT |
|-------------|-------------|

KIT NAME: DC11, DOCUMENTS

Kit Number: FB-DC11

Contents

| | |
|-------------|-----------------------------|
| EK-ODC11-OP | DC11 INTERFACE USERS MANUAL |
| EK-ODC11-TM | DC11 SYSTEM MANUAL |
| MP-ODC11-00 | DC11, PRINT |

Diagnostic

| | |
|----------|------------------|
| ZJ113-RB | DC11, DIAGNOSTIC |
|----------|------------------|

KIT NAME: DC14, DOCUMENTS

Kit Number: FB-DC14

Contents

MP-0DC14-00 DC14, PRINT

Diagnostic

ZL107-RB DC14-DE, DIAGNOSTIC

KIT NAME: DD11, A, DOCUMENTS

Kit Number: FB-DD11-A

Contents

MP-0DD11-A0 DD11-A, PRINT

KIT NAME: DD11, B, DOCUMENTS

Kit Number: FB-DD11-B

Contents

MP-0DD11-B0 DD11-B, PRINT

KIT NAME: DD11, CF, CK, DOCUMENTS

Kit Number: FB-DD11-C

Contents

MP-0DD11-C0 DD11-C, PRINT

KIT NAME: DD11, D, DF, DK, DOCUMENTS

Kit Number: FB-DD11-D

Contents

MP-0DD11-D0 DD11-D, PRINT

KIT NAME: DF10, A, B, DOCUMENTS

Kit Number: FB-DF10-A

Contents

MP-0DF10-A0 DF10-A, PRINT

KIT NAME: DF10, CA, CB, DOCUMENTS

Kit Number: FB-DF10-C

Contents

MP-0DF10-C0 DF10-C, PRINT

KIT NAME: DF11, A, DOCUMENTS

Kit Number: FB-DF11-A

Contents

EK-DFC11-OP DF11-A EJA LEVEL CONVERTER
USERS MANUAL
MP-0DF11-00 DF11, PRINT

KIT NAME: DF11, BA, BB, DOCUMENTS

Kit Number: FB-DF11-B

Contents

| | |
|-------------|-------------------------------|
| EK-DF11B-MM | DF11/BA/BB MODEM MAINTENANCE |
| EK-DF11B-OP | DF11/BA/BB MODEM USERS MANUAL |
| MP-ODF11-B0 | DF11-B, PRINT |

KIT NAME: DF32D, DOCUMENTS

Kit Number: FB-DF32D

Contents

| | |
|-------------|-------------------|
| EK-DF32D-TM | DF32/D/E DISK IPB |
| MP-ODF32-D0 | DF32D, PRINT |

Diagnostic

| | |
|----------|-------------------|
| ZF129-RB | DF32D, DIAGNOSTIC |
|----------|-------------------|

KIT NAME: DFC11, A, DOCUMENTS

Kit Number: FB-DFC11-A

Contents

| | |
|-------------|--|
| EK-DFC11-OP | DF11-A EJA LEVEL CONVERTER USERS MANUAL |
| MP-DFC11-00 | DFC11, PRINT |

Diagnostic

| | |
|----------|-------------------|
| ZJ175-RB | DFC11, DIAGNOSTIC |
|----------|-------------------|

KIT NAME: DJ11, AA, AB, AC, DOCUMENTS

Kit Number: FB-DJ11-A

Contents

| | |
|-------------|--|
| EK-ODJ11-MM | DJ11 MULTIPLEXER MAINTENANCE MANUAL |
| EK-ODJ11-OP | DJ11 MULTIPLEXER USERS MANUAL |
| MP-0DJ11-00 | DJ11, PRINT |

Diagnostic

| | |
|----------|------------------|
| ZJ115-RB | DJ11, DIAGNOSTIC |
|----------|------------------|

KIT NAME: DK8, EA, DOCUMENTS

Kit Number: FB-DK8-EA

Contents

| | |
|-------------|---------------|
| MP-00DK8-EA | DK8-EA, PRINT |
|-------------|---------------|

Diagnostic

| | |
|----------|-------------------|
| ZF131-RB | DK8-E, DIAGNOSTIC |
|----------|-------------------|

KIT NAME: DK8, EC, DOCUMENTS

Kit Number: FB-DK8-EC

Contents

| | |
|-------------|---------------|
| MP-00DK8-EC | DK8-EC, PRINT |
|-------------|---------------|

Diagnostic

| | |
|----------|-------------------|
| ZF131-RB | DK8-E, DIAGNOSTIC |
|----------|-------------------|

KIT NAME: DK8, EF, DOCUMENTS

Kit Number: FB-DK8-EF

Contents

MP-00DK8-EF DK8-EF, PRINT

Diagnostic

ZF131-RB DK8-E, DIAGNOSTIC

KIT NAME: DK8, EP, DOCUMENTS

Kit Number: FB-DK8-EP

Contents

MP-00DK8-EP DK8-EP, PRINT

MP-LAB8E-00 LAB8E, PRINT

Diagnostic

ZF131-RB DK8-E, DIAGNOSTIC

KIT NAME: DK8, ES, DOCUMENTS

Kit Number: FB-DK8-ES

Contents

MP-00DK8-ES DK8-ES, PRINT

Diagnostic

ZF131-RB DK8-E, DIAGNOSTIC

KIT NAME: DKC8, AA, DOCUMENTS

Kit Number: FB-DKC8-AA

Contents

MP-ODKC8-00 DKC8, PRINT

Diagnostic

ZF208-RB DKC8-AA, 4K OPTION 1 DOC/PT KIT
DIAGNOSTIC
ZF207-RB DKC8-AA, 1K, 2K, 3K, OPTION 1
DOC/PT KIT DIAGNOSTIC

KIT NAME: DL11, A, B, DOCUMENTS

Kit Number: FB-DL11-A

Contents

EK-ODL11-TM DL11 ASYNCHRONOUS LINE
INTERFACE MANUAL
EK-ODL11-OP DL11 INTERFACE USERS MANUAL
MP-ODL11-00 DL11, PRINT

Diagnostic

ZJ136-RB KL11/DL11-A, DIAGNOSTIC

KIT NAME: DL11, C, D, DOCUMENTS

Kit Number: FB-DL11-C

Contents

| | |
|-------------|--|
| EK-ODL11-TM | DL11 ASYNCHRONOUS LINE INTERFACE MANUAL |
| EK-ODL11-OP | DL11 INTERFACE USERS MANUAL |
| MP-ODL11-00 | DL11, PRINT |

Diagnostic

| | |
|----------|------------------------|
| ZJ116-RB | DL11-E C/D, DIAGNOSTIC |
|----------|------------------------|

KIT NAME: DL11, E, DOCUMENTS

Kit Number: FB-DL11-E

Contents

| | |
|-------------|--|
| EK-ODL11-TM | DL11 ASYNCHRONOUS LINE INTERFACE MANUAL |
| EK-ODL11-OP | DL11 INTERFACE USERS MANUAL |
| MP-ODL11-00 | DL11, PRINT |

Diagnostic

| | |
|----------|-------------------|
| ZJ117-RB | DL11E, DIAGNOSTIC |
|----------|-------------------|

KIT NAME: DL11, WA, WB, WC, DOCUMENTS

Kit Number: FB-DL11-W

Contents

| | |
|-------------|---------------------------|
| EK-DL11W-MM | DL11-W MAINTENANCE MANUAL |
| EK-DL11W-OP | DL11-W OPERATORS MANUAL |
| MP-00106-00 | DL11-W, PRINT |

Diagnostic

| | |
|----------|--------------------|
| ZJ235-RB | DL11-W, DIAGNOSTIC |
|----------|--------------------|

KIT NAME: DLV11, DOCUMENTS

Kit Number: FB-DLV11

Contents

| | |
|-------------|---|
| EK-DM11A-OP | DM11 ASYNCHRONOUS 16-LINE USERS MANUAL |
| EK-DM11A-TM | DM11 MULTIPLEXER MANUAL |
| MP-00054-00 | DLV11, PRINT |

KIT NAME: DM11, B, DOCUMENTS

Kit Number: FB-DM11-B

Contents

| | |
|-------------|---|
| EK-DM11B-TM | DM11-BB MODERN CONTROL OPTION MANUAL |
| EK-DM11B-OP | DMB11-BB MODERN CONTROL USERS MANUAL |
| MP-ODM11-BB | DM11-BB, PRINT |

Diagnostic

| | |
|----------|-------------------|
| ZJ119-RB | DM11B, DIAGNOSTIC |
|----------|-------------------|

KIT NAME: DM11, D, DOCUMENTS

Kit Number: FB-DM11-D

Contents

| | |
|-------------|---|
| EK-DM11A-OP | DM11 ASYNCHRONOUS 16-LINE USERS MANUAL |
| EK-DM11A-TM | DM11 MULTIPLEXER MANUAL |
| EK-ODH11-MM | DH11 MAINTENANCE MANUAL |
| EK-ODH11-OP | DH11 MULTIPLEXER USERS MANUAL |
| MP-0DM11-D0 | DM11-D, PRINT |

Diagnostic

| | |
|----------|------------------|
| ZJ118-RB | DM11, DIAGNOSTIC |
|----------|------------------|

KIT NAME: DMC11, DOCUMENTS

Kit Number: FB-DMC11

Contents

| | |
|-------------|--|
| EK-DMCLU-MM | DMC11 IPL MAINTENANCE MANUAL |
| EK-DMCMP-OP | DMC11 IPL MICROPROCESSOR USERS MANUAL |
| EK-DMCLU-OP | DMC11 MAINTENANCE MANUAL |
| MP-00076-00 | DMC11, PRINT |

Diagnostic

| | |
|----------|--------------------|
| ZJ216-RB | DMC-11, DIAGNOSTIC |
|----------|--------------------|

KIT NAME: DN11, DOCUMENTS

Kit Number: FB-DN11

Contents

| | |
|-------------|-----------------------------------|
| EK-ODN11-TM | DN11 INTERFACE MANUAL (PDP-11) |
| EK-ODN11-OP | DN11 INTERFACE USERS MANUAL |
| MP-ODN11-00 | DN11, PRINT |

Diagnostic

| | |
|----------|------------------|
| ZJ120-RB | DN11, DIAGNOSTIC |
|----------|------------------|

KIT NAME: DP11, DOCUMENTS

Kit Number: FB-DP11

Contents

| | |
|-------------|---|
| EK-DP11A-OP | DP11-A INTERFACE USERS MANUAL |
| 68H160 | DP11-A ASYNCHRONOUS INTERFACE MANUAL |
| MP-ODP11-00 | DP11, PRINT |

Diagnostic

| | |
|----------|-------------------|
| ZJ121-RB | DP11A, DIAGNOSTIC |
|----------|-------------------|

KIT NAME: DP8, EA, EB, DOCUMENTS

Kit Number: FB-DP8-E

Contents

MP-00DP8-E0 DP8-E, PRINT

Diagnostic

ZF135-RB DP8-EA, DIAGNOSTIC

KIT NAME: DQ11, DOCUMENTS

Kit Number: FB-DQ11

Contents

EK-ODQ11-MM DQ11 NPR INTERFACE MANUAL
MP-0DQ11-00 DQ11, PRINT

Diagnostic

ZJ122-RB DQ11A, DIAGNOSTIC

KIT NAME: DR11, B, DOCUMENTS

Kit Number: FB-DR11-B

Contents

EK-DR11B-OP DR11-B/DA11-B INTERFACE
USERS MANUAL
EK-DR11B-TM DR11-B/DA11-B MANUAL
MP-0DR11-B0 DR11-B, PRINT

Diagnostic

ZJ124-RB DB11-B, DIAGNOSTIC

KIT NAME: DR11, C, DOCUMENTS

Kit Number: FB-DR11-C

Contents

| | |
|-------------|---|
| EK-DR11C-TM | DR11-C GENERAL DEVICE INTERFACE MANUAL |
| EK-DR11C-OP | DR11-C GENERAL DEVICE USERS MANUAL |
| MP-0DR11-C0 | DR11-C, PRINT |

Diagnostic

| | |
|----------|--------------------|
| ZJ125-RB | DR11-C, DIAGNOSTIC |
|----------|--------------------|

KIT NAME: DR11, K, DOCUMENTS

Kit Number: FB-DR11-K

Contents

| | |
|-------------|---------------------------------------|
| EK-DR11K-MM | DR11-K USER AND MAINTENANCE MANUAL |
| MP-0DR11-K0 | DR11-K, PRINT |

Diagnostic

| | |
|----------|--------------------|
| ZJ187-RB | DR11-K, DIAGNOSTIC |
|----------|--------------------|

KIT NAME: DR11, KT, DOCUMENTS

Kit Number: FB-DR11-KT

Contents

| | |
|-------------|--|
| EK-DR11K-MM | DR11-K USERS AND MAINTENANCE MANUAL |
| MP-0DR11-K0 | DR11-K, PRINT |
| MP-0H322-00 | H322, PRINT |

Diagnostic

| | |
|----------|--------------------|
| ZJ187-RB | DR11-K, DIAGNOSTIC |
|----------|--------------------|

KIT NAME: DR11, L, DOCUMENTS

Kit Number: FB-DR11-L

Contents

| | |
|-------------|------------------------------------|
| EK-DR11L-OP | DR11-L/M INTERFACE USERS MANUAL |
| MP-00003-00 | DR11-L, PRINT |

Diagnostic

| | |
|----------|---------------------|
| ZJ205-RB | DR11L-M, DIAGNOSTIC |
|----------|---------------------|

KIT NAME: DR11-M, DOCUMENTS

Kit Number: FB-DR11-M

Contents

| | |
|-------------|------------------------------------|
| EK-DR11L-OP | DR11-L/M INTERFACE USERS MANUAL |
| MP-00004-00 | DR11-M, PRINT |

Diagnostic

| | |
|----------|---------------------|
| ZJ205-RB | DR11L-M, DIAGNOSTIC |
|----------|---------------------|

KIT NAME: DR8, EA, DOCUMENTS

Kit Number: FB-DR8-EA

Contents

| | |
|-------------|---------------------------|
| EK-OLAB8-MN | LAB-8E MAINTENANCE MANUAL |
| MP-LAB8E-00 | LAB8E, PRINT |
| MP-00DR8-EA | DR8-EA, PRINT |

Diagnostic

| | |
|----------|--------------------|
| ZF136-RB | DR8-EA, DIAGNOSTIC |
|----------|--------------------|

KIT NAME: DR8, EC, DOCUMENTS

Kit Number: FB-DR8-EC

Contents

| | |
|-------------|---------------------------|
| EK-OLAB8-MN | LAB-8E MAINTENANCE MANUAL |
| MP-LAB8E-00 | LAB8E, PRINT |
| MP-00DR8-EC | DR8-EC, PRINT |

Diagnostic

| | |
|----------|-------------------|
| ZF137-RB | DR8-E, DIAGNOSTIC |
|----------|-------------------|

KIT NAME: DR8, ED, DOCUMENTS

Kit Number: FB-DR8-ED

Contents

| | |
|-------------|----------------------------------|
| EK-OLAB8-MN | LAB-8E MAINTENANCE MANUAL |
| EK-DR8ED-OP | DR8-ED INTERFACE USERS MANUAL |
| MP-00005-00 | DR8-ED, PRINT |
| MP-LAB8E-00 | LAB8E, PRINT |

Diagnostic

| | |
|----------|--------------------|
| ZF223-RB | DR8-ED, DIAGNOSTIC |
|----------|--------------------|

KIT NAME: DRV11, DOCUMENTS

Kit Number: FB-DRV11

Contents

| | |
|-------------|---|
| EK-ADV11-OP | ADV11-A, KWV11-A, AAV11-A, DRV11, USERS MANUAL |
| MP-00054-00 | DRV11, PRINT |

KIT NAME: DRV11, B, DOCUMENTS

Kit Number: FB-DRV11-B

Contents

| | |
|-------------|-----------------------------------|
| EK-DRV1B-OP | DRV11-B INTERFACE USERS MANUAL |
| MP-00055-00 | DRV11-B, PRINT |

KIT NAME: DRV11, P, DOCUMENTS

Kit Number: FB-DRV11-P

Contents

| | |
|-------------|---|
| EK-DRV11-OP | DRV11-P FOUNDATION MODULE USERS MANUAL |
| MP-00119-00 | DRV11-P, PRINT |

KIT NAME: DS310, DOCUMENTS

Kit Number: FB-DS310

Contents

| | |
|-------------|-----------------------|
| EK-OOCL8-IP | CL8 UNIT ASSEMBLY IPB |
| EK-OOCL8-OP | CL8 USERS GUIDE |
| MP-00042-00 | DS310, PRINT |

Diagnostic

| | |
|----------|-----------------|
| ZF008-RZ | CL8, DIAGNOSTIC |
| ZF008-RY | CL8, DIAGNOSTIC |

KIT NAME: DS3RK, DOCUMENTS

Kit Number: FB-DS3RK

Contents

| | |
|-------------|--|
| EK-ORK05-OP | RK05 DISK DRIVE USERS MANUAL |
| EK-RK05X-MM | RK05 EXERCISER MAINTENANCE MANUAL |
| EK-RK5JF-MM | RK05/RK05J/RK05F MAINTENANCE MANUAL |
| EK-8E003-MM | PDP-8/E/F/M MAINTENANCE MANUAL |
| MP-00501-00 | RK05, PRINT |
| MP-00RK8-E0 | RK8-E, PRINT |

Diagnostic

| | |
|----------|-------------------|
| ZF177-RB | RK8-E, DIAGNOSTIC |
|----------|-------------------|

KIT NAME: DS3RX, BA, BD, DOCUMENTS

Kit Number: FB-DS3RX-B

Contents

| | |
|-------------|----------------------|
| EK-ORX01-IP | RX01 FLOPPY DISK IPB |
| MP-00RX8-E0 | RX8-E, PRINT |
| MP-00296-00 | RX01, PRINT |

Diagnostic

| | |
|----------|----------------------|
| ZF220-RB | RX8/RX01, DIAGNOSTIC |
|----------|----------------------|

KIT NAME: DT03, FM, FP, DOCUMENTS

Kit Number: FB-DT03-F

Contents

| | |
|-------------|--|
| EK-OH720-TM | H720 POWER SUPPLY/MOUNTING BOX |
| EK-OH720-OP | H720 POWER SUPPLY/MOUNTING USERS MANUAL |
| MP-00280-00 | DT03-F, PRINT |

KIT NAME: DU11, DA, DOCUMENTS

Kit Number: FB-DU11-DA

Contents

| | |
|-------------|-------------------------|
| EK-ODU11-MM | DU11 MAINTENANCE MANUAL |
| EK-ODU11-OP | DU11 USERS MANUAL |
| MP-0DU11-00 | DU11, PRINT |

Diagnostic

| | |
|----------|------------------|
| ZJ127-RB | DU11, DIAGNOSTIC |
|----------|------------------|

KIT NAME: DUP11, DA, DOCUMENTS

Kit Number: FB-DUP11-DA

Contents

| | |
|-------------|------------------------------|
| EK-DUP11-OP | DUP11 INTERFACE USERS MANUAL |
| EK-DUP11-MM | DUP11 MAINTENANCE MANUAL |
| MP-DUP11-00 | DUP11, PRINT |

Diagnostic

| | |
|----------|-------------------|
| ZJ213-RB | DUP11, DIAGNOSTIC |
|----------|-------------------|

KIT NAME: DV11, AA, DOCUMENTS

Kit Number: FB-DV11-AA

Contents

| | |
|-------------|-------------------------|
| EK-ODV11-MM | DV11 MAINTENANCE MANUAL |
| EK-ODV11-OP | DV11 USERS MANUAL |
| MP-00297-00 | DV11, PRINT |

Diagnostic

| | |
|----------|------------------|
| ZJ192-RB | DV11, DIAGNOSTIC |
|----------|------------------|

KIT NAME: DV11, B, DOCUMENTS

Kit Number: FB-DV11-B

Contents

| | |
|-------------|-------------------------|
| EK-ODV11-MM | DV11 MAINTENANCE MANUAL |
| EK-ODV11-OP | DV11 USERS MANUAL |
| MP-00295-00 | DV11-B, PRINT |

Diagnostic

| | |
|----------|------------------|
| ZJ192-RB | DV11, DIAGNOSTIC |
|----------|------------------|

KIT NAME: DW08, A, DOCUMENTS

Kit Number: FB-DW08-A

Contents

| | |
|-------------|-------------------------|
| EK-ODZ11-MM | DZ11 MAINTENANCE MANUAL |
| EK-DZ110-UG | DZ11 USERS GUIDE |
| MP-0DW08-A0 | DW08-A, PRINT |

KIT NAME: DW08, B, DOCUMENTS

Kit Number: FB-DW08-B

Contents

| | |
|-------------|-------------------------|
| EK-ODZ11-MM | DZ11 MAINTENANCE MANUAL |
| EK-DZ110-UG | DZ11 USERS GUIDE |
| MP-0DW08-B0 | DW08-B, PRINT |

KIT NAME: DX11, BA, BB, DOCUMENTS

Kit Number: FB-DX11-B

Contents

| | |
|-------------|--|
| EK-DX11B-MM | DX11-B INTERFACE MAINTENANCE MANUAL |
| EK-DX11B-OP | DX11-B USERS MANUAL |
| EK-861AB-MM | 861-A/B/C/D/E/F MAINTENANCE MANUAL |
| EK-861AB-OP | 861-A/B/C/D/E/F POWER CONTROLLER |
| EK-00861-IP | 861-A/B/C/D/E/F POWER IPB |
| MP-00861-00 | 861, PRINT |
| MP-0DX11-B0 | DX11-B, PRINT |

Diagnostic

| | |
|----------|--------------------|
| ZJ131-RB | DX11-B, DIAGNOSTIC |
|----------|--------------------|

KIT NAME: DZ11, A, B, C, D, E, F, DOCUMENTS

Kit Number: FB-DZ11

Contents

| | |
|-------------|-------------------------|
| EK-ODZ11-MM | DZ11 MAINTENANCE MANUAL |
| EK-DZ110-UG | DZ11 USERS GUIDE |
| MP-00253-00 | DZ11 VOL I, PRINT |
| MP-00254-00 | DZ11 VOL II, PRINT |

Diagnostic

| | |
|----------|------------------|
| ZJ223-RB | DZ11, DIAGNOSTIC |
|----------|------------------|

KIT NAME: FP11, A, DOCUMENTS

Kit Number: FB-FP11-A

Contents

| | |
|-------------|-------------------------|
| EK-FP11A-OP | FP11-A OPERATION MANUAL |
| EK-FP11A-TM | FP11A TECHNICAL MANUAL |
| MP-00189-00 | FP11-A, PRINT |

Diagnostic

| | |
|----------|-------------------|
| ZJ233-RB | FP11A, DIAGNOSTIC |
|----------|-------------------|

KIT NAME: FP11, AU, DOCUMENTS

Kit Number: FB-FP11-AU

Contents

| | |
|-------------|----------------------------|
| EK-FP11A-OP | FP11-A OPERATION MANUAL |
| EK-FP11A-TM | FP11-A TECHNICAL MANUAL |
| EK-KD1EA-MM | KD11-EA MAINTENANCE MANUAL |
| MP-00188-00 | FP11-AU, PRINT |

Diagnostic

| | |
|----------|-------------------|
| ZJ233-RB | FP11A, DIAGNOSTIC |
|----------|-------------------|

KIT NAME: FP11, B, DOCUMENTS

Kit Number: FB-FP11-B

Contents

| | |
|-------------|---------------------------|
| EK-OFP11-MM | FP11-B MAINTENANCE MANUAL |
| MP-FP11B-00 | FP11-B, PRINT |

Diagnostic

| | |
|----------|--------------------|
| ZR112-RB | FP11-B, DIAGNOSTIC |
|----------|--------------------|

KIT NAME: FP11, C, DOCUMENTS

Kit Number: FB-FP11-C

Contents

| | |
|-------------|--------------------------------------|
| EK-FP11C-MM | FP11-C MAINTENANCE MANUAL |
| EK-FP11C-OP | FP11C FLOATING POINT USERS MANUAL |
| MP-00038-00 | FP11-C, PRINT |

Diagnostic

| | |
|----------|--------------------|
| ZR112-RB | FP11-C, DIAGNOSTIC |
|----------|--------------------|

KIT NAME: FPP12, A, DOCUMENTS

Kit Number: FB-FPP12-A

Contents

MP-FPP12-A FPP12-A, PRINT

KIT NAME: FPP8, A, DOCUMENTS

Kit Number: FB-FPP8-A

Contents

EK-FPP8A-MM FPP8-A MAINTENANCE MANUAL
EK-FPP8A-OP FPP8-A USERS MANUAL
MP-00057-00 FPP8A, PRINT

Diagnostic

ZF226-RB FPP-8A, DIAGNOSTIC

KIT NAME: FPP8, EA, EB, DOCUMENTS

Kit Number: FB-FPP8-E

Contents

EK-FPP8A-MM FPP8-A MAINTENANCE MANUAL
EK-FPP8A-OP FPP8-A USERS MANUAL
EK-H9300-IP H9300 CHASSIS ASSEMBLY IPB
MP-00057-00 FPP8A, PRINT

Diagnostic

ZF226-RB FPP-8A, DIAGNOSTIC

KIT NAME: GT41, BA, BB, DOCUMENTS

Kit Number: FB-GT41-BA

Contents

| | |
|-------------|--|
| EK-04105-IP | PDP-11/04 16 BIT IPB (10 1/2') |
| EK-04525-IP | PDP-11/04 16-BIT COMPUTER IPB |
| EK-11004-OP | PDP-11/04 SYSTEM USERS MANUAL |
| EK-ODL11-TM | DL11 ASYNCHRONOUS LINE INTERFACE MANUAL |
| EK-ODL11-OP | DL11 INTERFACE USERS MANUAL |
| EK-KY1LB-MM | KY11-LB MAINTENANCE MANUAL |
| EK-LK40B-TM | LK40-A,B,C,D KEYBOARD MANUAL |
| EK-OVT11-TM | VT11 GRAPHIC DISPLAY PROCESSOR |
| EK-OVT11-OP | VT11 USERS MANUAL |
| EK-GT143-IN | GT41/GT43 INSTALLATION MANUAL |
| MP-00319-00 | GT41, PRINT |

Diagnostic

| | |
|----------|--------------------|
| ZJ009-RB | 11/04, DIAGNOSTIC |
| ZJ116-RB | DL11-E, DIAGNOSTIC |

KIT NAME: GT41, BH, BJ, DOCUMENTS

Kit Number: FB-GT41-BH

Contents

| | |
|-------------|--|
| EK-GT143-IN | GT41/GT43 INSTALLATION MANUAL |
| EK-ODL11-TM | DL11 ASYNCHRONOUS LINE INTERFACE MANUAL |
| EK-ODL11-OP | DL11 INTERFACE USERS MANUAL |
| EK-OVT11-TM | VT11 GRAPHIC DISPLAY PROCESSOR |
| EK-OVT11-OP | VT11 USERS MANUAL |
| EK-04105-IP | PDP-11/04 16-BIT IPB (10 1/2') |

(Continued on Next Page)

KIT NAME: GT41, BH, BJ, DOCUMENTS (Continued)

Contents

| | |
|-------------|-----------------------------------|
| EK-04525-IP | PDP-11/04 16-BIT COMPUTER IPB |
| EK-11004-OP | PDP-11/04 SYSTEM USERS MANUAL |
| EK-DL11W-MM | DL11-W MAINTENANCE MANUAL |
| EK-DL11W-OP | DL11-W OPERATORS MANUAL |
| EK-OLA36-IP | LA36 DECWRITER II IPB |
| EK-2LA36-MM | LA36 MAINTENANCE MANUAL |
| EK-1LA36-MM | LA36 MAINTENANCE MANUAL, VOL I |
| MP-00319-00 | GT41, PRINT |

Diagnostic

| | |
|----------|--------------------|
| ZJ116-RB | DL11-E, DIAGNOSTIC |
| ZJ009-RB | 11/04, DIAGNOSTIC |
| ZJ183-RB | LA36, DIAGNOSTIC |

KIT NAME: GT43, AA, AB, DOCUMENTS

Kit Number: FB-GT43-AA

Contents

| | |
|-------------|--|
| EK-GT143-IN | GT41/GT43 INSTALLATION MANUAL |
| EK-34105-IP | PDP-11/34 (10 1/2") 16 BIT |
| EK-34525-IP | PDP-11/34 16 BIT COMPUTER IPB |
| EK-11034-UG | PDP-11/34 SYSTEM USERS |
| EK-ODL11-TM | DL11 ASYNCHRONOUS LINE INTER- FACE MANUAL |
| EK-ODL11-OP | DL11 INTERFACE USERS MANUAL |
| EK-LK40B-TM | LKA40-A, B, C, D KEYBOARD MANUAL |
| EK-KY1LB-MM | KY11-LB MAINTENANCE MANUAL |
| EK-OVT11-TM | VT11 GRAPHIC DISPLAY PROCESSOR |
| EK-OVT11-OP | VT11 USERS MANUAL |
| MP-00133-00 | GT43, PRINT |

Diagnostic

| | |
|----------|--------------------|
| ZJ010-RB | 11/34, DIAGNOSTIC |
| ZJ116-RB | DL11-E, DIAGNOSTIC |

KIT NAME: GT43, AH, AJ, DOCUMENTS

Kit Number: FB-GT43-AH

Contents

| | |
|-------------|--|
| EK-GT143-IN | GT41/GT43 INSTALLATION MANUAL |
| EK-34105-IP | PDP-11/34 (10 1/2") 16 BIT |
| EK-34525-IP | PDP-11/34 16 BIT COMPUTER IPB |
| EK-11034-UG | PDP-11/34 SYSTEM USERS |
| EK-ODL11-TM | DL11 ASYNCHRONOUS LINE INTER- FACE MANUAL |
| EK-ODL11-OP | DL11 INTERFACE USERS MANUAL |
| EK-KY1LB-MM | KY11-LB MAINTENANCE MANUAL |
| EK-OVT11-TM | VT11 GRAPHIC DISPLAY PROCESSOR |
| EK-OVT11-OP | VT11 USERS MANUAL |

(Continued on Next Page)

KIT NAME: GT43, AH, AJ, DOCUMENTS (Continued)

Contents

| | |
|-------------|--------------------------------|
| EK-OLA36-IP | LA36 DECWRITER II IPB |
| EK-2LA36-MM | LA36 MAINTENANCE MANUAL |
| EK-1LA36-MM | LA36 MAINTENANCE MANUAL VOL. I |
| MP-00133-00 | GT43, PRINT |

Diagnostic

| | |
|----------|--------------------|
| ZJ116-RB | DL11-E, DIAGNOSTIC |
| ZJ010-RB | 11/34, DIAGNOSTIC |
| ZJ183-RB | LA36, DIAGNOSTIC |

KIT NAME: H720, DOCUMENTS

Kit Number: FB-H720

Contents

| | |
|-------------|--|
| EK-OH720-TM | H720 POWER SUPPLY MOUNTING BOX |
| EK-OH720-OP | H720 POWER SUPPLY MOUNTING USERS MANUAL |
| MP-OH720-00 | H720, PRINT |

KIT NAME: H721-C, DOCUMENTS

Kit Number: FB-H721-C

Contents

| | |
|-------------|-----------------------|
| EK-OH721-IP | H721 POWER SUPPLY IPB |
| MP-OH721-00 | H721, PRINT |

KIT NAME: H740-D, DOCUMENTS

Kit Number: FB-H740

Contents

| | |
|-------------|---|
| 19H135 | H740-D POWER SUPPLY MAINTENANCE MANUAL |
| EK-H740D-OP | H740-D POWER SUPPLY USERS MANUAL |
| EK-H740D-IP | H740-D/DA POWER SUPPLY IPB |
| MP-0H740-00 | H740-D, PRINT |

KIT NAME: H742, A, B, DOCUMENTS

Kit Number: FB-H742

Contents

| | |
|-------------|-----------------------|
| EK-0H742-IP | H742 POWER SUPPLY IPB |
| MP-0H742-00 | H742, PRINT |

KIT NAME: H7420, DOCUMENTS

Kit Number: FB-H7420

Contents

| | |
|-------------|------------------------|
| EK-H7420-IP | H7420 POWER SUPPLY IPB |
| MP-H7420-00 | H7420, PRINT |

KIT NAME: H744, DOCUMENTS

Kit Number: FB-H744

Contents

| | |
|-------------|--------------------|
| EK-OH744-IP | H744 REGULATOR IPB |
| MP-OH744-00 | H744, PRINT |

KIT NAME: H745, DOCUMENTS

Kit Number: FB-H745

Contents

| | |
|-------------|--------------------|
| EK-OH745-IP | H745 REGULATOR IPB |
| MP-OH745-00 | H745, PRINT |

KIT NAME: H746, DOCUMENTS

Kit Number: FB-H746

Contents

| | |
|-------------|--------------------|
| EK-OH746-IP | H746 REGULATOR IPB |
| MP-OH746-00 | H746, PRINT |

KIT NAME: H754, DOCUMENTS

Kit Number: FB-H754

Contents

| | |
|-------------|--------------------|
| EK-OH754-IP | H754 REGULATOR IPB |
| MP-OH754-00 | H754, PRINT |

KIT NAME: H765, DOCUMENTS

Kit Number: FB-H765

Contents

| | |
|-------------|-----------------------|
| EK-OH765-IP | H765 POWER SUPPLY IPB |
| MP-OH765-00 | H765, PRINT |

KIT NAME: H775, DOCUMENTS

Kit Number: FB-H775

Contents

| | |
|-------------|--------------------------|
| EK-OH775-IP | H775 BATTERY BACK-UP IPB |
| MP-00014-00 | H775, PRINT |

KIT NAME: H777, AA, AB, DOCUMENTS

Kit Number: FB-H777-A

Contents

| | |
|-------------|-----------------------|
| EK-OH777-IP | H777 POWER SUPPLY IPB |
| MP-OH777-A0 | H777-A, PRINT |

KIT NAME: H777-BA, BB, DOCUMENTS

Kit Number: FB-H777-B

Contents

| | |
|-------------|-----------------------|
| EK-OH777-IP | H777 POWER SUPPLY IPB |
| MP-00016-00 | H777-B, PRINT |

KIT NAME: H780, DOCUMENTS

Kit Number: FB-H780

Contents

| | |
|-------------|-------------------------------|
| EK-H780C-OP | H780-C/D/H/J/K/L USERS MANUAL |
| MP-0H780-00 | H780, PRINT |

KIT NAME: H7832, DOCUMENTS

Kit Number: FB-H7832

Contents

| | |
|-------------|------------------------|
| EK-H7832-IP | H7832 POWER SUPPLY IPB |
| MP-00353-00 | H7832, PRINT |

KIT NAME: H9300, DOCUMENTS

Kit Number: FB-H9300

Contents

| | |
|-------------|----------------------------|
| EK-H9300-IP | H9300 CHASSIS ASSEMBLY IPB |
| MP-H9300-00 | H9300, PRINT |

KIT NAME: H960, BC, BD DOCUMENTS

Kit Number: FB-H960-B

Contents

| | |
|-------------|---------------------------------------|
| EK-861AB-MM | 861-A/B/C/D/E/F MAINTENANCE MANUAL |
| EK-861AB-OP | 861-A/B/C/D/E/F POWER CONTROLLER |
| EK-00861-IP | 861-A/B/C/D/E/F POWER IPB |
| MP-0H960-B0 | H960-B, PRINT |
| MP-00861-00 | 861, PRINT |

KIT NAME: H960, CA, CB, DOCUMENTS

Kit Number: FB-H960-C

Contents

| | |
|-------------|---------------------------------------|
| EK-861AB-MM | 861-A/B/C/D/E/F MAINTENANCE MANUAL |
| EK-861AB-OP | 861-A/B/C/D/E/F POWER CONTROLLER |
| EK-00861-IP | 861-A/B/C/D/E/F POWER IPB |
| MP-0H960-C0 | H960-C, PRINT |
| MP-00861-00 | 861, PRINT |

KIT NAME: H960, DA, DB, DH, DJ, DOCUMENTS

Kit Number: FB-H960-D

Contents

| | |
|-------------|---------------------------------------|
| EK-861AB-MM | 861-A/B/C/D/E/F MAINTENANCE MANUAL |
| EK-861AB-OP | 861-A/B/C/D/E/F POWER CONTROLLER |
| EK-00861-IP | 861-A/B/C/D/E/F POWER IPB |
| EK-BA11F-IP | BA11-F MOUNTING BOX IPB |

(Continued on Next Page)

KIT NAME: H960, DA, DB, DH, DJ, DOCUMENTS
(Continued)

Contents

| | |
|-------------|---------------|
| MP-OH960-D0 | H960-D, PRINT |
| MP-00861-00 | 861, PRINT |
| MP-BA11F-00 | BA11-F, PRINT |

KIT NAME: H960, EA, EB, DOCUMENTS

Kit Number: FB-H960-E

Contents

| | |
|-------------|---------------------------------------|
| EK-861AB-MM | 861-A/B/C/D/E/F MAINTENANCE MANUAL |
| EK-861AB-OP | 861-A/B/C/D/E/F POWER CONTROLLER |
| EK-00861-IP | 861-A/B/C/D/E/F POWER IPB |
| EK-BA11F-IP | BA11-F MOUNTING BOX IPB |
| MP-OH960-E0 | H960-E, PRINT |
| MP-00861-00 | 861, PRINT |
| MP-BA11F-00 | BA11-F, PRINT |

KIT NAME: H961, DOCUMENTS

Kit Number: FB-H961

Contents

| | |
|-------------|---------------------------------------|
| EK-861AB-MM | 861-A/B/C/D/E/F MAINTENANCE MANUAL |
| EK-861AB-OP | 861-A/B/C/D/E/F POWER CONTROLLER |
| EK-00861-IP | 861-A/B/C/D/E/F POWER IPB |
| MP-00861-00 | 861, PRINT |
| MP-OH961-A0 | H961-A, PRINT |

KIT NAME: H964, AA, AB, CA, CB, CC, DOCUMENTS

Kit Number: FB-H964

Contents

| | |
|-------------|---|
| EK-861AB-MM | 861-A/B/C/D/E/F MAINTENANCE MANUAL |
| EK-861AB-OP | 861-A/B/C/D/E/F POWER CONTROLLER |
| EK-00861-IP | 861-A/B/C/D/E/F POWER IPB |
| 19H135 | H740-D POWER SUPPLY MAINTENANCE MANUAL |
| EK-H740D-OP | H740-D POWER SUPPLY USERS MANUAL |
| EK-H740D-IP | H740-D/DA POWER SUPPLY IPB |
| MP-00861-00 | 861, PRINT |
| MP-0H964-00 | H964, PRINT |
| MP-00849;00 | 849, PRINT |

KIT NAME: H964, FA, DOCUMENTS

Kit Number: FB-H964-FA

Contents

| | |
|-------------|---------------------------------------|
| EK-861AB-MM | 861-A/B/C/D/E/F MAINTENANCE MANUAL |
| EK-861AB-OP | 861-A/B/C/D/E/F POWER CONTROLLER |
| EK-00861-IP | 861-A/B/C/D/E/F POWER IPB |
| MP-00861-00 | 861, PRINT |
| MP-0H964-00 | H964, PRINT |

KIT NAME: H964, FB, DOCUMENTS

Kit Number: FB-H964-FB

Contents

| | |
|-------------|---------------------------------------|
| EK-861AB-MM | 861-A/B/C/D/E/F MAINTENANCE MANUAL |
| EK-861AB-OP | 861-A/B/C/D/E/F POWER CONTROLLER |
| EK-00861-IP | 861-A/B/C/D/E/F POWER IPB |
| MP-00861-00 | 861, PRINT |
| MP-0H964-00 | H964, PRINT |
| MP-0H967-00 | H967, PRINT |

KIT NAME: H967, DOCUMENTS

Kit Number: FB-H967

Contents

| | |
|-------------|---------------------------------------|
| EK-861AB-MM | 861-A/B/C/D/E/F MAINTENANCE MANUAL |
| EK-00861-IP | 861-A/B/C/D/E/F POWER IPB |
| EK-861AB-OP | 861-A/B/C/D/E/F POWER CONTROLLER |
| MP-00861-00 | 861, PRINT |
| MP-0H967-00 | H967, PRINT |

KIT NAME: IBV11, DOCUMENTS

Kit Number: FB-IBV11

Contents

| | |
|-------------|----------------------|
| EK-IBV11-UG | IBV11-A USERS MANUAL |
| MP-00274-00 | IBV11-A, PRINT |

KIT NAME: ICR11, AA, AB, DOCUMENTS

Kit Number: FB-ICR11-A

Contents

| | |
|-------------|---------------------------|
| EK-ICR11-MM | ICR-11 MAINTENANCE MANUAL |
| MP-ICR11-00 | ICR11, PRINT |

Diagnostic

| | |
|----------|-------------------|
| ZJ218-RB | ICR11, DIAGNOSTIC |
|----------|-------------------|

KIT NAME: ICS11, MA, MB, DOCUMENTS

Kit Number: FB-ICS11-M

Contents

| | |
|-------------|--------------|
| MP-ICS11-00 | ICS11, PRINT |
|-------------|--------------|

Diagnostic

| | |
|----------|--------------------|
| ZJ191-RB | ICS-11, DIAGNOSTIC |
|----------|--------------------|

KIT NAME: ICS8, MA, MB, DOCUMENTS

Kit Number: FB-ICS8-M

Contents

| | |
|-------------|--------------------------|
| EK-OICS8-MM | ICS-8 MAINTENANCE MANUAL |
| MP-OICS8-10 | ICS8-1, PRINT |

Diagnostic

| | |
|----------|-------------------|
| ZF221-RB | ICS-8, DIAGNOSTIC |
|----------|-------------------|

KIT NAME: ICS8-XA, XB, DOCUMENTS

Kit Number: FB-ICS8-X

Contents

| | |
|-------------|--------------------------|
| EK-OICS8-MM | ICS-8 MAINTENANCE MANUAL |
| MP-OICS8-20 | ICS8-2, PRINT |

Diagnostic

| | |
|----------|------------------|
| ZF221-RB | ICS8, DIAGNOSTIC |
|----------|------------------|

KIT NAME: KA8-E, DOCUMENTS

Kit Number: FB-KA8-E

Contents

| | |
|-------------|--------------|
| MP-00KA8-E0 | KA8-E, PRINT |
|-------------|--------------|

KIT NAME: KC8, AA, DOCUMENTS

Kit Number: FB-KC8-AA

Contents

| | |
|-------------|------------------------|
| EK-OKC8A-IP | KC8-A CONSOLE IPB |
| EK-KC8EA-IP | KC8-E/A/EC CONSOLE IPB |
| MP-00KC8-A0 | KC8-A, PRINT |

KIT NAME: KC8-E, DOCUMENTS

Kit Number: FB-KC8-E

Contents

EK-KC8EA-IP KC8-E/A/EC CONSOLE IPB
MP-00KC8-E0 KC8-E, PRINT

KIT NAME: KC8-EA, DOCUMENTS

Kit Number: FB-KC8-EA

Contents

EK-KC8EA-IP KC8-E/A/EC CONSOLE IPB
MP-00KC8-EA KC8-EA, PRINT

KIT NAME: KC8, HA, DOCUMENTS

Kit Number: FB-KC8-HA

Contents

MP-00KC8-HA KC8-HA, PRINT

KIT NAME: KC8-HB, DOCUMENTS

Kit Number: FB-KC8-HB

Contents

MP-00KC8-HB KC8-HB, PRINT

KIT NAME: KC8, ML, DOCUMENTS

Kit Number: FB-KC8-ML

Contents

| | |
|-------------|----------------------|
| 941160 | KC8-ML/M CONSOLE IPB |
| MP-00KC8-ML | KC8-ML, PRINT |

KIT NAME: KE11-A, DOCUMENTS

Kit Number: FB-KE11-A

Contents

| | |
|-------------|-------------------------|
| EK-KE11A-TM | KE11-A TECHNICAL MANUAL |
| EK-KE11A-OP | KE11-A USERS MANUAL |
| MP-0KE11-A0 | KE11-A, PRINT |

Diagnostic

| | |
|----------|--------------------|
| ZJ149-RB | KE11-A, DIAGNOSTIC |
|----------|--------------------|

KIT NAME: KE11-B, DOCUMENTS

Kit Number: FB-KE11-B

Contents

| | |
|-------------|---------------------------|
| EK-KE11B-MM | KE11-B MAINTENANCE MANUAL |
| EK-KE11B-OP | KE11-B USERS MANUAL |
| MP-0KE11-B0 | KE11-B, PRINT |

Diagnostic

| | |
|----------|--------------------|
| ZJ188-RB | KE11-B, DIAGNOSTIC |
|----------|--------------------|

KIT NAME: KE11-E, DOCUMENTS

Kit Number: FB-KE11-E

Contents

| | |
|-------------|-----------------------|
| EK-KE11E-OP | KE11-E/F USERS MANUAL |
| MP-OKE11-E0 | KE11-E, PRINT |

Diagnostic

| | |
|----------|--------------------|
| ZR102-RB | KE11-E, DIAGNOSTIC |
|----------|--------------------|

KIT NAME: KE11-F, DOCUMENTS

Kit Number: FB-KE11-F

Contents

| | |
|-------------|---------------------------------|
| EK-KE11E-OP | KE11-E/F USERS MANUAL |
| EK-KE11E-TM | KE11-F/F INSTRUCTION SET MANUAL |
| MP-OKE11-F0 | KE11-F, PRINT |

Diagnostic

| | |
|----------|--------------------|
| ZP102-RB | KE11-F, DIAGNOSTIC |
|----------|--------------------|

KIT NAME: KE8-E, DOCUMENTS

Kit Number: FB-KE8-E

Contents

| | |
|-------------|--------------|
| MP-00KE8-E0 | KE8-E, PRINT |
|-------------|--------------|

Diagnostics

| | |
|----------|-------------------|
| ZF129-RB | KE-8E, DIAGNOSTIC |
|----------|-------------------|

KIT NAME: KE8-I, DOCUMENTS

Kit Number: FB-KE8-I

Contents

MP-00KE8-IO KE8-I, PRINT

KIT NAME: KEV11, DOCUMENTS

Kit Number: FB-KEV11

Contents

EK-KEV11-IP KEV11 INSTALLATION PROCEDURE
IPB
MP-KEV11-00 KEV11, PRINT

Diagnostic

ZJ245-RB KEV11, DIAGNOSTIC

KIT NAME: KG11-A, DOCUMENTS

Kit Number: FB-KG11-A

Contents

EK-KG11A-TM KG11-A EXCLUSIVE DR/CRC MANUAL
EK-KG11A-OP KG11-A USERS MANUAL
MP-0KG11-A0 KG11-A, PRINT

Diagnostic

ZJ133-RB KG11-A, DIAGNOSTIC

KIT NAME: KG8, EA, DOCUMENTS

Kit Number: FB-KG8-EA

Contents

MP-00KG8-EA KG8-EA, PRINT

Diagnostic

ZF141-RB KG8-EA, DIAGNOSTIC

KIT NAME: KJ11-A, DOCUMENTS

Kit Number: FB-KJ11-A

Contents

MP-OKJ11-00 KJ11, PRINT

Diagnostic

ZR102-RB KJ11, DIAGNOSTIC

KIT NAME: KL8-A DOCUMENTS

Kit Number: FB-KL8-A

Contents

EK-KL80A-OP KL8-A USERS MANUAL

MP-00KL8-A0 KL8-A, PRINT

Diagnostic

ZF225-RB KL8-A, DIAGNOSTIC

KIT NAME: KL8-E, DOCUMENTS

Kit Number: FB-KL8-E

Contents

| | |
|-------------|--------------------------------|
| EK-8E002-MM | PDP-8/E/F/M MAINTENANCE MANUAL |
| MP-00KL8-E0 | KL8-E, PRINT |

Diagnostic

| | |
|----------|-------------------|
| ZF142-RB | KL8-E, DIAGNOSTIC |
|----------|-------------------|

KIT NAME: KL8-JA, DOCUMENTS

Kit Number: FB-KL8-JA

Contents

| | |
|-------------|-------------------------------------|
| EK-KL8JA-TM | KL8-JA TERMINAL TECHNICAL MANUAL |
| MP-00KL8-JA | KL8-JA, PRINT |

Diagnostic

| | |
|----------|--------------------|
| ZF144-RB | KL8-JA, DIAGNOSTIC |
|----------|--------------------|

KIT NAME: KL8-KA, DOCUMENTS

Kit Number: FB-KL8-KA

Contents

| | |
|-------------|---------------|
| MP-00KL8-KA | KL8-KA, PRINT |
|-------------|---------------|

KIT NAME: KL8-KB, DOCUMENTS

Kit Number: FB-KL8-KB

Contents

MP-00KL8-KB KL8-KB, PRINT

KIT NAME: KL8-KC, DOCUMENTS

Kit Number: FB-KL8-KC

Contents

MP-00KL8-KC KL8-KC, PRINT

KIT NAME: KL8-KD, DOCUMENTS

Kit Number: FB-KL8-KD

Contents

MP-00KL8-KD KL8-KD, PRINT

KIT NAME: KL8-M, DOCUMENTS

Kit Number: FB-KL8-M

Contents

MP-00KL8-MO KL8-M, PRINT

Diagnostic

ZF145-RB KL8M, DIAGNOSTIC

KIT NAME: KM8-AA, DOCUMENTS

Kit Number: FB-KM8-AA

Contents

MP-00KM8-A0 KM8-A, PRINT

Diagnostic

ZF209-RB KM8-A, DIAGNOSTIC

KIT NAME: KM8-E, DOCUMENTS

Kit Number: FB-KM8-E

Contents

EK-8E002-MM PDP-8/E/F/M MAINTENANCE MANUAL
MP-00KM8-E0 KM8-E, PRINT

Diagnostic

ZF146-RB KM8-E, DIAGNOSTIC

KIT NAME: KMC11-A, DOCUMENTS

Kit Number: FB-KMC11

Contents

EK-KMC11-OP KMC11 MICROPROCESSOR USERS
MANUAL
MP-00339-00 KMC11, PRINT

KIT NAME: KP8-E, DOCUMENTS

Kit Number: FB-KP8-E

Contents

EK-8E003-MM PDP-8/E/F/M MAINTENANCE MANUAL
MP-0KP8E-00 KP8-E, PRINT

KIT NAME: KP8-I, DOCUMENTS

Kit Number: FB-KP8-I

Contents

MP-00KP8-10 KP8-I, PRINT

KIT NAME: KP8-L, DOCUMENTS

Kit Number: FB-KP8-L

Contents

MP-00KP8-L0 KP8-L, PRINT

KIT NAME: KT11-C, DOCUMENTS

Kit Number: FB-KT11-C

Contents

| | |
|-------------|------------------------------|
| EK-KT11C-MM | KT11-C/CD MAINTENANCE MANUAL |
| EK-KT11C-OP | KT11-C/CD USERS MANUAL |
| MP-OKT11-C0 | KT11-C, PRINT |

Diagnostic

| | |
|----------|--------------------|
| ZR104-RB | KT11-C, DIAGNOSTIC |
|----------|--------------------|

KIT NAME: KT11-D, DOCUMENTS

Kit Number: FB-KT11-D

Contents

| | |
|-------------|---|
| EK-KT11D-TM | KT11-D MEMORY MANAGEMENT OPTION MANUAL |
| EK-KT11D-OP | KT11-D OPTION USERS MANUAL |
| MP-OKT11-D0 | KT11-D, PRINT |

Diagnostic

| | |
|----------|--------------------|
| ZP103-RB | KT11-D, DIAGNOSTIC |
|----------|--------------------|

KIT NAME: KW11-K, DOCUMENTS

Kit Number: FB-KW11-K

Contents

| | |
|-------------|---------------------------------------|
| EK-KW11K-OP | KW11-K REAL TIME CLOCK USER MANUAL |
| MP-OKW11-K0 | KW11-K, PRINT |

(Continued on Next Page)

KIT NAME: KW11-K, DOCUMENTS (Continued)

Diagnostic

ZJ217-RB KW11-K, DIAGNOSTIC

KIT NAME: KW11-L, DOCUMENTS

Kit Number: FB-KW11-L

Contents

EK-KW11L-TM KW11-L LINE TIME CLOCK MANUAL
MP-OKW11-L0 KW11-L, PRINT

Diagnostic

ZJ137-RB KW11, DIAGNOSTIC

KIT NAME: KW11-P, DOCUMENTS

Kit Number: FB-KW11-P

Contents

EK-KW11P-MM KW11-P CLOCK MANUAL (ETCH REV
F & UP)
EK-KW1PF-OP KW11-P CLOCK USERS MANUAL
MP-OKW11-P0 KW11-P, PRINT

Diagnostic

ZJ138-RB KW11-P, DIAGNOSTIC

KIT NAME: KW11-W, DOCUMENTS

Kit Number: FB-KW11-W

Contents

EK-KW11W-TM KW11-W WATCHBOG TIMER MANUAL
MP-0KW11-W0 KW11-W, PRINT

Diagnostic

ZJ206-RB KW11-W, DIAGNOSTIC

KIT NAME: KWV11-A, DOCUMENTS

Kit Number: FB-KWV11-A

Contents

MP-KWV11-00 KWV11, PRINT

Diagnostic

ZJ247-RB KWV11, DIAGNOSTIC

KIT NAME: KY11-C, DOCUMENTS

Kit Number: FB-KY11-C

Contents

EK-KY11C-TD KY11C PROGRAMMERS CONSOLE
MANUAL
MP-OKY11-C0 KY11-C, PRINT

KIT NAME: KY11-LA, DOCUMENTS

Kit Number: FB-KY11-LA

Contents

| | |
|-------------|--------------------|
| EK-KY11L-IP | KY11-L CONSOLE IPB |
| MP-00017-00 | KY11-LA, PRINT |

KIT NAME: KY11-LB, DOCUMENTS

Kit Number: FB-KY11-LB

Contents

| | |
|--------------|----------------------------|
| EK-KY11LB-MM | KY11-LB MAINTENANCE MANUAL |
| MP-00015-00 | KY11-LB, PRINT |

KIT NAME: LA11-PA, PB, PC, PD, DOCUMENTS

Kit Number: FB-LA11-P

Contents

| | |
|-------------|--------------------------------|
| EK-LP11S-OP | LP11/LS11 USER'S MANUAL |
| EK-OLP11-TM | LP11/LS11/LA11 LINE PRINTER |
| EK-LA180-IP | LA180 DECPRINTER I IPB |
| EK-LA180-MM | LA180 DECPRINTER I MAINTENANCE |
| EK-LA180-OP | LA180 USER'S MANUAL |
| MP-OLA11-00 | LA11, PRINT |
| MP-LA180-00 | LA180, PRINT |

Diagnostic

| | |
|----------|-------------------|
| ZJ207-RB | LA180, DIAGNOSTIC |
|----------|-------------------|

KIT NAME: LA180, DOCUMENTS

Kit Number: FB-LA180

Contents

| | |
|-------------|--------------------------------|
| EK-LA180-IP | LA180 DECPRINTER I IPB |
| EK-LA180-MM | LA180 DECPRINTER I MAINTENANCE |
| EK-LA180-OP | LA180 USERS MANUAL |

Diagnostic

| | |
|----------|-------------------|
| ZJ207-RB | LA180, DIAGNOSTIC |
|----------|-------------------|

KIT NAME: LA35, DOCUMENTS

Kit Number: FB-LA35

Contents

| | |
|-------------|-----------------------|
| EK-OLA35-IP | LA35 DECWRITER II IPB |
| EK-LA365-OP | LA36/35 USERS MANUAL |
| MP-OLA35-00 | LA35, PRINT |

Diagnostic

| | |
|----------|------------------|
| ZJ183-RB | LA36, DIAGNOSTIC |
|----------|------------------|

KIT NAME: LA36, DOCUMENTS

Kit Number: FB-LA36

Contents

| | |
|-------------|-------------------------------|
| EK-OLA36-IP | LA36 DECWRITER II IPB |
| EK2LA36-MM | LA36 MAINTENANCE MANUAL |
| EK-1LA36-MM | LA36 MAINTENANCE MANUAL VOL I |
| MP-OLA36-00 | LA36, PRINT |

Diagnostic

| | |
|----------|------------------|
| ZJ183-RB | LA36, DIAGNOSTIC |
|----------|------------------|

KIT NAME: LA8, PA, PB, PC, PD, DOCUMENTS

Kit Number: FB-LA8-P

Contents

| | |
|-------------|--------------------------------|
| EK-LA180-IP | LA180 DECPRINTER I IPB |
| EK-LA180-MM | LA180 DECPRINTER I MAINTENANCE |
| EK-LA180-OP | LA180 USER'S MANUAL |
| MP-00075-00 | LA8-P, PRINT |

Diagnostic

| | |
|----------|-------------------|
| ZF224-RB | LA180, DIAGNOSTIC |
|----------|-------------------|

KIT NAME: LAV11, PA, PD, DOCUMENTS

Kit Number: FB-LAV11-P

Contents

| | |
|-------------|--------------------------------|
| EK-LAV11-OP | LAV11 USERS MANUAL |
| EK-LA180-IP | LA180 DECPRINTER I IPB |
| EK-LA180-MM | LA180 DECPRINTER I MAINTENANCE |
| EK-LA180-OP | LA180 USER'S MANUAL |
| MP-LA180-00 | LA180, PRINT |
| MP-M7949-00 | M7949, PRINT |

Diagnostic

| | |
|----------|-------------------|
| ZJ207-RB | LA180, DIAGNOSTIC |
|----------|-------------------|

KIT NAME: LAXX, NW, NX, NY, DOCUMENTS

Kit Number: FB-LAXX-N

Contents

| | |
|-------------|---|
| EK-LAXXN-OP | LAXX-NW/NX/NY INTERFACE USERS MANUAL |
| MP-00248-00 | LAXX-NW, PRINT |

KIT NAME: LK02, DOCUMENTS

Kit Number: FB-LK02

Contents

| | |
|-------------|-------------------|
| 941182 | LK02 KEYBOARD IPB |
| MP-0LK02-00 | LK02, PRINT |

KIT NAME: LK03, A DOCUMENTS

Kit Number: FB-LK03-A

Contents

| | |
|-------------|---------------------|
| EK-LK03A-IP | LK03-A KEYBOARD IPB |
| MP-0LK03-A0 | LK03-A, PRINT |

KIT NAME: LK11, A, B, DOCUMENTS

Kit Number: FB-LK11

Contents

| | |
|-------------|---|
| EK-OLK11-IP | LK11 KEYBOARD IPB |
| EK-OLK11-TM | KL11 PUSHBUTTON OPTION TECHNICAL MANUAL |
| EK-OLK11-OP | LK11 PUSHBUTTON OPTION USERS MANUAL |
| MP-OLK11-00 | LK11, PRINT |

Diagnostic

| | |
|----------|-------------------|
| ZF227-RB | LK11A, DIAGNOSTIC |
|----------|-------------------|

KIT NAME: LK40, A, B, DOCUMENTS

Kit Number: FB-LK40

Contents

| | |
|-------------|--------------------------------|
| 94I185A | LK40 KEYBOARD IPB |
| EK-LK40B-TB | LKA40-A/B/C/D/ KEYBOARD MANUAL |
| MP-OLK40-00 | LK40, PRINT |

KIT NAME: LP100, DOCUMENTS

Kit Number: FB-LP100

Contents

| | |
|-------------|----------------------------------|
| EK-LP100-MM | LP100 LINE PRINTER SYSTEM MANUAL |
| MP-00201-00 | LP100, PRINT |

KIT NAME: LP11, RA, RB, SA, DOCUMENTS

Kit Number: FB-LP11-1

Contents

| | |
|-------------|-----------------------------|
| EK-LP11S-OP | LP11/LS11 USER'S MANUAL |
| EK-OLP11-TM | LP11/LS11/LA11 LINE PRINTER |
| MP-OLP11-00 | LP11, PRINT |

Diagnostic

| | |
|----------|------------------|
| ZJ142-RB | LP11, DIAGNOSTIC |
|----------|------------------|

KIT NAME: LP11, V, W, Y, Z DOCUMENTS

Kit Number: FB-LP11

Contents

| | |
|-------------|-----------------------------|
| EK-LP11S-OP | LP11/LS11 USERS MANUAL |
| EK-OLP11-TM | LP11/LS11/LA11 LINE PRINTER |
| MP-OLP11-00 | LP11, PRINT |
| MP-OLP05-00 | LP05, PRINT |

Diagnostic

| | |
|----------|------------------------|
| ZJ178-RB | LP11, LP05, DIAGNOSTIC |
|----------|------------------------|

KIT NAME: LPD11, AA, AB, DOCUMENTS

Kit Number: FB-LPD11-A

Contents

| | |
|-------------|--|
| EK-LPD11-MM | LPD-11 INTERFACE MAINTENANCE MANUAL |
| MP-LPD11-00 | LPD11, PRINT |

Diagnostic

| | |
|----------|-------------------|
| ZJ176-RB | LPD11, DIAGNOSTIC |
|----------|-------------------|

KIT NAME: LPS11, SA, SB, SC, DOCUMENTS

Kit Number: FB-LPS11

Contents

| | |
|-------------|----------------------------|
| EK-LPS11-MM | LPS11-S MAINTENANCE MANUAL |
| MP-LPS11-00 | LPS11, PRINT |

Diagnostic

LPS-11, DIAGNOSTIC

KIT NAME: LPV11, VA, VB, VC, VD, DOCUMENT

Kit Number: FB-LPV11-V

Contents

| | |
|-------------|--------------------------------------|
| EK-LPV11-OP | LPV11 PRINTER SYSTEM USERS MANUAL |
| MP-00467-00 | LPV11-V, PRINT |

KIT NAME: LQP8, EA, DOCUMENTS

Kit Number: FB-LQP8-E

Contents

| | |
|-------------|--------------------------------|
| EK-OLQP8-TM | LQP8 PRINTER SYSTEMS TECHNICAL |
| MP-OLQP8-00 | LQP8, PRINT |

KIT NAME: LS120, HE, HJ, DOCUMENTS

Kit Number: FB-LS120-H

Contents

| | |
|-------------|--------------------------------------|
| EK-LS120-IP | LS120 ILLUSTRATED PARTS BREAKDOWN |
| EK-LS120-UG | LS120 USERS GUIDE |
| MP-00322-00 | LS120, PRINT |

KIT NAME: LT33, DOCUMENTS

Kit Number: FB-LT33

Contents

| | |
|-------------|---|
| 99H195 | LT33 UNPACKING AND INSTALL PROCEDURE |
| MP-0LT33-00 | LT33, PRINT |

KIT NAME: M7850, DOCUMENTS

Kit Number: FB-M7850

Contents

| | |
|-------------|--------------------------|
| EK-M7850-TM | M7850 MAINTENANCE MANUAL |
| MP-M7850-00 | M7850, PRINT |

KIT NAME: M9301, Y, DOCUMENTS

Kit Number: FB-M9301-Y

Contents

| | |
|-------------|-------------------------------------|
| EK-M9301-TM | M9301 BOOTSTRAP TECHNICAL MANUAL |
| MP-00196-00 | M9301, PRINT |

Diagnostic

| | |
|----------|-------------------|
| ZJ232-RB | M9301, DIAGNOSTIC |
|----------|-------------------|

KIT NAME: MC8, EJ, DOCUMENTS

Kit Number: FB-MC8-EJ

Contents

| | |
|-------------|---------------|
| MP-0KM8E-00 | KM8E, PRINT |
| MP-00MM8-EJ | MM8-EJ, PRINT |

Diagnostic

| | |
|----------|-------------------|
| ZF146-RB | KM8-E, DIAGNOSTIC |
|----------|-------------------|

KIT NAME: ME11, LA, LB, LE, DOCUMENTS

Kit Number: FB-ME11-L

Contents

| | |
|-------------|-------------------------------------|
| EK-ME11L-TM | ME11-L CORE MEMORY SYSTEM MANUAL |
| EK-ME11L-OP | ME11-L CORE MEMORY USER'S MANUAL |
| MP-0ME11-L0 | ME11-L, PRINT |

Diagnostic

| | |
|----------|------------------|
| ZJ147-RB | MM11, DIAGNOSTIC |
|----------|------------------|

KIT NAME: MF11, L, DOCUMENTS

Kit Number: FB-MF11-L

Contents

| | |
|-------------|---|
| EK-MM11S-TM | MM1-S/L/LP CORE MEMORY SYSTEM |
| EK-MM11S-OP | MM11-S/L/OP CORE MEMORY USERS MANUAL |
| MP-MM11E-00 | MF11-L, PRINT |

Diagnostic

| | |
|----------|--------------------|
| ZJ195-RB | MF11UP, DIAGNOSTIC |
|----------|--------------------|

KIT NAME: MF11, LP, DOCUMENTS

Kit Number: FB-MF11-LP

Contents

| | |
|-------------|---|
| EK-MM11S-TM | MM11-S/L/LP CORE MEMORY SYSTEM |
| EK-MM11S-OP | MM11-S/L/OP CORE MEMORY USERS MANUAL |
| MP-OMF11-LP | MF11-LP, PRINT |

Diagnostic

| | |
|----------|--------------------|
| ZJ195-RB | MF11UP, DIAGNOSTIC |
|----------|--------------------|

KIT NAME: ME15, DOCUMENTS

Kit Number: FB-ME15

Contents

| | |
|-------------|--|
| EK-OME15-MM | ME15 CORE MEMORY MAINTENANCE MANUAL |
| MP-OME15-00 | ME15, PRINT |

KIT NAME: MF11, U, UP, UR, US, DOCUMENTS

Kit Number: FB-MF11-U

Contents

| | |
|-------------|---------------|
| MP-OMF11-U0 | MF11-U, PRINT |
|-------------|---------------|

Diagnostic

| | |
|----------|---------------------|
| ZJ195-RB | MF11-UP, DIAGNOSTIC |
|----------|---------------------|

KIT NAME: MF11, WP, DOCUMENTS

Kit Number: FB-MF11-WP

Contents

| | |
|-------------|------------------------------|
| EK-MF11W-MM | MF11-W-WP MAINTENANCE MANUAL |
| EK-MF11W-OP | MF11-W/WP USERS MANUAL |
| MP-00034-00 | MF11-W, PRINT |

Diagnostic

| | |
|----------|--------------------|
| ZJ195-RB | MF11UP, DIAGNOSTIC |
|----------|--------------------|

KIT NAME: MF15, DOCUMENTS

Kit Number: FB-MF15

Contents

| | |
|-------------|--|
| EK-MF15U-MM | MF15-U CORE MEMORY MAINTENANCE MANUAL |
| MP-OMF15-00 | MF15, PRINT |

KIT NAME: MG10, HA, DOCUMENTS

Kit Number: FB-MG10-HA

Contents

| | |
|-------------|-------------|
| MP-OMG10-00 | MG10, PRINT |
|-------------|-------------|

KIT NAME: MI8, DOCUMENTS

Kit Number: FB-MI8

Contents

EK-8E002-MM PDP-8E/F/M MAINTENANCE MANUAL
MP-00MI8-E0 MI8-E, PRINT

Diagnostic

ZJ159-RB MI8-E, DIAGNOSTIC

KIT NAME: MJ11, DOCUMENTS

Kit Number: FB-MJ11

Contents

EK-0MJ11-MM MJ11 MEMORY SYSTEM
MAINTENANCE MANUAL
EK-0MJ11-OP MJ11 MEMORY SYSTEM USERS
MANUAL
MP-0MJ11-00 MJ11, PRINT

Diagnostic

ZR106-RB FP11, DIAGNOSTIC

KIT NAME: MM11, CP, DOCUMENTS

Kit Number: FB-MM11-CP

Contents

EK-MM11C-TM MM11-C/CP MANUAL (INCLUDES
MM11-B/BP)
MP-MM11C-00 MM11-C, PRINT

Diagnostic

ZJ195-RB MF11-UP, DIAGNOSTIC

KIT NAME: MM11, DP, DOCUMENTS

Kit Number: FB-MM11-DP

Contents

| | |
|-------------|--|
| EK-MM11D-TM | MM11/D/DP CORE MEMORY MANUAL |
| EK-MM11D-OP | MM11-D/DP CORE MEMORY USER'S MANUAL |
| MP-MM11D-P0 | MM11-DP, PRINT |

Diagnostic

| | |
|----------|---------------------|
| ZJ195-RB | MF11-UP, DIAGNOSTIC |
|----------|---------------------|

KIT NAME: MM11, E, DOCUMENTS

Kit Number: FB-MM11-E

Contents

| | |
|-------------|------------------------------------|
| EK-MM11E-TM | MM11-E CORE MEMORY MANUAL |
| EK-MM11E-OP | MM11-E CORE MEMORY USERS MANUAL |
| MP-MM11E-00 | MM11-E, PRINT |

Diagnostic

| | |
|----------|---------------------|
| ZJ195-RB | MF11-UP, DIAGNOSTIC |
|----------|---------------------|

KIT NAME: MM11, F, DOCUMENTS

Kit Number: FB-MM11-F

Contents

| | |
|-------------|------------------------------------|
| 19H323 | MM11-F CORE MEMORY MANUAL |
| EK-MM11F-OP | MM11-F CORE MEMORY USERS MANUAL |
| MP-0MM11-F0 | MM11-F, PRINT |

Diagnostic

| | |
|----------|---------------------|
| ZJ195-RB | MF11-UP, DIAGNOSTIC |
|----------|---------------------|

KIT NAME: MM11, L, DOCUMENTS

Kit Number: FB-MM11-L

Contents

| | |
|-------------|---|
| EK-MM11S-TM | MM11-S/L/LP CORE MEMORY SYSTEM |
| EK-MM11S-OP | MM11-S/L/OP CORE MEMORY USERS MANUAL |
| MP-MM11L-00 | MM11-L, PRINT |

Diagnostic

| | |
|----------|---------------------|
| ZJ195-RB | MF11-UP, DIAGNOSTIC |
|----------|---------------------|

KIT NAME: MM11, LP, DOCUMENTS

Kit Number: FB-MM11-LP

Contents

| | |
|-------------|---|
| EK-MM11S-TM | MM11-S/L/LP CORE MEMORY SYSTEM |
| EK-MM11S-OP | MM11-S/L/OP CORE MEMORY USERS MANUAL |
| MP-MM11L-P0 | MM11-LP, PRINT |

Diagnostic

| | |
|----------|--------------------|
| ZJ195-RB | MF11UP, DIAGNOSTIC |
|----------|--------------------|

KIT NAME: MM11, S, DOCUMENTS

Kit Number: FB-MM11-S

Contents

| | |
|-------------|---|
| EK-MM11S-TM | MM11-S/L/LP CORE MEMORY SYSTEM |
| EK-MM11S-OP | MM11-S/L/OP CORE MEMORY USERS MANUAL |
| MP-MM11S-00 | MM11-S, PRINT |

Diagnostic

| | |
|----------|--------------------|
| ZJ195-RB | MF11UP, DIAGNOSTIC |
|----------|--------------------|

KIT NAME: MM11, U, DOCUMENTS

Kit Number: FB-MM11-U

Contents

| | |
|-------------|---------------|
| MP-MM11U-00 | MM11-U, PRINT |
|-------------|---------------|

Diagnostic

| | |
|----------|---------------------|
| ZJ195-RB | MF11-UP, DIAGNOSTIC |
|----------|---------------------|

KIT NAME: MM11, UP, DOCUMENTS

Kit Number: FB-MM11-UP

Contents

MP-MM11U-P0 MM11-UP, PRINT

Diagnostic

ZJ195-RB MF11-UP, DIAGNOSTIC

KIT NAME: MM11, WP, DOCUMENTS

Kit Number: FB-MM11-WP

Contents

EK-MF11W-MM MF11-W/WP MAINTENANCE MANUAL
EK-MF11W-OP MF11-W/WP USERS MANUAL
MP-00034-00 MF11-W, PRINT

Diagnostic

ZJ195-RB MF11-UP, DIAGNOSTIC

KIT NAME: MM8, EJ, DOCUMENTS

Kit Number: FB-MM8-EJ

Contents

MP-MM8EJ-00 MM8-EJ, PRINT
MP-00MR8-E0 MR8-E, PRINT

Diagnostic

ZF146-RB KM8E, DIAGNOSTIC
ZF165-RB MR8-E, DIAGNOSTIC

KIT NAME: MR8, A, DOCUMENTS

Kit Number: FB-MR8-A

Contents

MP-00MR8-A0 MR8-A, PRINT

Diagnostic

ZF211-RB MR8-A, DIAGNOSTIC

KIT NAME: MR8, EC, DOCUMENTS

Kit Number: FB-MR8-EC

Contents

MP-00MR8-E0 MR8-E, PRINT

Diagnostic

ZF165-RB MR8-E, DIAGNOSTIC

KIT NAME: MR8, FB, DOCUMENTS

Kit Number: FB-MR8-FB

Contents

MP-00MR8-F0 MR8-F, PRINT

Diagnostic

ZF196-RB MR8-FB, DIAGNOSTIC

KIT NAME: MR8, SL, DOCUMENTS

Kit Number: FB-MR8-SL

Diagnostic

ZF195-RB MR8-SL, DIAGNOSTIC

KIT NAME: MRV11, AA, DOCUMENTS

Kit Number: FB-MRV11-AA

Contents

MP-00066-00 MRV11-A, PRINT

KIT NAME: MRV11, BA, DOCUMENTS

Kit Number: FB-MRV11-B

Contents

EK-MRV11-TM MRV11-BA LSI-11 UV PROM-RAM US
MP-00354-00 MRV11-BA, PRINT

KIT NAME: MS11, AP, DOCUMENTS

Kit Number: FB-MS11-AP

Contents

| | |
|-------------|-------------------------------|
| EK-MS11A-MM | MS11-A/B/C MAINTENANCE MANUAL |
| EK-MS11A-OP | MS11-A/B/C USERS MANUAL |
| MP-OMS11-A0 | MS11-A, PRINT |

Diagnostic

| | |
|----------|---------------------|
| ZR108-RB | MS11-CP, DIAGNOSTIC |
|----------|---------------------|

KIT NAME: MS11, BC, BD, BR, BT, DOCUMENTS

Kit Number: FB-MS11-B

Contents

| | |
|-------------|-------------------------------|
| EK-MS11A-MM | MS11/A/B/C MAINTENANCE MANUAL |
| EK-MS11A-OP | MS11-A/B/C USERS MANUAL |
| MP-OMS11-B0 | MS11-B, PRINT |

Diagnostic

| | |
|----------|-----------------------|
| ZR108-RB | MS11-C/CP, DIAGNOSTIC |
|----------|-----------------------|

KIT NAME: MS11, CC, DOCUMENTS

Kit Number: FB-MS11-CC

Contents

| | |
|-------------|-------------------------------|
| EK-MS11A-MM | MS11-A/B/C MAINTENANCE MANUAL |
| EK-MS11A-OP | MS11-A/B/C USERS MANUAL |
| MP-OMS11-C0 | MS11-C, PRINT |

Diagnostic

| | |
|----------|---------------------|
| ZR108-RB | MS11-CP, DIAGNOSTIC |
|----------|---------------------|

KIT NAME: MS11, FP, DOCUMENTS

Kit Number: FB-MS11-FP

Contents

| | |
|-------------|---|
| EK-MS11E-MM | MS11-E/J MOS MEMORY MAINTENANCE MANUAL |
| EK-MS11E-OP | MS11-E/J MOS MEMORY USERS MANUAL |
| MP-OMS11-F0 | MS11-F, PRINT |

Diagnostic

| | |
|----------|-------------------|
| ZR106-RB | MF11P, DIAGNOSTIC |
|----------|-------------------|

KIT NAME: MS11, JP, DOCUMENTS

Kit Number: FB-MS11-JP

Contents

| | |
|-------------|---|
| EK-MS11E-MM | MS11-E/J MOS MEMORY MAINTENANCE MANUAL |
| EK-MS11E-OP | MS11-E/J MOS MEMORY USERS MANUAL |
| MP-00021-00 | MS11-E, PRINT |

Diagnostic

| | |
|----------|-------------------|
| ZR106-RB | MF11P, DIAGNOSTIC |
|----------|-------------------|

KIT NAME: MS8, A, DOCUMENTS

Kit Number: FB-MS8-A

Contents

| | |
|-------------|------------------------------|
| EK-8A001-OP | PDP-8/A OPERATORS HANDBOOK |
| EK-8A002-MM | PDP-8A, MINIPROCESSORS USERS |
| MP-00MS8-A0 | MS8-A PRINT |

KIT NAME: MS8, CA, CB, DOCUMENTS

Kit Number: FB-MS8-C

Contents

| | |
|-------------|--------------------------|
| EK-OMS8C-TM | MS8-C MAINTENANCE MANUAL |
| MP-00447-00 | MS8-C, PRINT |

KIT NAME: MSV11, B, DOCUMENTS

Kit Number: FB-MSV11-B

Contents

| | |
|-------------|----------------|
| MP-00067-00 | MSV11-B, PRINT |
|-------------|----------------|

KIT NAME: MSV11, CD, DOCUMENTS

Kit Number: FB-MSV11-C

Contents

| | |
|-------------|----------------------|
| EK-MSV11-OP | MSV11-C USERS MANUAL |
| EK-OPC11-TM | PC11 SYSTEM MANUAL |
| EK-OPC11-OP | PC11 USERS MANUAL |
| MP-MSV11-00 | MSV11, PRINT |
| MP-OPC11-00 | PC11, PRINT |
| MP-PC040-50 | PC04/5, PRINT |

Diagnostic

| | |
|----------|------------------|
| ZJ151-RB | PC11, DIAGNOSTIC |
|----------|------------------|

KIT NAME: MX10, C, DOCUMENTS

Kit Number: FB-MX10-C

Contents

| | |
|-------------|-------------|
| MP-OMX10-00 | MX10, PRINT |
|-------------|-------------|

KIT NAME: NCS11, DOCUMENTS

Kit Number: FB-NCS11

Contents

| | |
|-------------|---------------------------------------|
| EK-ICS11-MM | ICS-11 MAINTENANCE MANUAL |
| EK-861AB-MM | 861-A/B/C/D/E/F MAINTENANCE MANUAL |
| EK-861AB-OP | 861-A/B/C/D/E/F POWER CONTROLLER |
| EK-00861-IP | 861-A/B/C/D/E/F POWER IPB |

(Continued on Next Page)

KIT NAME: NCS11, DOCUMENTS (Continued)

Contents

| | |
|-------------|--------------|
| MP-00861-00 | 861, PRINT |
| MP-ICS11-00 | ICS11, PRINT |

Diagnostic

| | |
|----------|--------------------|
| ZJ191-RB | ICS-11, DIAGNOSTIC |
|----------|--------------------|

KIT NAME: NCS8, DOCUMENTS

Kit Number: FB-NCS8

Contents

| | |
|-------------|---------------------------------------|
| EK-OICS8-MM | ICS-8 MAINTENANCE MANUAL |
| EK-861AB-MM | 861-A/B/C/D/E/F MAINTENANCE MANUAL |
| EK-861AB-OP | 861-A/B/C/D/E/F POWER CONTROLLER |
| EK-00861-IP | 861-A/B/C/D/E/F POWER IPB |
| MP-00861-00 | 861, PRINT |
| MP-OICS8-10 | ICS8-1, PRINT |

KIT NAME: PA611, DOCUMENTS

Kit Number: FB-PA611

Contents

| | |
|-------------|--|
| 22H570 | PA611 READER PUNCH MAINTENANCE |
| EK-PA611-OP | PA611 READER/PUNCH CONTROL USERS MANUAL |
| MP-PA611-00 | PA611, PRINT |

KIT NAME: PA63, DOCUMENTS

Kit Number: FB-PA63

Contents

| | |
|-------------|-------------|
| MP-OPA63-00 | PA63, PRINT |
|-------------|-------------|

Diagnostic

| | |
|----------|------------------|
| ZF166-RB | PA63, DIAGNOSTIC |
|----------|------------------|

KIT NAME: PA68, F, DOCUMENTS

Kit Number: FB-PA68-F

Contents

| | |
|-------------|---------------|
| MP-OPA68-F0 | PA68-F, PRINT |
|-------------|---------------|

Diagnostic

| | |
|----------|--------------------|
| ZF166-RB | PA68-F, DIAGNOSTIC |
|----------|--------------------|

KIT NAME: PC11, A, DOCUMENTS

Kit Number: FB-PC11-A

Contents

| | |
|-------------|--------------------|
| EK-OPC11-TM | PC11 SYSTEM MANUAL |
| EK-OPC11-OP | PC11 USERS MANUAL |
| MP-OPC11-00 | PC11, PRINT |
| MP-PC040-50 | PC04/5 PRINT |

Diagnostic

| | |
|----------|------------------|
| ZJ15I-RB | PC11, DIAGNOSTIC |
|----------|------------------|

KIT NAME: PC8, DOCUMENTS

Kit Number; FB-PC8

Contents

| | |
|-------------|--------------|
| MP-00PC8-E0 | PC8-E, PRINT |
| MP-OPC04-00 | PC04, PRINT |

Diagnostic

| | |
|----------|-------------------|
| ZF171-RB | PC8-E, DIAGNOSTIC |
|----------|-------------------|

KIT NAME: PDL11, DOCUMENTS

Kit Number: FB-PDL11

Contents

| | |
|-------------|----------------------------|
| EK-PDL11-IN | PDL-11 INSTALLATION MANUAL |
| MP-PDL11-00 | PDL11, PRINT |

KIT NAME: PDM70, DOCUMENTS

Kit Number: FB-PDM70

Contents

| | |
|-------------|------------------------------------|
| 94H285 | PDM70 (KP20) MAINTENANCE MANUAL |
| EK-PDM70-MM | PDM70 MAINTENANCE MANUAL |
| EK-PDM70-OP | PDM70 USERS MANUAL |
| MP-PDM70-00 | PDM70, PRINT |

Diagnostic

| | |
|----------|-------------------|
| ZJ152-RB | PDM70, DIAGNOSTIC |
|----------|-------------------|

KIT NAME: PDP8E, DOCUMENTS

Kit Number: FB-PDP8E

Contents

| | |
|-------------|-----------------------------------|
| EK-PDP8E-IP | PDP-8/E 12 BIT COMPUTER IPB |
| EK-8E003-MM | PDP-8/E/F/M MAINTENANCE MANUAL |
| EK-8E002-MM | PDP-8/E/F/M MAINTENANCE MANUAL |
| EK-8E001-MM | PDP-8/E/F/M MAINTENANCE MANUAL |
| MP-00162-00 | PDP-8/E, PRINT |
| MP-00KM8-E0 | KM8-E, PRINT |
| MP-00MM8-EJ | MM8-EJ, PRINT |

Diagnostic

| | |
|----------|--------------------|
| ZF002-RB | PDP-8/E DIAGNOSTIC |
| ZF146-RB | KM8-E, DIAGNOSTIC |

KIT NAME: PDP8F, DOCUMENTS

Kit Number: FB-PDP8F

Contents

| | |
|-------------|--------------------------------|
| EK-8E001-MM | PDP-8/E/F/M MAINTENANCE MANUAL |
| MP-PDP8F-00 | PDP8F, PRINT |
| MP-00KM8-E0 | KM8-E, PRINT |
| MP-00MM8-EJ | MM8-EJ, PRINT |
| MP-KL8JA-00 | KL8JA, PRINT |

Diagnostic

| | |
|----------|---------------------|
| ZF002-RB | PDP-8/E, DIAGNOSTIC |
| ZF146-RB | KM8-E, DIAGNOSTIC |

KIT NAME: PDP8M, DOCUMENTS

Kit Number: FB-PDP8M

Contents

| | |
|-------------|--------------------------------|
| EK-8E001-MM | PDP-8/E/F/M MAINTENANCE MANUAL |
| MP-PDP8M-00 | PDP8M, PRINT |
| MP-00KM8-E0 | KM8-E, PRINT |
| MP-00MM8-EJ | MM8-EJ, PRINT |

Diagnostic

| | |
|----------|--------------------|
| ZF002-RB | PDP-8E, DIAGNOSTIC |
| ZF146-RB | KM8-E, DIAGNOSTIC |

KIT NAME: PMK01, DOCUMENTS

Kit Number: FB-PMK01

Contents

| | |
|-------------|--------------------------|
| EK-PMK01-MM | PMK01 MAINTENANCE MANUAL |
| MP-PMK01-00 | PMK01, PRINT |

KIT NAME: PR68, D, DA, DOCUMENTS

Kit Number: FB-PR68

Contents

| | |
|-------------|----------------------------|
| 941288 | PR68-D/DA PAPERTAPE READER |
| MP-0PR68-DA | PR68-DA, PRINT |
| MP-0BC01-H0 | BC01-H, PRINT |

KIT NAME: PR8, E, DOCUMENTS

Kit Number: FB-PR8

Contents

| | |
|-------------|---------------------------------------|
| EK-861AB-MM | 861-A/B/C/D/E/F MAINTENANCE MANUAL |
| EK-861AB-OP | 861-A/B/C/D/E/F POWER CONTROLLER |
| EK-00861-IP | 861-A/B/C/D/E/F POWER IPB |
| EK-RJS04-MM | RJS04/RJS03 MAINTENANCE MANUAL |
| EK-RJS04-OP | RJS04/RJS03 USERS MANUAL |
| 99H255 | PC04 MAINTENANCE MANUAL |
| 94I250 | PC04 PAPERTAPE READER/PUNCH |
| EK-PC405-MM | PC04/PC05 READER/PUNCH MANUAL |

(Continued on Next Page)

KIT NAME: PR8, E, DOCUMENTS (Continued)

Contents

| | |
|-------------|------------------------|
| EK-PC045-OP | PC04/PC05 USERS MANUAL |
| MP-00861-00 | 861, PRINT |
| MP-0RH11-00 | RH11, PRINT |
| MP-00073-00 | REV11, PRINT |

Diagnostic

| | |
|----------|-------------------|
| ZF171-RB | PC8-E, DIAGNOSTIC |
| ZJ155-RB | RH11, DIAGNOSTIC |

KIT NAME: PRS01, DOCUMENTS

Kit Number: FB-PRS01

Contents

| | |
|-------------|--------------------------|
| EK-PRS01-MM | PRS01 MAINTENANCE MANUAL |
| MP-00232-00 | PRS01, PRINT |

KIT NAME: REV11, A, C, DOCUMENTS

Kit Number: FB-REV11

Contents

MP-00073-00 REV11, PRINT

Diagnostic

ZJ232-RB M9301/M9400, DIAGNOSTIC

KIT NAME: RF11, AA, AB, DOCUMENTS

Kit Number: FB-RF11

Contents

EK-861AB-MM 861-A/B/C/D/E/F MAINTENANCE
MANUAL

EK-861AB-OP 861-A/B/C/D/E/F POWER CONTROLLER

EK-00861-IP 861-A/B/C/D/E/F POWER IPB

EK-ORF11-OP RF11/RS11 DEC DISK SYSTEM USER
MANUAL

EK-ORF11-TM RF11/RS11 DISK SYSTEM MANUAL

EK-RJS04-MM RJS04/RJS03 MAINTENANCE MANUAL

EK-RJS04-OP RJS04/RJS03 USERS MANUAL

MP-00861-00 861, PRINT

MP-ORH11-00 RH11, PRINT

MP-ORF11-00 RF11, PRINT

Diagnostic

ZJ154-RB RF11, DIAGNOSTIC

ZJ155-RB RH11, DIAGNOSTIC

KIT NAME: RF15, DOCUMENTS

Kit Number: FB-RF15

Contents

| | |
|-------------|------------------------------|
| 15H180 | RF15/RS09 MAINTENANCE MANUAL |
| MP-ORF15-00 | RF15, PRINT |

KIT NAME: RJP04, A, DOCUMENTS

Kit Number: FB-RJP04-A

Contents

| | |
|-------------|---|
| EK-ORP04-MM | RP04 DEVICE CONTROL LOGIC MAINTENANCE MANUAL |
| EK-ORP04-OP | RP04 DEVICE CONTROL LOGIC USERS MANUAL |
| EK-ORP04-IN | RP04 DISK DRIVE INSTALLATION |
| EK-ORP04-IP | RP04 DISK PACK DRIVE IPB |
| EK-RJP04-MM | RJP04 MAINTENANCE MANUAL |
| EK-RJP04-OP | RJP04 USERS MANUAL |
| MP-RJP04-A0 | RJP04A PRINT |
| MP-ORH11-00 | RH11, PRINT |

Diagnostic

| | |
|----------|----------------------|
| ZJ180-RB | RP04/5/6, DIAGNOSTIC |
|----------|----------------------|

KIT NAME: RJP04, B, DOCUMENTS

Kit Number: FB-RJP04-B

Contents

| | |
|-------------|---|
| EK-ORP04-MM | RP04 DEVICE CONTROL LOGIC MAINTENANCE MANUAL |
| EK-ORP04-OP | RP04 DEVICE CONTROL LOGIC USERS MANUAL |
| EK-ORP04-IN | RP04 DISK DRIVE INSTALLATION |
| EK-ORP04-IP | RP04 DISK PACK DRIVE IPB |
| EK-RJP04-MM | RJP04 MAINTENANCE MANUAL |
| EK-RJP04-OP | RJP04 USERS MANUAL |
| MP-RJP04-BO | RJP04-B, PRINT |
| MP-ORH11-00 | RH11, PRINT |

Diagnostic

| | |
|----------|----------------------|
| ZJ180-RB | RP04/5/6, DIAGNOSTIC |
|----------|----------------------|

KIT NAME: RJP04, C, DOCUMENTS

Kit Number: FB-RJP04-C

Contents

| | |
|-------------|---|
| EK-ORP04-MM | RP04 DEVICE CONTROL LOGIC MAINTENANCE MANUAL |
| EK-ORP04-OP | RP04 DEVICE CONTROL LOGIC USERS MANUAL |
| EK-ORP04-IN | RP04 DISK DRIVE INSTALLATION |
| EK-ORP04-IP | RP04 DISK PACK DRIVE IPB |
| EK-RJP04-MM | RJP04 MAINTENANCE MANUAL |
| EK-RJP04-OP | RJP04 USERS MANUAL |
| MP-RJP04-CO | RJP04-C, PRINT |
| MP-ORH11-00 | RH11, PRINT |

Diagnostic

| | |
|----------|---------------------|
| ZJ180-RB | RP04/5/6 DIAGNOSTIC |
|----------|---------------------|

KIT NAME: RJP05, AA, AB, DOCUMENTS

Kit Number: FB-RJP05-A

Contents

| | |
|-------------|-------------------------------|
| EK-RP056-IN | RJ05/RP06 INSTALLATION MANUAL |
| EK-RP056-MM | RP05/RP06 MAINTENANCE MANUAL |
| EK-RP056-OP | RP05/RP06 USERS MANUAL |
| EK-RJP05-MM | RJP05/06 MAINTENANCE MANUAL |
| MP-00113-00 | RJP05-A, PRINT |
| MP-00086-00 | RP05/06 PRINT |
| MP-ORH11-00 | RH11, PRINT |

Diagnostic

| | |
|----------|----------------------|
| ZJ180-RB | RP04/5/6, DIAGNOSTIC |
|----------|----------------------|

KIT NAME: RJP05, BA, BB, DOCUMENTS

Kit Number: FB-RJP05-B

Contents

| | |
|-------------|-------------------------------|
| EK-RJP05-MM | RJP05/06 MAINTENANCE MANUAL |
| EK-RP056-IN | RP05/RP06 INSTALLATION MANUAL |
| EK-RP056-MM | RP05/RP06 MAINTENANCE MANUAL |
| EK-RP056-OP | RP05/RP06 USERS MANUAL |
| MP-00086-00 | RP05/06 PRINT |
| MP-ORH11-00 | RH11, PRINT |
| MP-00114-00 | RJP05-B, PRINT |

Diagnostic

| | |
|----------|----------------------|
| ZJ180-RB | RP04/5/6, DIAGNOSTIC |
|----------|----------------------|

KIT NAME: RJP06, AA, AB, DOCUMENTS

Kit Number: FB-RJP06-A

Contents

| | |
|-------------|-------------------------------|
| EK-RP056-IN | RP05/RP06 INSTALLATION MANUAL |
| EK-RP056-MM | RP05/RP06 MAINTENANCE MANUAL |
| EK-RP056-OP | RP05/RP06 USERS MANUAL |
| MP-00086-00 | RP04/5/6, PRINT |
| MP-00116-00 | RJP06-A, PRINT |
| MP-ORH11-00 | RH11, PRINT |

Diagnostic

| | |
|----------|----------------------|
| ZJ180-RB | RP04/5/6, DIAGNOSTIC |
|----------|----------------------|

KIT NAME: RJP06, BA, BB, DOCUMENTS

Kit Number: FB-RJP06-B

Contents

| | |
|-------------|-------------------------------|
| EK-RP056-IN | RP05/RP06 INSTALLATION MANUAL |
| EK-RP056-MM | RP05/RP06 MAINTENANCE MANUAL |
| EK-RP056-OP | RP05/RP06 USERS MANUAL |
| MP-00086-00 | RP04/5/6, PRINT |
| MP-00117-00 | RJP06-B |
| MP-ORH11-00 | RH11, PRINT |

KIT NAME: RJS03, BA, BB, BC, BD, DOCUMENTS

Kit Number: FB-RJS03-B

Contents

| | |
|-------------|---------------------------------------|
| EK-RJS04-MM | RJS04/RJS03 MAINTENANCE MANUAL |
| EK-RJS04-OP | RJS04/RJS03 USERS MANUAL |
| EK-861AB-MM | 861-A/B/C/D/E/F MAINTENANCE MANUAL |
| EK-861AB-OP | 861-A/B/C/D/E/F POWER CONTROLLER |
| EK-00861-IP | 861-A/B/C/D/E/F POWER IPB |
| MP-0RH11-00 | RH11, PRINT |
| MP-00861-00 | 861, PRINT |
| MP-0RS03-00 | RS03, PRINT |
| MP-RJS03-00 | RJS03, PRINT |

Diagnostic

| | |
|----------|------------------|
| ZJ155-RB | RH11, DIAGNOSTIC |
|----------|------------------|

KIT NAME: RJS04, BA, BB, BC, BD, DOCUMENTS

Kit Number: FB-RJS04-B

Contents

| | |
|-------------|---------------------------------------|
| EK-RJS04-MM | RJS04/RJS03 MAINTENANCE MANUAL |
| EK-RJS04-OP | RJS04/RJS03 USERS MANUAL |
| EK-861AB-MM | 861-A/B/C/D/E/F MAINTENANCE MANUAL |
| EK-861AB-OP | 861-A/B/C/D/E/F POWER CONTROLLER |
| EK-00861-IP | 861-A/B/C/D/E/F POWER IPB |
| EK-ORS04-OP | RS04 DEC DISK USERS MANUAL |
| EK-ORS04-IP | RS04 DECDISK IPB |
| EK-ORS04-SV | RS04 DECDISK SERVICE MANUAL |
| MP-00861-00 | 861, PRINT |

(Continued on Next Page)

KIT NAME: RJS04, BA, BB, BC, BD, DOCUMENTS (Continued)

Contents

| | |
|-------------|----------------|
| MP-ORH11-00 | RH11, PRINT |
| MP-RJS04-B0 | RJS04-B, PRINT |
| MP-OH960-00 | H960, PRINT |

Diagnostic

| | |
|----------|------------------|
| ZJ155-RB | RH11, DIAGNOSTIC |
|----------|------------------|

KIT NAME: RK05, DOCUMENTS

Kit Number: FB-RK05

Contents

| | |
|-------------|--|
| EK-RJ5JF-MM | RK05/RK05J/RK05F MAINTENANCE MANUAL |
| EK-RK05X-MM | RK05 EXERCISER MAINTENANCE MANUAL |
| EK-ORK05-OP | RK05 DISK DRIVE USERS MANUAL |
| MP-00501-00 | RK05, PRINT |

KIT NAME: RK06, EA, DOCUMENTS

Kit Number: FB-RK06-EA

Contents

| | |
|-------------|---------------------------------------|
| EK-ORK06-IP | RK06 DISK DRIVE IPB |
| EK-ORK06-TD | RK06 TECHNICAL DESCRIPTION |
| EK-RK611-IP | RK611 CONTROLLER IPB |
| EK-RK611-TM | RK611 TECHNICAL DESCRIPTION MANUAL |
| EK-RK611-IN | RK611/RK06 INSTALLATION MANUAL |

(Continued on Next Page)

KIT NAME: RK06, EA, DOCUMENTS (Continued)

Contents

| | |
|-------------|--|
| EK-RK611-SV | RK611/RK06 SERVICE MANUAL |
| EK-RK611-OP | RK611/RK06 USERS MANUAL (CROSS PRODUCTS) |
| MP-00182-00 | RK06, PRINT |

Diagnostic

| | |
|----------|------------------|
| ZJF13-RB | RK06, DIAGNOSTIC |
|----------|------------------|

KIT NAME: RK06, ED, DOCUMENTS

Kit Number: FB-RK06-ED

Contents

| | |
|-------------|--|
| EK-RK611-IP | RK611 CONTROLLER IPB |
| EK-RK611-TM | RK611 TECHNICAL DESCRIPTION MANUAL |
| EK-RK611-IN | RK611/RK06 INSTALLATION MANUAL |
| EK-RK611-SV | RK611/RK06 SERVICE MANUAL |
| EK-RK611-OP | RK611/RK06 USERS MANUAL (CROSS PRODUCTS) |
| MP-00237-00 | RK06-E, PRINT |
| MP-00RK8-E0 | RK8-E, PRINT |
| MP-00182-00 | RK06, PRINT |

Diagnostic

| | |
|----------|-------------------|
| ZJF13-RB | RK06, DIAGNOSTIC |
| ZJ117-RB | RK8-E, DIAGNOSTIC |

KIT NAME: RK06, F, DOCUMENTS

Kit Number: FB-RK06-F

Contents

| | |
|-------------|---|
| EK-RK611-IP | RK611 CONTROLLER IPB |
| EK-RK611-TM | RK611 TECHNICAL DESCRIPTION MANUAL |
| EK-RK611-IN | RK611/RK06 INSTALLATION MANUAL |
| EK-RK611-SV | RK611/RK06 SERVICE MANUAL |
| EK-RK611-OP | RK611-RK06 USERS MANUAL (CROSS PRODUCTS) |
| EK-ORK06-IP | RK06 DISK DRIVE IPB |
| EK-ORK06-TD | RK06 TECHNICAL DESCRIPTION |
| MP-00239-00 | RK06-F, PRINT |
| MP-00238-00 | RK611-F, PRINT |
| MP-00182-00 | RK06, PRINT |

Diagnostic

| | |
|----------|------------------|
| ZJF13-RB | RK06, DIAGNOSTIC |
|----------|------------------|

KIT NAME: RK11J, AA, AB, BA, BB, DOCUMENTS

Kit Number: FB-RK11J

Contents

| | |
|-------------|--------------------------------------|
| EK-RK11D-OP | RK11-D RK11-E USERS MANUAL |
| EK-RK11D-MM | RK11-D/DE MOVING HEAD DISK MANUAL |
| EK-ORK05-OP | RK05 DISK DRIVE USERS MANUAL |
| EK-RK05X-MM | RK05 EXERCISER MAINTENANCE MANUAL |

(Continued on Next Page)

KIT NAME: RK11J, AA, AB, BA, BB, DOCUMENTS (Continued)

Contents

| | |
|-------------|--|
| EK-RK5JF-MM | RK05/RK05J/RK05F MAINTENANCE MANUAL |
| MP-00501-00 | RK05, PRINT |
| MP-0RK11-D0 | RK11-D, PRINT |

Diagnostic

| | |
|----------|-----------------------|
| ZJF06-RB | RK11/RK05, DIAGNOSTIC |
|----------|-----------------------|

KIT NAME: RK11J, DE, DJ, DOCUMENTS

Kit Number: FB-RK11J-D

Contents

| | |
|-------------|--|
| EK-ORK05-OP | RK05 DISK DRIVE USERS MANUAL |
| EK-RK05X-MM | RK05 EXERCISER MAINTENANCE MANUAL |
| EK-RK5JF-MM | RK05/RK05J/RK05F MAINTENANCE MANUAL |
| EK-RK11D-OP | RK11-D RK11-E USERS MANUAL |
| EK-RK11D-MM | RK11-D/DE MOVING HEAD DISK MANUAL |
| EK-861AB-MM | 861-A/B/C/D/E/F MAINTENANCE MANUAL |
| EK-861AB-OP | 861-A/B/C/D/E/F POWER CONTROLLER |
| EK-00861-IP | 861-A/B/C/D/E/F POWER IPB |
| MP-00861-00 | 861, PRINT |
| MP-00501-00 | RK05, PRINT |
| MP-0RK11-D0 | RK11-D, PRINT |

Diagnostic

| | |
|----------|-----------------------|
| ZJF06-RB | RK11/RK05, DIAGNOSTIC |
|----------|-----------------------|

KIT NAME: RK611, DOCUMENTS

Kit Number: FB-RK611

Contents

| | |
|-------------|---|
| EK-RK611-IP | RK611 CONTROLLER IPB |
| EK-RK611-TM | RK611 TECHNICAL DESCRIPTION MANUAL |
| EK-RK611-IN | RK611/RK06 INSTALLATION MANUAL |
| EK-RK611-SV | RK611/RK06 SERVICE MANUAL |
| EK-RK611-OP | RK611/RK06 USERS MANUAL (CROSS PRODUCTS) |
| MP-00105-00 | RK611, PRINT |

Diagnostic

| | |
|----------|------------------|
| ZJF13-RB | RK06, DIAGNOSTIC |
|----------|------------------|

KIT NAME: RK8J, EA, EB, ED, DOCUMENTS

Kit Number: FB-RK8J-E

Contents

| | |
|-------------|--|
| EK-ORK05-OP | RK05 DISK DRIVE USERS MANUAL |
| EK-RK05X-MM | RK05 EXERCISER MAINTENANCE MANUAL |
| EK-RK5JF-MM | RK05/RK05J/RK05F MAINTENANCE MANUAL |
| MP-00501-00 | RK05, PRINT |
| MP-00RK8-E0 | RK8-E, PRINT |

Diagnostic

| | |
|----------|-------------------|
| ZF177-RB | RK8-E, DIAGNOSTIC |
|----------|-------------------|

KIT NAME: RKV11, DE, DF, DH, DJ, DOCUMENTS

Kit Number: FB-RKV11-D

Contents

| | |
|-------------|----------------------|
| EK-RKV11-OP | RKV11-D USERS MANUAL |
| MP-00223-00 | RVK11-D, PRINT |

KIT NAME: RM03, DOCUMENTS

Kit Number: FB-RM03

Contents

| | |
|-------------|-----------------------------|
| EK-1RM03-TM | RM03 TECHNICAL MANUAL |
| EK-2RM03-TM | RM03 TECHNICAL MANUAL V-2 |
| EK-1RM03-TM | RM03 TECHNICAL MANUAL VOL 1 |
| MP-00350-00 | RM03 PRINT |

KIT NAME: RP02, DOCUMENTS

Kit Number: FB-RP02

Contents

| | |
|-------------|-----------------------|
| EK-RP02T-MM | RP02/03 TESTOR MANUAL |
| MP-ORP02-00 | RP02, PRINT |

KIT NAME: RP03, AS, BS DOCUMENTS

Kit Number: FB-RP03

Contents

| | |
|-------------|---------------|
| MP-ORP11-C0 | RP11-C, PRINT |
| MP-ORP03-00 | RP03, PRINT |

Diagnostic

| | |
|----------|--------------------|
| ZJ159-RB | RP11-C, DIAGNOSTIC |
|----------|--------------------|

KIT NAME: RP04, DOCUMENTS

Kit Number: FB-RP04

Contents

| | |
|-------------|---|
| EK-ORP04-OP | RP04 DEVICE CONTROL LOGIC USERS MANUAL |
| EK-ORP04-IN | RP04 DISK DRIVE INSTALLATION |
| EK-ORP04-IP | RP04 DISK PACK DRIVE IPB |
| EK-ORP04-MM | RP04 DEVICE CONTROL LOGIC MAINTENANCE MANUAL |
| MP-00086-00 | RP04/5/6, PRINT |

Diagnostic

| | |
|----------|----------------------|
| ZJ180-RB | RP04/5/6, DIAGNOSTIC |
|----------|----------------------|

KIT NAME: RP05, AA, AB, BA, BB, DOCUMENTS

Kit Number: FB-RP05

Contents

| | |
|-------------|---------------------------------|
| EK-RP056-IN | RP05/RP06 INSTALLATION MANUAL |
| EK-RP056-MM | RP05/RP06 MAINTENANCE MANUAL |
| EK-RP056-OP | RP05/RP06 USERS MANUAL |
| ER-00014-TM | RP05/677/01/51 TECHNICAL MANUAL |
| MP-00086-00 | RP05/RP06, PRINT |

Diagnostic

| | |
|----------|----------------------|
| ZJ180-RB | PR04/5/6, DIAGNOSTIC |
|----------|----------------------|

KIT NAME: RP06, DOCUMENTS

Kit Number: FB-RP06

Contents

| | |
|-------------|------------------------------------|
| EK-RP056-IN | RP05/RP06 INSTALLATION MANUAL |
| EK-RP056-MM | RP05/RP06 MAINTENANCE MANUAL |
| EK-RP056-OP | RP05/RP06 USERS MANUAL |
| ER-00012-TM | RP05/06 677-01/51 TECHNICAL MANUAL |
| MP-00086-00 | RP05/06, PRINT |

Diagnostic

| | |
|----------|---------------------|
| ZJ180-RB | RP04/5/6 DIAGNOSTIC |
|----------|---------------------|

KIT NAME: RP11, CE, CJ, DOCUMENTS

Kit Number: FB-RP11-C

Contents

| | |
|-------------|---------------------------|
| EK-RP11C-MM | RP11-C MAINTENANCE MANUAL |
| EK-RP11C-OP | RP11-C USERS MANUAL |
| MP-ORP11-CO | RP11-C, PRINT |

Diagnostic

| | |
|----------|--------------------|
| ZJ159-RB | RP11-C, DIAGNOSTIC |
|----------|--------------------|

KIT NAME: RPR02, AM, BM, DOCUMENTS

Kit Number: FB-RPR02

Contents

| | |
|-------------|-------------------------------------|
| EK-RPR02-TM | RPR02 660-1 TECHNICAL DES MANUAL |
| EK-RPR02-LS | RPR02 660-A LOGIC AND SCHEMATIC |
| EK-RP11E-MM | RP11-E MAINTENANCE MANUAL |
| EK-RP11E-OP | RP11-E USERS MANUAL |
| EK-RP11E-IN | RP11-E/RPR02 INSTALLATION MANUAL |
| MP-RPR02-00 | RPR02, PRINT |

Diagnostic

| | |
|----------|--------------------|
| ZJ193-RB | RP11-E, DIAGNOSTIC |
|----------|--------------------|

KIT NAME: RPR11-AA, AB, DOCUMENTS

Kit Number: FB-RPR11-A

Contents

| | |
|-------------|--|
| EK-RPR02-TM | RPR02 660-1 TECHNICAL DES MANUAL |
| EK-RPR02-LS | RPR02 660-A LOGIC AND SCHEMATIC |
| ER-00009-05 | RPR02 DISK DRIVE MAINTENANCE MANUAL |
| EK-RP11E-MM | RP11-E MAINTENANCE MANUAL |
| EK-RP11E-OP | RP11-E USERS MANUAL |
| EK-RP11E-IN | RP11-E/RPR02 INSTALLATION MANUAL |
| MP-ORP11-E0 | RP11-E, PRINT |
| MP-RPR02-00 | RPR02, PRINT |

Diagnostic

| | |
|----------|--------------------|
| ZJ193-RB | RP11-E, DIAGNOSTIC |
|----------|--------------------|

KIT NAME: RS03, DOCUMENTS

Kit Number: FB-RS03

Contents

| | |
|-------------|--------------------------------|
| 99H329 | RS03 DEC DISK SERVICE MANUAL |
| EK-ORS03-OP | RS03 DEC DISK USERS MANUAL |
| EK-ORS03-IP | RS03 DECDISK IPB |
| EK-RJS04-MM | RJS04/RJS03 MAINTENANCE MANUAL |
| EK-RJS04-OP | RJS04/RJS03 USERS MANUAL |
| MP-ORS03-00 | RS03, PRINT |

Diagnostic

| | |
|----------|------------------|
| ZJ155-RB | RH11, DIAGNOSTIC |
|----------|------------------|

KIT NAME: RS04, DOCUMENTS

Kit Number: FB-RS04

Contents

| | |
|-------------|--------------------------------|
| EK-ORS04-OP | RS04 DEC DISK USERS MANUAL |
| EK-ORS04-IP | RS04 DECDISK IPB |
| EK-ORS04-SV | RS04 DECDISK SERVICE MANUAL |
| EK-RJS04-MM | RJS04/RJS03 MAINTENANCE MANUAL |
| EK-RJS04-OP | RJS04/RJS03 USERS MANUAL |
| MP-ORS04-00 | RS04, PRINT |
| MP-RJS04-00 | RJS04, PRINT |

Diagnostic

| | |
|----------|------------------|
| ZJ155-RB | RS04, DIAGNOSTIC |
|----------|------------------|

KIT NAME: RS08-TA, DOCUMENTS

Kit Number: FB-RS08-TA

Contents

| | |
|-------------|-------------------------|
| EK-ORS08-IP | RS08 DISK FILE IPB |
| 94H320 | RS08 MAINTENANCE MANUAL |
| MP-ORS08-TA | RS08-TA, PRINT |

KIT NAME: RS09, DOCUMENTS

Kit Number: FB-RS09

Contents

| | |
|-------------|-------------------------|
| 94H322 | RS09 MAINTENANCE MANUAL |
| MP-ORS09-00 | RS09, PRINT |

KIT NAME: RS64-TA, DOCUMENTS

Kit Number: FB-RS64-TA

Contents

| | |
|-------------|--------------------|
| 99H332 | RS64 DISK FILE |
| EK-ORS64-IP | RS64 DISK FILE IPB |
| MP-ORS64-TA | RS64-TA, PRINT |

KIT NAME: RWP04, AA, AB, DOCUMENTS

Kit Number: FB-RWP04-A

Contents

| | |
|-------------|---|
| EK-RWP04-MM | RWP04 SUBSYSTEM MANUAL |
| EK-RWP04-OP | RWP04 USERS MANUAL |
| EK-OPR04-MM | RP04 DEVICE CONTROL LOGIC MAINTENANCE MANUAL |
| EK-ORP04-OP | RP04 DEVICE CONTROL LOGIC USERS MANUAL |
| EK-ORP04-IN | RP04 DISK DRIVE INSTALLATION |
| EK-ORP04-IP | RP04 DISK PACK DRIVE IPB |
| MP-00086-00 | RP04/5/6, PRINT |
| MP-ORH70-00 | RH70, PRINT |
| MP-RWP04-AO | RWP04-A, PRINT |

Diagnostic

| | |
|----------|----------------------|
| ZJ180-RB | RP04/5/6, DIAGNOSTIC |
|----------|----------------------|

KIT NAME: RWP04, BA, BB, DOCUMENTS

Kit Number: FB-RWP04-B

Contents

| | |
|-------------|---|
| EK-RWP04-MM | RWP04 SUBSYSTEM MANUAL |
| EK-RWP04-OP | RWP04 USERS MANUAL |
| EK-ORP04-OP | RP04 DEVICE CONTROL LOGIC MAINTENANCE MANUAL |
| EK-ORP04-OP | RP04 DEVICE CONTROL LOGIC USERS MANUAL |
| EK-ORP04-IN | RP04 DISK DRIVE INSTALLATION |
| EK-ORP04-IP | RP04 DISK PACK DRIVE IPB |
| MP-00086-00 | RP04/5/6, PRINT |
| MP-ORH70-00 | RH70, PRINT |
| MP-RWP04-B0 | RWP04-B, PRINT |

Diagnostic

| | |
|----------|----------------------|
| ZJ180-RB | RP04/5/6, DIAGNOSTIC |
|----------|----------------------|

KIT NAME: RWP04, CA, CB, DOCUMENTS

Kit Number: FB-RWP04-C

Contents

| | |
|-------------|---|
| EK-RWP04-MM | RWP04 SUBSYSTEM MANUAL |
| EK-RWP04-OP | RWP04 USERS MANUAL |
| EK-ORP04-MM | RP04 DEVICE CONTROL LOGIC MAINTENANCE MANUAL |
| EK-ORP04-OP | RP04 DEVICE CONTROL LOGIC USERS MANUAL |
| EK-ORP04-IN | RP04 DISK DIVE INSTALLATION |
| EK-ORP04-IP | RP04 DISK PACK DRIVE IPB |

(Continued on Next Page)

KIT NAME: RWP04, CA, CB, DOCUMENTS (Continued)

Contents

| | |
|-------------|------------------|
| MP-00086-00 | RP04/5/6 , PRINT |
| MP-RWP04-B0 | RWP04-B, PRINT |
| MP-RWP04-C0 | RWP04-C, PRINT |
| MP-ORH11-00 | RH11, PRINT |
| MP-ORH70-00 | RH70, PRINT |

Diagnostic

| | |
|----------|----------------------|
| ZJ180-RB | RP04/5/6, DIAGNOSTIC |
|----------|----------------------|

KIT NAME: RWP05, AA, AB, DOCUMENTS

Kit Number: FB-RWP05-A

Contents

| | |
|-------------|-------------------------------|
| EK-RP056-IN | RP05/RP06 INSTALLATION MANUAL |
| EK-RP056-MM | RP05/RP06 MAINTENANCE MANUAL |
| EK-RP056-OP | RP05/RP06 USERS MANUAL |
| EK-RWP56-MM | RWP05/06 MAINTENANCE MANUAL |
| EK-RWP56-OP | RWP05/RWP06 USERS MANUAL |
| MP-ORH70-00 | RH70, PRINT |
| MP-00141-00 | RWP05-A, PRINT |
| MP-00086-00 | RP04/5/6, PRINT |

Diagnostic

| | |
|----------|----------------------|
| ZJ180-RB | RP04/5/6, DIAGNOSTIC |
|----------|----------------------|

KIT NAME: RWP05, BA, BB, DOCUMENTS

Kit Number: FB-RWP05-B

Contents

| | |
|-------------|-------------------------------|
| EK-RP056-IN | RP05/RP06 INSTALLATION MANUAL |
| EK-RP056-MM | RP05/RP06 MAINTENANCE MANUAL |
| EK-RP056-OP | RP05/RP06 USERS MANUAL |
| EK-RWP56-MM | RWP05/06 MAINTENANCE MANUAL |
| EK-RWP56-OP | RWP05/RWP06 USERS MANUAL |
| MP-ORH70-00 | RH70, PRINT |
| MP-00086-00 | RP04/5/6, PRINT |
| MP-00142-00 | RWP05-B, PRINT |

Diagnostic

ZJ180-RB RP04/5/6, DIAGNOSTIC

KIT NAME: RWP05, CA, CB, DOCUMENTS

Kit Number: FB-RWP05-C

Contents

| | |
|-------------|-------------------------------|
| EK-RP056-IN | RP05/RP06 INSTALLATION MANUAL |
| EK-RP056-MM | RP05/RP06 MAINTENANCE MANUAL |
| EK-RP056-OP | RP05/RP06 USERS MANUAL |
| EK-RWP56-MM | RWP05/06 MAINTENANCE MANUAL |
| EK-RWP56-OP | RWP05/RWP06 USERS MANUAL |
| MP-ORH70-00 | RH70, PRINT |
| MP-00086-00 | RP04/5/6, PRINT |
| MP-00143-00 | RWP05-C, PRINT |

Diagnostic

ZJ180-RB RP04/5/6, DIAGNOSTIC

KIT NAME: RWP06, AA, DOCUMENTS

Kit Number: FB-RWP06-A

Contents

| | |
|-------------|-------------------------------|
| EK-RWP56-MM | RWP05/6 MAINTENANCE MANUAL |
| EK-RWP56-OP | RWP05/6 USERS MANUAL |
| EK-RP056-IN | RP05/RP06 INSTALLATION MANUAL |
| EK-RP056-MM | RP05/RP06 MAINTENANCE MANUAL |
| EK-RP056-OP | RP05/RP06 USERS MANUAL |
| MP-00086-00 | RP04/5/6, PRINT |
| MP-00144-00 | RWP06-A, PRINT |
| MP-ORH70-00 | RH70, PRINT |

Diagnostic

| | |
|----------|----------------------|
| ZJ180-RB | RP04/5/6, DIAGNOSTIC |
|----------|----------------------|

KIT NAME: RWP06, BA, BB, DOCUMENTS

Kit Number: FB-RWP06-B

Contents

| | |
|-------------|-------------------------------|
| EK-RWP56-MM | RWP05/6 MAINTENANCE MANUAL |
| EK-RWP56-OP | RWP05/6 USERS MANUAL |
| EK-RP056-IN | RP05/RP06 INSTALLATION MANUAL |
| EK-RP056-MM | RP05/RP06 MAINTENANCE MANUAL |
| EK-RP056-OP | RP05/RP06 USERS MANUAL |
| MP-00086-00 | RP04/5/6, PRINT |
| MP-00145-00 | RWP06-B, PRINT |
| MP-ORH70-00 | RH70, PRINT |

Diagnostic

| | |
|----------|----------------------|
| ZJ180-RB | RP04/5/6, DIAGNOSTIC |
|----------|----------------------|

KIT NAME: RWP06, CA, CB, DOCUMENTS

Kit Number: FB-RWP06-C

Contents

| | |
|-------------|-------------------------------|
| EK-RWP56-MM | RWP05/6 MAINTENANCE MANUAL |
| EK-RWP56-OP | RWP05/6 USERS MANUAL |
| EK-RP056-IN | RP05/RP06 INSTALLATION MANUAL |
| EK-RP056-MM | RP05/RP06 MAINTENANCE MANAUL |
| EK-RP056-OP | RP05/RP06 USERS MANUAL |
| MP-00086-00 | RP04/5/6, PRINT |
| MP-ORH70-00 | RH70, PRINT |
| MP-00146-00 | RWP06-C, PRINT |

Diagnostic

| | |
|----------|----------------------|
| ZJ180-RB | RP04/5/6, DIAGNOSTIC |
|----------|----------------------|

KIT NAME: RWS04, B, DOCUMENTS

Kit Number: FB-RWS04-B

Contents

| | |
|-------------|--------------------------|
| EK-RWS04-MM | RWS04 MAINTENANCE MANUAL |
| EK-RWS04-OP | RWS04 USERS MANUAL |
| MP-RWS04-B0 | RWS04-B, PRINT |

KIT NAME: RX11, AA, AC, DOCUMENTS

Kit Number: FB-RX11-A

Contents

| | |
|-------------|---|
| EK-ORX01-IP | RX01 FLOPPY DISK IPB |
| EK-ORX01-OP | RX8/RX11 FLOPPY DISK SYSTEM USERS MANUAL |
| EK-ORX01-MM | RX8/RX11 MAINTENANCE MANUAL |
| MP-00296-00 | RX01, PRINT |

Diagnostic

| | |
|----------|------------------|
| ZJF07-RB | RX01, DIAGNOSTIC |
|----------|------------------|

KIT NAME: RX8, DOCUMENTS

Kit Number: FB-RX8

Contents

| | |
|-------------|-----------------------|
| EK-ORX01-IP | RX01, FLOPPY DISK IPB |
| MP-00296-00 | RX01, PRINT |
| MP-00RX8-E0 | RX8-E, PRINT |

Diagnostic

| | |
|----------|----------------------|
| ZF220-RB | RX8-RX01, DIAGNOSTIC |
|----------|----------------------|

KIT NAME: RXV11, DOCUMENTS

Kit Number: FB-RXV11

Contents

| | |
|-------------|---|
| EK-ORX01-IP | RX01 FLOPPY DISK IPB |
| EK-ORX01-OP | RX8/RX11 FLOPPY DISK SYSTEM USERS MANUAL |
| EK-ORX01-MM | RX8/RX11 MAINTENANCE MANUAL |
| MP-00296-00 | RX01, PRINT |
| MP-00024-00 | RXV11, PRINT |

KIT NAME: TA11, AA, AB, DOCUMENTS

Kit Number: FB-TA11-A

Contents

| | |
|-------------|--|
| EK-OTA11-MM | TA11 CASSETTE SYSTEM MAINTENANCE MANUAL |
| EK-OTA11-OP | TA11 CASSETTE SYSTEM USERS MANUAL |
| EK-OTU60-IP | TU60 CASSETTE TAPE TRANSPORT IPB |
| EK-OTU60-MM | TU60 MAINTENANCE MANUAL |
| EK-OTU60-OP | TU60 USERS MANUAL |
| MP-OTU60-00 | TU60, PRINT |
| MP-OTA11-00 | TA11, PRINT |

Diagnostic

| | |
|----------|-----------------------|
| ZJF08-RB | TA11/TU60, DIAGNOSTIC |
|----------|-----------------------|

KIT NAME: TA8, AA, AB, DOCUMENTS

Kit Number: FB-TA8-A

Contents

| | |
|-------------|-------------------------------------|
| EK-OTU60-IP | TU60 CASSETTE TAPE TRANSPORT IPB |
| EK-OTU60-MM | TU60 MAINTENANCE MANUAL |
| EK-OTU60-OP | TU60 USERS MANUAL |
| EK-8E003-MM | PDP-8/E/F/M MAINTENANCE MANUAL |
| MP-OTU60-00 | TU60, PRINT |
| MP-00TA8-00 | TA8, PRINT |

Diagnostic

| | |
|----------|-------------------|
| ZF180-RB | TA8EA, DIAGNOSTIC |
|----------|-------------------|

KIT NAME: TC11, DOCUMENTS

Kit Number: FB-TC11

Contents

| | |
|-------------|--|
| EK-OTC11-TM | TC11 DECTAPE SYSTEM MAINT MANUAL |
| EK-OTC11-OP | TC11 DECTAPE SYSTEM USERS |
| EK-OTU56-IP | TU56 DECTAPE IPB |
| 99H429 | TU56 DECTAPE MAINTENANCE MANUAL |
| EK-OTU56-OP | TU56 DECTAPE TRANSPORT USERS MANUAL |
| EK-OH720-TM | H720 POWER SUPPLY/MOUNTING BOX |
| EK-OH720-OP | H720 POWER SUPPLY/MOUNTING USERS MANUAL |

(Continued on Next Page)

KIT NAME: TC11, DOCUMENTS (Continued)

Contents

| | |
|-------------|-------------|
| MP-00861-00 | 861, PRINT |
| MP-0H720-00 | H720, PRINT |
| MP-0TU56-00 | TU56, PRINT |
| MP-0TC11-00 | TC11, PRINT |

Diagnostic

| | |
|----------|-----------------------|
| ZJF09-RB | TC11/TU56, DIAGNOSTIC |
|----------|-----------------------|

KIT NAME: TC59, D, DOCUMENTS

Kit Number: FB-TC59-D

Contents

| | |
|-------------|-------------|
| MP-0TC59-00 | TC59, PRINT |
|-------------|-------------|

KIT NAME: TD10, CA , CB, DOCUMENTS

Kit Number: FB-TD10-C

Contents

| | |
|-------------|-------------|
| MP-0TD10-00 | TD10, PRINT |
|-------------|-------------|

KIT NAME: TD8, EH, EJ, EM, DOCUMENTS

Kit Number: FB-TD8-E

Contents

| | |
|-------------|--|
| EK-OTU56-OP | TU56 DECTAPE TRANSPORT USERS MANUAL |
| 99H429 | TU56 DECTAPE MAINTENANCE MANUAL |
| EK-8E003-MM | PDP-8E/F/M MAINTENANCE MANUAL |
| MP-0H716-00 | H716, PRINT |
| MP-OTU56-00 | TU56, PRINT |
| MP-00TD8-E0 | TD8-E, PRINT |

Diagnostic

| | |
|----------|------------------|
| ZF183-RB | TD8E, DIAGNOSTIC |
|----------|------------------|

KIT NAME: TD8, ER, DOCUMENTS

Kit Number: FB-TD8-ER

Contents

| | |
|-------------|--|
| EK-861AB-MM | 861-A/B/C/D/E/F MAINTENANCE MANUAL |
| EK-861AB-OP | 861-A/B/C/D/E/F POWER CONTROLLER |
| EK-00861-IP | 861-A/B/C/D/E/F POWER IPB |
| EK-OTU56-OP | TU56 DECTAPE TRANSPORT USERS MANUAL |
| 99H429 | TU56 DECTAPE MAINTENANCE MANUAL |
| EK-8E003-MM | PDP-8/E/F/M MAINTENANCE MANUAL |
| MP-00861-00 | 861, PRINT |

(Continued on Next Page)

KIT NAME: TD8, DOCUMENTS (Continued)

Contents

| | |
|-------------|--------------|
| MP-0H716-00 | H716, PRINT |
| MP-0TU56-00 | TU56, PRINT |
| MP-00TD8-E0 | TD8-E, PRINT |
| MP-00074-00 | TEV11, PRINT |

Diagnostic

| | |
|----------|------------------|
| ZF183-RB | TD8E, DIAGNOSTIC |
|----------|------------------|

KIT NAME: TE10N, DOCUMENTS

Kit Number: FB-TE10N

Contents

| | |
|-------------|--|
| EK-0TE16-TM | TE16/TE10W/TE10N MAINTENANCE MANUAL |
| EK-0TEWN-OP | TE16/TE10W/TE10N USERS MANUAL |
| MP-00364-00 | TE10N, PRINT |

KIT NAME: TE10W, DOCUMENTS

Kit Number: FB-TE10W

Contents

| | |
|-------------|--|
| EK-OTE16-TM | TE16/TE10W/TE10N MAINTENANCE MANUAL |
| EK-OTEWN-OP | TE16/TE10W/TE10N USERS MANUAL |
| MP-00336-00 | TE10W, PRINT |

KIT NAME: TE16, DOCUMENTS

Kit Number: FB-TE16

Contents

| | |
|-------------|--|
| EK-OTE16-TM | TE16/TE10W/TE10N MAINTENANCE MANUAL |
| EK-OTEWN-OP | TE16/TE10W/TE10N USERS MANUAL |
| EK-861AB-MM | 861-A/B/C/D/E/F MAINTENANCE MANUAL |
| EK-861AB-OP | 861-A/B/C/D/E/F POWER CONTROLLER |
| EK-00861-IP | 861-A/B/C/D/E/F POWER IPB |
| MP-00333-00 | TE16, PRINT |

Diagnostic

| | |
|----------|-----------------------|
| ZJ182-RB | TM02/TU16, DIAGNOSTIC |
|----------|-----------------------|

KIT NAME: TM8, MA, MB, DOCUMENTS

Kit Number: FB-TM8-M

Contents

| | |
|-------------|--|
| EK-OH720-TM | H720 POWER SUPPLY/MOUNTING BOX |
| EK-OH720-OP | H720 POWER SUPPLY/MOUNTING USERS MANUAL |
| MP-0H720-00 | H720, PRINT |
| MP-0TS03-M0 | TS03-M, PRINT |
| MP-00TM8-E0 | TM8-E, PRINT |

Diagnostic

| | |
|----------|------------------------|
| ZF222-RB | TM8-E/TS03, DIAGNOSTIC |
| ZF184-RB | TM8E, DIAGNOSTIC |

KIT NAME: TMB11, MA, MB, DOCUMENTS

Kit Number: FB-TMB11-M

Contents

| | |
|-------------|-----------------------------------|
| EK-TMB11-OP | TMB11/TS03 SYSTEM USERS MANUAL |
| EK-TMBEF-MM | TMB11/TU10W MAINTENANCE MANUAL |
| MP-00078-00 | TMB11, PRINT |
| MP-0TS03-00 | TS03, PRINT |

Diagnostic

| | |
|----------|------------------|
| ZJF11-RB | TS03, DIAGNOSTIC |
|----------|------------------|

KIT NAME: TS03, S, DOCUMENTS

Kit Number: FB-TS03-S

Contents

| | |
|-------------|-----------------------------------|
| EK-TMB11-OP | TMB11/TS03 SYSTEM USERS MANUAL |
| EK-TMBEF-MM | TMB11/TW10W MAINTENANCE MANUAL |
| MP-0TS03-00 | TS03, PRINT |

Diagnostic

| | |
|----------|------------------|
| ZJF11-RB | TS03, DIAGNOSTIC |
|----------|------------------|

KIT NAME: TU10, FJ, DOCUMENTS

Kit Number: FB-TU10-FJ

Contents

| | |
|-------------|---------------------------------------|
| EK-OTU10-IP | TU10 DECMAGE TAPE IPB |
| EK-OTU10-MM | TU10 DECMAGTAPE MAINTENANCE MANUAL |
| EK-OTU10-TM | TU10 DECMAGTAPE MASTER SYSTEM |
| EK-OTU10-OP | TU10 DECMAGTAPE USERS MANUAL |
| MP-0TU10-00 | TU10, PRINT |

KIT NAME: TU45, DOCUMENTS

Kit Number: FB-TU45

Contents

| | |
|-------------|-------------------------------------|
| EK-TU45A-MM | TU45 MAGNETIC TAPE SYSTEM MANUAL |
| MP-00441-00 | TU45, PRINT |

KIT NAME: TU45A, EA, EB, DOCUMENTS

Kit Number: FB-TU45A-EA

Contents

| | |
|-------------|-------------------------------------|
| EK-TU45A-MM | TU45 MAGNETIC TAPE SYSTEM MANUAL |
| EK-OTM02-IP | TM02 FORMATTER IPB |
| MP-00100-00 | TU45A, PRINT |
| MP-0TM02-00 | TM02, PRINT |

KIT NAME: TU45A, EE, EF, DOCUMENTS

Kit Number: FB-TU45A-EE

Contents

| | |
|-------------|-------------------------------------|
| EK-TU45A-MM | TU45 MAGNETIC TAPE SYSTEM MANUAL |
| MP-00100-00 | TU45A, PRINT |

KIT NAME: TU56, H, DOCUMENTS

Kit Number: FB-TU56

Contents

| | |
|-----------------------|--|
| EK-OTU56-IP 99H429 | TU56 DECTAPE IPB TU56 DECTAPE MAINTENANCE MANUAL |
| EK-OTU56-OP | TU56 DECTAPE TRANSPORT USERS MANUAL |
| MP-OTU56-00 | TU56, PRINT |

Diagnostic

| | |
|----------|-----------------------|
| ZJF09-RB | TC11/TU56, DIAGNOSTIC |
|----------|-----------------------|

KIT NAME: TU60, K, DOCUMENTS

Kit Number: FB-TU60-K

Contents

| | |
|-------------|-------------------------------------|
| EK-OTU60-IP | TU60 CASSETTE TAPE TRANSPORT IPB |
| EK-OTU60-MM | TU60 MAINTENANCE MANUAL |
| EK-OTU56-OP | TU60 USERS MANUAL |
| MP-OTU60-00 | TU60, PRINT |

KIT NAME: VC8, E, DOCUMENTS

Kit Number: FB-VC8-E

Contents

| | |
|-------------|--------------|
| MP-00VC8-E0 | VC8-E, PRINT |
|-------------|--------------|

Diagnostic

| | |
|----------|-------------------|
| ZJ189-RB | VC8-E, DIAGNOSTIC |
|----------|-------------------|

KIT NAME: VS60, DOCUMENTS

Kit Number: FB-VS60

Contents

| | |
|-------------|---------------------------|
| EK-OVS60-TM | VS60 VECTORING SYSTEM IPB |
| MP-OVS60-00 | VS60, PRINT |

Diagnostic

| | |
|----------|------------------|
| ZJ211-RB | VS60, DIAGNOSTIC |
|----------|------------------|

KIT NAME: VSV01, DOCUMENTS

Kit Number: FB-VSV01

Contents

| | |
|-------------|----------------------------|
| EK-VSV01-IP | VSV01 GRAPHICS DISPLAY IPB |
| MP-00063-00 | VSV01, PRINT |

Diagnostic

| | |
|----------|-------------------|
| ZJ228-RB | VSV01, DIAGNOSTIC |
|----------|-------------------|

KIT NAME: VT05B, DOCUMENTS

Kit Number: FB-VT05B

Contents

| | |
|-------------|----------------------------------|
| EK-O0T05-IP | VT05 ALPHANUMERIC DISPLAY IPB |
| EK-OVT05-MM | VT05 MAINTENANCE MANUAL |

(Continued on Next Page)

KIT NAME: VT05B, DOCUMENTS (Continued)

Contents

| | |
|-------------|-----------------------------------|
| EK-OVT05-HR | VT05 TERMINAL REFERENCE MANUAL |
| EK-OVT05-OP | VT05, USERS MANUAL |
| MP-OVT05-00 | VT05, PRINT |

Diagnostic

| | |
|----------|------------------|
| ZJ167-RB | VT05, DIAGNOSTIC |
|----------|------------------|

KIT NAME: VT11, DOCUMENTS

Kit Number: FB-VT11

Contents

| | |
|-------------|--------------------------------|
| EK-OVT11-TM | VT11 GRAPHIC DISPLAY PROCESSOR |
| MP-OVR17-00 | VR17, PRINT |

KIT NAME: VT14, AA, AB, DOCUMENTS

Kit Number: FB-VT14-A

Contents

| | |
|-------------|--------------------------------|
| EK-OVT14-MM | VT14 MAINTENANCE MANUAL |
| EK-OVT14-OP | VT14 USERS MANUAL (INDUSTRIAL) |
| MP-OVT14-00 | VT14, PRINT |

KIT NAME: VT100, DOCUMENTS

Kit Number: FB-VT100

Contents

| | |
|-------------|---------------------------------|
| EK-VT100-IP | VT100 IPB MANUAL |
| EK-VT100-J1 | VT100 MINI MAINTENANCE GUIDE |
| EK-VT100-TM | VT100 TECHNICAL MANUAL |
| EK-VT100-UG | VT100 USERS GUIDE |
| MP-00663-00 | VT100, PRINT |
| 12-15336 | VT100 EIA LOOPBACK CONNECTOR |

KIT NAME: VT20, DOCUMENTS

Kit Number: FB-VT20

Contents

| | |
|-------------|------------------------------------|
| EK-OVT20-OP | VT20 OPERATORS GUIDE & ADDENDA |
| 22S325 | VT20 TEXT EDITING OPTION MANUAL |
| MP-OVT20-00 | VT20, PRINT |

Diagnostic

| | |
|----------|------------------|
| ZP104-RB | VT20, DIAGNOSTIC |
|----------|------------------|

KIT NAME: VT50, AA, AB, CA, CB, DOCUMENTS

Kit Number: FB-VT50

Contents

EK-OVT50-IP VT50 SERIES COPIER IPB
EK-OVT50-TM VT50 SYSTEM MANUAL

Diagnostic

ZF218-RB VT50, DIAGNOSTIC

KIT NAME: VT52, DOCUMENTS

Kit Number: FB-VT52

Contents

EK-OVT52-IP VT52 DECSCOPE IPB
EK-OVT52-MM VT52-DECSCOPE MAINTENANCE
MP-00035-00 VT52, PRINT

Diagnostic

ZF218-RB VT50, DIAGNOSTIC

KIT NAME: VT55, DOCUMENTS

Kit Number: FB-VT55

Contents

EK-VT55E-TM VT55-E/F/H/J USERS MANUAL
MP-00098-00 VT55, PRINT

Diagnostic

ZJ186-RB VT50A, DIAGNOSTIC

KIT NAME: VT61, AA, AE, DOCUMENTS

Kit Number: FB-VT61-A

Contents

| | |
|-------------|-------------------|
| EK-OVT61-OP | VT61 USERS MANUAL |
| EK-OVT61-IP | VT61 DECSCOPE IPB |
| MP-00107-00 | VT61, PRINT |

Diagnostic

| | |
|----------|------------------|
| ZJ219-RB | VT61, DIAGNOSTIC |
|----------|------------------|

KIT NAME: VT61T, DOCUMENTS

Kit Number: FB-VT61T

Contents

| | |
|-------------|-------------------------------|
| EK-TMS61-OP | VT61/T REPORTERS GUIDE/TMS-11 |
| EK-VT61T-TM | VT61/VT61T TECHNICAL MANUAL |
| MP-00110-00 | VT61T, PRINT |

KIT NAME: VT71T, DOCUMENTS

Kit Number: FB-VT71T

Contents

| | |
|-------------|---------------------------|
| EK-VT71T-MM | VT71-T MAINTENANCE MANUAL |
| MP-00128-00 | VT71T, PRINT |

KIT NAME: VT62, DOCUMENTS

Kit Number: FB-VT62

Contents

| | |
|-------------|------------------------------------|
| EK-0VT62-TM | VT62 DECSCOPE TECHNICAL MANUAL |
| EK-0VT62-IP | VT62 DECSCOPE ILLUSTRATED PARTS |
| MP-00215-00 | VT62, PRINT |

KIT NAME: VW01, DOCUMENTS

Kit Number: FB-VW01

Contents

| | |
|-------------|-----------------------------------|
| 99H538 | VW01 TABLET MAINTENANCE MANUAL |
| MP-0VW01-00 | VW01, PRINT |

KIT NAME: XY8, E, DOCUMENTS


Kit Number: FB-XY8

Contents

| | |
|-------------|--------------|
| MP-00XY8-E0 | XY8-E, PRINT |
|-------------|--------------|

Diagnostic

| | |
|----------|-----------------|
| ZF194-RB | XY8, DIAGNOSTIC |
|----------|-----------------|

 


Hardware Documentation Kit Handbook

Packaged Systems

Packaged Systems are designed to offer a complete Hardware/Software System using a single order number.

The Documentation Kits presented in this section are the applicable groupings of single kits offered in the previous section. These Documentation Kits are consistent with the design of the actual Packaged System.

 digital



KIT NAME: D322A, AA, AD, AY, AZ DOCUMENTS

Kit Number: FB-010

Contents

FB-11/03
FB-RXV11
FB-VT52

KIT NAME: D322A, BA, BD, BY, BZ DOCUMENTS

Kit Number: FB-020

Contents

FB-11/03
FB-RXV11
FB-VT52
FB-LAV11-P

KIT NAME: D324A, AA, AD, AY, AZ DOCUMENTS

Kit Number: FB-030

Contents

FB-11/03
FB-RKV11-D
FB-RK05
FB-VT52

KIT NAME: D324A, BA, BD, BY, BZ DOCUMENTS

Kit Number: FB-040

Contents

FB-11/03
FB-RKV11-D
FB-RK05
FB-VT52
FB-LAV11-P

KIT NAME: D325A, AA, AD, AY, AZ DOCUMENTS

Kit Number: FB-050

Contents

FB-11/03
FB-VT52

KIT NAME: D325A, BA, BD, BY, BZ, DOCUMENTS

Kit Number: FB-060

Contents

FB-11/03
FB-VT52
FB-LA180

KIT NAME: D354B, AA, AD, AY, AZ,
D354B, BA, BD, BY, BZ
D354B, CA, CD, CY, CZ
D354B, DA, DD, DY, DZ, DOCUMENTS

Kit Number: FB-070

Contents

FB-1134A-2
FB-RK11J
FB-RK05
FB-VT52

KIT NAME: D354B, FA, FD, FY, FZ, DOCUMENTS

Kit Number: FB-080

Contents

FB-1134A-2
FB-RK11J
FB-RK05
FB-VT52
FB-LA11-P

KIT NAME: D354B, GA, GD, GY, GZ, DOCUMENTS

Kit Number: FB-090

Contents

FB-1134A-2
FB-RK11J
FB-RK05
FB-VT52
FB-LP11

KIT NAME: D355A, AA, AD, AY, AZ, DOCUMENTS

Kit Number: FB-100

Contents

FB-1134A-2
FB-DD11-D
FB-VT52

KIT NAME: D355A, HA, HD, HY, HZ, DOCUMENTS

Kit Number: FB-110

Contents

FB-1134A-2
FB-DD11-D
FB-LP11
FB-VT52

KIT NAME: D357B, AA, AD, AY, AZ, DOCUMENTS

Kit Number: FB-120

Contents

FB-1134A-2
FB-DD11-C
FB-RK611
FB-RK06-EA
FB-VT52

KIT NAME: D538A, AA, AD, AY, AZ, DOCUMENTS

Kit Number: FB-130

Contents

FB-1134A-2

FB-DD11-C

FB-VT52

KIT NAME: D531A, CA, CD, CY, CZ
D531B, CA, CD, CY, CZ
D531C, CA, CD, CY, CZ
D531D, CA, CD, CY, CZ, DOCUMENTS

Kit Number: FB-140

Contents

FB-1134A-2

FB-RJP04-A

FB-DD11-D

FB-LA36

KIT NAME: D533A, CA, CD, CY, CZ
D533B, CA, CD, CY, CZ
D533C, CA, CD, CY, CZ
D533D, CA, CD, CY, CZ, DOCUMENTS

Kit Number: FB-150

Contents

FB-1134A-2

FB-RJP06-A

FB-DD11-D

FB-LA36

KIT NAME: D534A, CA, CD, CY, CZ
D534A, DA, DD, DY, DZ
D534B, CA, CD, CY, CZ
D534B, DA, DD, DY, DZ
D534C, CA, CD, CY, CZ
D534C, DA, DD, DY, DZ
D534D, CA, CD, CY, CZ
D534D, DA, DD, DY, DZ, DOCUMENTS

Kit Number: FB-160

Contents

FB-1134A-2
FB-RK05
FB-RK11J
FB-DD11-D
FB-LA36

KIT NAME: D536A, DA, DD, DY, DZ
D536B, DA, DD, DY, DZ
D536C, DA, DD, DY, DZ
D536D, DA, DD, DY, DZ
D538A, DA, DD, DY, DZ
D538B, DA, DD, DY, DZ
D538C, DA, DD, DY, DZ
D538D, DA, DD, DY, DZ, DOCUMENTS

Kit Number: FB-170

Contents

FB-1134A-2
FB-DD11-D
FB-LA36

KIT NAME: D537A, CA, CD, CY, CZ
D537B, CA, CD, CY, CZ
D537C, CA, CD, CY, CZ
D537D, CA, CD, CY, CZ, DOCUMENTS

Kit Number: FB-180

Contents

FB-1134A-2
FB-RK611
FB-DD11-D
FB-LA36

KIT NAME: D563A, AA, AD, AY, AZ
D563B, AA, AD, AY, AZ
D563C, AA, AD, AY, AZ
D563D, AA, AD, AY, AZ, DOCUMENTS

Kit Number: FB-190

Contents

FB-11Y60-CA
FB-LA36
FB-RJP06-A

KIT NAME: D563E, AA, AD, DOCUMENTS

Kit Number: FB-200

Contents

FB-11Y60-CA
FB-LA36
FB-RJP06-A

KIT NAME: D563E-AY, AZ, DOCUMENTS

Kit Number: FB-210

Contents

FB-11Y60-CA
FB-LA36
FB-RJP06-A
QJ628-GZ

**KIT NAME: D566A, BA, BD, BY, BZ
D566B, BA, BD, BY, BZ
D566C, BA, BD, BY, BZ
D566D, BA, BD, BY, BZ, DOCUMENTS**

Kit Number: FB-220

Contents

FB-11Y60-CA
FB-LA36

**KIT NAME: D567A, AA, AD, AY, AZ
D567B, AA, AD, AY, AZ
D567D, AA, AD, AY, AZ, DOCUMENTS**

Kit Number: FB-230

Contents

FB-11Y60-CA
FB-LA36
FB-RK611

KIT NAME: D567E, AA, AD, DOCUMENTS

Kit Number: FB-240

Contents

FB-11Y60-CA

FB-LA36

FB-RK611

KIT NAME: D567E, AY, AZ, DOCUMENTS

Kit Number: FB-250

Contents

FB-11/Y60-CA

FB-LA36

FB-RK611

QJ628-GZ

**KIT NAME: D568A, BA, BD, BY, BZ
D568B, BA, BD, BY, BZ
D568C, BA, BD, BY, BZ
D568D, BA, BD, BY, BZ, DOCUMENTS**

Kit Number: FB-260

Contents

FB-11Y60-CA

FB-LA36

KIT NAME: D571A, AA, AD, AY, AZ
D571B, AA, AD, AY, AZ
D571C, AA, AD, AY, AZ
D571D, AA, AD, AY, AZ, DOCUMENTS

Kit Number: FB-270

Contents

FB-11/70-NV
FB-DD11-C
FB-RWP04-A
FB-BA11-K

KIT NAME: D573A, AA, AD, AY, AZ
D573B, AA, AD, AY, AZ
D573C, AA, AD, AY, AZ
D573D, AA, AD, AY, AZ, DOCUMENTS

Kit Number: FB-280

Contents

FB-11/70-NV
FB-DD11-C
FB-RWP06-A
FB-BA11-K

KIT NAME: D576A, AA, AD, AY, AZ
D576B, AA, AD, AY, AZ
D576C, AA, AD, AY, AZ
D576D, AA, AD, AY, AZ, DOCUMENTS

Kit Number: FB-290

Contents

FB-11/70-NV
FB-DD11-C
FB-BA11-K

KIT NAME: D577A, AA, AD, AY, AZ
D577B, AA, AD, AY, AZ
D577C, AA, AD, AY, AZ
D577D, AA, AD, AY, AZ, DOCUMENTS

Kit Number: FB-300

Contents

FB-11/70-NV
FB-DD11-C
FB-RK611-00
FB-RK06-EA
FB-BA11-K

KIT NAME: DA70CVA, LA, LD, LE, LJ, LK, LN
DA-70CVC, LA, LD, LE, LJ, LK, LN
DA-70CWA, LA, LB, LC, LD, LE, LF, LH, LJ,
LK, LL, LM, LN
DA-70CWC, LA, LB, LC, LD, LE, LF, LH, LJ,
LK, LL, LM, LN, DOCUMENTS

Kit Number: FB-310

Contents

FB-11/70-NV
FB-RWP06-A
FB-VT52
FB-DL11-W
FB-BA11-K
QR300GZ

KIT NAME: DA-70KKB, LA, LB, LC, LD, LE, LF, LH, LJ,
LK, LL, LM, LN
DA-70KKC, LA, LB, LC, LD, LE, LF, LH, LJ,
LK, LL, LM, LN, DOCUMENTS

Kit Number: FB-320

Contents

FB-11/70-NV
FB-RK611
FB-RK06-EA
FB-BA11-K
FB-VT52
FB-DL11-W
QR300GZ

KIT NAME: DA-70TVA, LA, LD, LE, LJ, LK, LN
DA-70TVC, LA, LD, LE, LJ, LK, LN,
DOCUMENTS

Kit Number: FB-330

Contents

FB-11/70-NV
FB-DL11-W
FB-BA11-K
FB-VT52
QR300GZ

KIT NAME: DD-72CVA, LA, LD, LE, LJ, LK, LN
DD-72CWA, LA, LB, LC, LD, LE, LF, LH, LJ,
LK, LL, LM, LN, DOCUMENTS

Kit Number: FB-340

Contents

FB-11/70-NV
FB-RWP06-A
FB-RP06
FB-BA11-K
QJ580-GZ

KIT NAME: DM-30AVA, LA, LD, LE, LJ, DOCUMENTS

Kit Number: FB-350

Contents

FB-1134A-2
FB-LA36
FB-RJP04-A

KIT NAME: DM-30AVA, LK, LN, DOCUMENTS

Kit Number: FB-360

Contents

FB-1134A-2
FB-LA36
FB-RJP04-A
QJ628-GZ

KIT NAME: DM-30CVB, LA, LD, LE, LJ, DOCUMENTS

Kit Number: FB-370

Contents

FB-1134A-2
FB-RJP06-A
FB-DD11-D
FB-LA36

KIT NAME: DM-30CVB, LK, LN, DOCUMENTS

Kit Number: FB-380

Contents

FB-1134A-2
FB-RJP06-A
FB-DD11-D
FB-LA36
QJ628-GZ

KIT NAME: DM-30FJA, LA, LB, LC, LD, LE, LF, LH,
LJ, DOCUMENTS

Kit Number: FB-390

Contents

FB-1134A-2
FB-RK05
FB-LA36
FB-RK11J

KIT NAME: DM-30FJA, LK, LL, LM, LN, DOCUMENTS

Kit Number: FB-400

Contents

FB-1134A-2
FB-RK05
FB-LA36
FB-RK11J
QJ628-GZ

KIT NAME: DM-30HHA, LA, LB, LC, LD, LE, LF, LH,
LJ, DOCUMENTS

Kit Number: FB-410

Contents

FB-1134A-2
FB-DD11-D
FB-LA36

KIT NAME: DM-30HHA, LK, LL, LM, LN, DOCUMENTS

Kit Number: FB-420

Contents

FB-1134A-2
FB-DD11-D
FB-LA36
QJ628-GZ

**KIT NAME: DM-30JJA, LA, LB, LC, LD, LE, LF, LH,
LJ, DOCUMENTS**

Kit Number: FB-430

Contents

FB-1134A-2
FB-RK11J
FB-RK05
FB-LA36

KIT NAME: DM-30JJA, LK, LL, LM, LN, DOCUMENTS

Kit Number: FB-440

Contents

FB-1134A-2
FB-RK11J
FB-RK05
FB-LA36
QJ628-GZ

KIT NAME: DM-30KKA, LA, LB, LC, LD, LE, LF, LH,
LJ, DOCUMENTS

Kit Number: FB-450

Contents

FB-1134A-2
FB-RK06-EA
FB-RK611
FB-BA11-K
FB-LA36

KIT NAME: DM-30KKA, LK, LL, LM, LN, DOCUMENTS

Kit Number: FB-460

Contents

FB-1134A-2
FB-RK06-EA
FB-RK611
FB-BA11-K
FB-LA36
QJ628-GZ

KIT NAME: DM-30LLA, LA, LB, LC, LD, LE, LF, LH,
LJ, DOCUMENTS

Kit Number: FB-470

Contents

FB-1134A-2
FB-DD11-D
FB-LA36

KIT NAME: DM-30LLA, LK, LL, LM, LN, DOCUMENTS

Kit Number: FB-480

Contents

FB-1134A-2
FB-DD11-D
FB-LA36
QJ628-GZ

KIT NAME: DM-30UVA, LA, LD, LE, LJ, DOCUMENTS

Kit Number: FB-490

Contents

FB-1134A-2
FB-DD11-D
FB-LA36

KIT NAME: DM-30UVA, LK, LN, DOCUMENTS

Kit Number: FB-500

Contents

FB-1134A-2
FB-DD11-D
FB-LA36
QJ628-GZ

KIT NAME: DM-70CVA, LA, LD, LE, LJ
DM-70CVC, LA, LD, LE, LJ
DM-70CWA, LA, LB, LC, LD, LE, LF, LH, LJ
DM-70CWC, LA, LB, LC, LD, LE, LF, LH, LJ,
DOCUMENTS

Kit Number: FB-510

Contents

FB-11/70-NV
FB-RWPO6-A
FB-BA11-K

KIT NAME: DM-70CVA, LK, LN
DM-70CVC, LK, LN
DM-70CWA, LK, LL, LM, LN
DM-70CWC, LK, LL, LM, LN, DOCUMENTS

Kit Number: FB-520

Contents

FB-11/70-NV
FB-RWPO6-A
FB-BA11-K
QJ628-GZ

KIT NAME: DM-70HHA, LA, LB, LC, LD, LE, LF, LH,
LJ, DOCUMENTS

Kit Number: FB-530

Contents

FB-11/70-NV
FB-BA11-K

KIT NAME: DM-70HHA, LK, LL, LM, LN, DOCUMENTS

Kit Number: FB-540

Contents

FB-11/70-NV

FB-BA11-K

QJ628-GZ

**KIT NAME: DM-70KKC, LA, LB, LC, LD, LE, LF, LH,
LJ, DOCUMENTS**

Kit Number: FB-550

Contents

FB-11/70-NV

FB-RK611

FB-RK06-EA

FB-BA11-K

KIT NAME: DM-70KKC, LK, LL, LM, LN, DOCUMENTS

Kit Number: FB-560

Contents

FB-11/70-NV

FB-RK611

FB-RK06-EA

FB-BA11-K

QJ628-GZ

KIT NAME: DM-70TVA, LA, LD, LE, LJ
DM-70TVC, LA, LD, LE, LJ, DOCUMENTS

Kit Number: FB-570

Contents

FB-11/70-NV
FB-BA11-K

KIT NAME: DM-70TVA, LK, LN
DM-70TVC, LK, LN, DOCUMENTS

Kit Number: FB-580

Contents

FB-11/70-NV
FB-BA11-K
QJ628-GZ

KIT NAME: DP-30CVB, LA, LD, LE, LJ, LK, LN,
DOCUMENTS

Kit Number: FB-590

Contents

FB-1134A-2
FB-RJP06-A
FB-DD11-D
FB-LA36

KIT NAME: DP-30FJA, LA, LB, LC, LD, LE, LF, LH, LJ, LK, LL, LM, LN, DOCUMENTS

Kit Number: FB-600

Contents

FB-1134A-2
FB-RK05
FB-RK11J
FB-LA36

KIT NAME: DP-30UVA, LA, LD, LE, LJ, LK, LN, DOCUMENTS

Kit Number: FB-610

Contents

FB-1134A-2
FB-DD11-D
FB-LA36

KIT NAME: DP-70CVA, LA, LD, LE, LJ, LK, LN
DP-70CVC, LA, LD, LE, LJ, LK, LN
DP-70CWA, LA, LB, LC, LD, LE, LF, LH, LJ, LK, LL, LM, LN
DP-70CWC, LA, LB, LC, LD, LE, LF, LH, LJ, LK, LL, LM, LN, DOCUMENTS

Kit Number: FB-620

Contents

FB-11/70-NV
FB-RWP06-A
FB-BA11-K

KIT NAME: DP-70TVA, LA, LD, LE, LJ, LK, LN
DP-70TVC, LA, LD, LE, LJ, LK, LN,
DOCUMENTS

Kit Number: FB-630

Contents

FB-11/70-NV
FB-BA11-K

KIT NAME: RE-31FJA, LA, LD, DOCUMENTS

Kit Number: FB-640

Contents

FB-1134A-2
FB-DD11-D
FB-RK11J
FB-RK05
FB-LA36
FB-LA11-P
QR430-GZ

KIT NAME: RE-32KKA, LA, LD
RE-33KKA, LA, LD, DOCUMENTS

Kit Number: FB-650

Contents

FB-1134A-2
FB-H960-C
FB-DD11-D
FB-RK611
FB-RK06-EA

(Continued on Next Page)

**KIT NAME: RE-32KKA, LA, LD
RE-33KKA, LA, LD, DOCUMENTS
(Continued)**

Contents

FB-LA36
FB-LA11-P
QJ916-GZ
QP011-GZ
QR430-GZ

**KIT NAME: RE-34KKA, LA, LD
RE-35KKA, LA, LD, DOCUMENTS**

Kit Number: FB-660

Contents

FB-1134A-2
FB-H960-C
FB-DD11-D
FB-RK611
FB-RK06-EA
FB-LA36
FB-LA11-P
QJ916-GZ
QR430-GZ

KIT NAME: RE-36KKA, LA, LD, DOCUMENTS

Kit Number: FB-670

Contents

FB-1134A-2
FB-H960-C
FB-DD11-D
FB-RK611

(Continued on Next Page)

KIT NAME: RE-36KKA, LA, LD, DOCUMENTS
(Continued)

Contents

FB-RK06-EA
FB-LA36
FB-LA11-P
QR430-GZ

KIT NAME: RE-37KKA, LA, LD, DOCUMENTS

Kit Number: FB-680

Contents

FB-1134A-2
FB-RK06-EA
FB-H960-C
FB-DD11-D
FB-RK611
FB-LA36
FB-TMB11-M
QR-430-GZ

KIT NAME: RE-71CVA, LA, LD, DOCUMENTS

Kit Number: FB-690

Contents

FB-11/70-NV
FB-H960-D
FB-RWP06-A
FB-DD11-D
FB-LP11

(Continued on Next Page)

KIT NAME: RE-71CVA, LA, LD, DOCUMENTS
(Continued)

Contents

QJ916-GZ
QP900-GZ
QP011-GZ
QR430-GZ

KIT NAME: RE-71TVA, LA, LD, DOCUMENTS

Kit Number: FB-700

Contents

FB-11/70-NV
FB-DD11-D
FB-H960-D
FB-LP11
QJ916-GZ
QP900-GZ
QP011-GZ
QR430-GZ

KIT NAME: RE-72CVA, LA, LD, DOCUMENTS

Kit Number: FB-710

Contents

FB-11/70-NV
FB-H960-D
FB-RWP06-A
FB-DD11-D
FB-LP11

(Continued on Next Page)

**KIT NAME: RE-72CVA, LA, LD, DOCUMENTS
(Continued)**

Contents

QJ916-GZ
QP900-GZ
QP011-GZ
QR430-GZ

KIT NAME: RE-72TVA, LA, LD, DOCUMENTS

Kit Number: FB-720

Contents

FB-11/70-NV
FB-H960-D
FB-DD11-D
FB-LP11
QJ916-GZ
QP900-GZ
QP011-GZ
QR430-GZ

KIT NAME: RE-73CVA, LA, LD, DOCUMENTS

Kit Number: FB-730

Contents

FB-11/70-NV
FB-H960-D
FB-RWP06-A
FB-DD11-D
FB-LP11
QJ916-GZ
QP900-GZ
QR430-GZ

KIT NAME: RE-73TVA, LA, LD, DOCUMENTS

Kit Number: FB-740

Contents

FB-11/70-NV
FB-H960-D
FB-DD11-D
FB-LP11
QJ916-GZ
QP900-GZ
QR430-GZ

KIT NAME: RE-74CVA, LA, LD, DOCUMENTS

Kit Number: FB-750

Contents

FB-11/70-NV
FB-H960-D
FB-RWP06-A
FB-DD11-D
FB-LP11
QP900-GZ
QJ916-GZ
QR430-GZ

KIT NAME: RE-74TVA, LA, LD, DOCUMENTS

Kit Number: FB-760

Contents

FB-11/70-NV
FB-H960-D
FB-DD11-D
FB-LP11
QJ916-GZ
QP900-GZ
QR430-GZ

KIT NAME: RE-77CVA, LA, LD, DOCUMENTS

Kit Number: FB-770

Contents

FB-11/70-NV
FB-H960-D
FB-RWP06-A
FB-DD11-D
QP011-GZ
QP900-GZ
QR430-GZ

KIT NAME: RE-77TVA, LA, LD, DOCUMENTS

Kit Number: FB-780

Contents

FB-11/70-NV
FB-DD11-D
FB-H960-D

(Continued on Next Page)

KIT NAME: RE-77TVA, LA, LD, DOCUMENTS
(Continued)

Contents

QP011-GZ
QP901-GZ
QR430-GZ

KIT NAME: RR-21RRA, LA, LD, DOCUMENTS

Kit Number: FB-790

Contents

FB-11/04-1
FB-H967
FB-DL11-W
FB-RX11-A
FB-LA11-P
FB-LA36

KIT NAME: SA-60AVA, LA, LD, LE, LJ, LK, LN,
DOCUMENTS

Kit Number: FB-800

Contents

FB-11Y60-CA
FB-RJP04-A
FB-DD11-C
FB-DZ11
FB-VT52
FB-LA36
QR300-GZ

KIT NAME: SA-60CVB, LA, LD, LE, LJ, LK, LN,
DOCUMENTS

Kit Number: FB-810

Contents

FB-11Y60-CA
FB-RJP06-A
FB-VT52
FB-LA36
QR300-GZ

KIT NAME: SA-60KKA, LA, LB, LC, LD, LE, LF, LH, LJ,
LK, LL, LM, LN, DOCUMENTS

Kit Number: FB-820

Contents

FB-11S60-C
FB-VT52
QR300-GZ

KIT NAME: SA-60UVA, LA, LD, LE, LJ, LK, LN,
DOCUMENTS

Kit Number: FB-830

Contents

FB-VT52
FB-11Y60-CA
FB-DD11-C
FB-DZ11
FB-LA36
QR300-GZ

KIT NAME: SA-70CVA, LA, LB, LC, LD, LE, LF, LH, LJ, LK,
LL, LM, LN
SA-70CWA, LA, LB, LC, LD, LE, LF, LH, LJ, LK,
LL, LM, LN
CA-70CWA, LA, LB, LC, LD, LE, LF, LH, LJ, LK,
LL, LM, LN
CA-70CVA, LA, LB, LC, LD, LE, LF, LH, LJ, LK,
LL, LM, LN, DOCUMENTS

Kit Number: FB-840

Contents

FB-11/70-NV
FB-RWP06-A
FB-VT52
FB-DL11-W
QR300-GZ

KIT NAME: SA-70TVA, LA, LD, LE, LJ, LK, LN
CA-70TVA, LA, LD, LE, LJ, LK, LN,
DOCUMENTS

Kit Number: FB-850

Contents

FB-11/70-NV
FB-VT52
FB-DL11-W
QR300-GZ

KIT NAME: SE-30AVA, LA, LB, LC, LD, LE, LF, LH, LJ,
LK, LL, LM, LN, DOCUMENTS

Kit Number: FB-860

Contents

FB-1134A-2
FB-DD11-D
FB-RJP04-A
FB-H960-C
FB-LA36
QR430-GZ

KIT NAME: SE-30AVA, VA, VB, VC, VD, VE, VF, VH, VJ,
VK, VL, VM, VN, DOCUMENTS

Kit Number: FB-870

Contents

FB-1134A-2
FB-DD11-D
FB-RJP04-A
FB-H960-C
FB-VT52
QR430-GZ

KIT NAME: SE-30FJA, LA, LB, LC, LD, LE, LF, LH, LJ,
LK, LL, LM, LN, DOCUMENTS

Kit Number: FB-880

Contents

FB-1134A-2
FB-H960-C
FB-RK11J
FB-RK05
FB-DD11-D
FB-LA36
QR430-GZ

KIT NAME: SE-30HHA, LA, LB, LC, LD, LE, LF, LH, LJ,
LK, LL, LM, LN, DOCUMENTS

Kit Number: FB-890

Contents

FB-1134A-2
FB-DD11-D
FB-H960-C
FB-LA36
QR430-GZ

KIT NAME: SE-30HHA, VA, VB, VC, VD, VE, VF, VH
VJ, VK, VL, VM, VN, DOCUMENTS

Kit Number: FB-900

Contents

FB-1134A-2
FB-DD11-D
FB-H960-C
FB-VT52
QR430-GZ

KIT NAME: SE-30JJA, LA, LB, LC, LD, LE, LF, LH, LJ,
LK, LL, LM, LN, DOCUMENTS

Kit Number: FB-910

Contents

FB-1134A-2
FB-H960-C
FB-RK11J
FB-RK05
FB-DD11-D
FB-LA36
QR430-GZ

KIT NAME: CE-30JJA, LA, LB, LC, LD, LE, LF, LH, LJ,
LK, LL, LM, LN, DOCUMENTS

Kit Number: FB-920

Contents

FB-1134A-7
FB-DD11-D
FB-H960-C
FB-RK11J
RB-RK05
FB-LA36
QR430-GZ

KIT NAME: SE-30KKA, LA, LB, LC, LD, LE, LF, LH, LJ,
LK, LL, LM, LN, DOCUMENTS

Kit Number: FB-930

Contents

FB-1134A-2
FB-RK611
FB-RK06-EA
FB-DD11-D
FB-LA36
FB-H960-C
QR-430-GZ

KIT NAME: CE-30KKA, LA, LB, LC, LD, LE, LF, LH, LJ,
LK, LL, LM, LN, DOCUMENTS

Kit Number: FB-940

Contents

FB-1134A-7
FB-RK611
FB-RK06-EA
FB-H960-C
FB-DD11-D
FB-LA36
QR430-GZ

KIT NAME: SE-30UVA, LA, LD, LE, LJ, LK, LN,
DOCUMENTS

Kit Number: FB-950

Contents

FB-1134A-2
FB-DD11-D
FB-H960-C
FB-LA36
QR430-GZ

KIT NAME: SE-30UVA, VA, VD, VE, VJ, VK, VN,
DOCUMENTS

Kit Number: FB-960

Contents

FB-1134A-2
FB-DD11-D
FB-H960-C
FB-VT52
QR430-GZ

**KIT NAME: SE-60AVA, LA, LD, LE, LJ, LK, LN,
DOCUMENTS**

Kit Number: FB-970

Contents

FB11Y60-CA
FB-RJP04-A
FB-LA36
QR430-GZ

**KIT NAME: SE-60CVB, LA, LD, LE, LJ, LK, LN,
DOCUMENTS**

Kit Number: FB-980

Contents

FB-11Y60-CA
FB-RJP06-A
FB-LA36
QR430-GZ

**KIT NAME: SE-60FJB, LA, LB, LC, LD, LE, LF, LH, LJ,
LK, LL, LM, LN, DOCUMENTS**

Kit Number: FB-990

Contents

FB-11Y60-CA
FB-RK11J
FB-RK05
FB-LA36
QR430-GZ

KIT NAME: SE-60HHA, LA, LB, LC, LD, LE, LF, LH, LJ,
LK, LL, LM, LN, DOCUMENTS

Kit Number: FB-1000

Contents

FB-11Y60-CA

FB-LA36

QR430-GZ

KIT NAME: SE-60KKA, LA, LB, LC, LD, LE, LF, LH, LJ,
LK, LL, LM, LN, DOCUMENTS

Kit Number: FB-1010

Contents

FB-11S60-C

QR430-GZ

KIT NAME: SE-60UVA, LA, LD, LE, LJ, LK, LN,
DOCUMENTS

Kit Number: FB-1020

Contents

FB-11Y60-CA

FB-LA36

QR430-GZ

KIT NAME: SE-70CVA, LA, LB, LC, LD, LE, LF, LH, LJ,
LK, LL, LM, LN
CE-70CVA, LA, LB, LC, LD, LE, LF, LH, LJ,
LK, LL, LM, LN
SE-70CWA, LA, LB, LC, LD, LE, LF, LH, LJ,
LK, LL, LM, LN
CE-70CWA, LA, LB, LC, LD, LE, LF, LH, LJ,
LK, LL, LM, LN, DOCUMENTS

Kit Number: FB-1030

Contents

FB-11/70-NV
FB-RWP06-A
QR430-GZ

KIT NAME: SE-70TVA, LA, LD, LE, LJ, LK, LN
CE-70TVA, LA, LD, LE, LJ, LK, LN

Kit Number: FB-1040

Contents

FB-11/70-NV
QR430-GZ

KIT NAME: CM-20FJA, LA, LB, LC, LD, LE, LF, LH,
LJ, LK, LL, LM, LN

Kit Number: FB-1050

Contents

FB-11/04-7
FB-H960-C
FB-RK11J

(Continued on Next Page)

KIT NAME: CM-20FJA, LA, LB, LC, LD, LE, LF, LH,
LJ, LK, LL, LM, LN, DOCUMENTS (Continued)

Contents

FB-RK05
FB-LA36
QJ628-GZ

KIT NAME: CM-20FJA, VA, VB, VC, VD, VE, VF, VH,
VJ, VK, VL, VM, VN, DOCUMENTS

Kit Number: FB-1060

Contents

FB-11/04-7
FB-H960-C
FB-RK11J
FB-RK05
FB-VT52
QJ628-GZ

KIT NAME: SM-20JJA, LA, LB, LC, LD, LE, LF, LH,
LJ, LK, LL, LM, LN, DOCUMENTS

Kit Number: FB-1070

Contents

FB-11/04-3
FB-H960-C
FB-RK11J
FB-RK05
FB-LA36
QJ628-GZ

KIT NAME: SM-20JJA, VA, VB, VC, VD, VE, VF, VH,
VJ, VK, VL, VM, VN, DOCUMENTS

Kit Number: FB-1080

Contents

FB-11/04-3
FB-H960-C
FB-RK11J
FB-RK05
FB-VT52
QJ628-GZ

KIT NAME: SM-20LLA, LA, LB, LC, LD, LE, LF, LH,
LJ, DOCUMENTS

Kit Number: FB-1090

Contents

FB-11/04-1
FB-H967
FB-DL11-W
FB-LA36

KIT NAME: SM-20LLA, LK, LL, LM, LN, DOCUMENTS

Kit Number: FB-1100

Contents

FB-11/04-1
FB-H967
FB-DL11-W
FB-LA36
QJ628-GZ

KIT NAME: SM-20LLA, VA, VB, VC, VD, VE, VF,
VH, VJ, DOCUMENTS

Kit Number: FB-1110

Contents

FB-11/04-1
FB-H967
FB-DL11-W
FB-VT52

KIT NAME: SM-20LLA, VK, VL, VM, VN, DOCUMENTS

Kit Number: FB-1120

Contents

FB-11/04-1
FB-H967
FB-DL11-W
FB-VT52
QJ628-GZ

KIT NAME: SM-20LLA, WA, WD, WE, WJ, DOCUMENTS

Kit Number: FB-1130

Contents

FB-11/04-1
FB-H967
FB-DL11-W
FB-VT55

KIT NAME: SM-20LLA, WK, WN, DOCUMENTS

Kit Number: FB-1140

Contents

FB-11/04-1
FB-H967
FB-DL11-W
FB-VT55
QJ628-GZ

KIT NAME: SM-30AVA, LA, LB, LC, LD, LE, LF,
LH, LJ, DOCUMENTS

Kit Number: FB-1150

Contents

FB-1134A-2
FB-DD11-D
FB-RJP04-A
FB-H960-C
FB-LA36

KIT NAME: SM-30AVA, LK, LL, LM, LN, DOCUMENTS

Kit Number: FB-1160

Contents

FB-1134A-2
FB-DD11-D
FB-RJP04-A
FB-H960-C
FB-LA36
QJ628-GZ

KIT NAME: SM-30AVA, VA, VB, VC, VD, VE, VF,
VH, VJ, DOCUMENTS

Kit Number: FB-1170

Contents

FB-1134A-2
FB-DD11-D
FB-RJP04-A
FB-H960-C
FB-VT52

KIT NAME: SM-30AVA, VK, VL, VM, VN, DOCUMENTS

Kit Number: FB-1180

Contents

FB-1134A-2
FB-DD11-D
FB-RJP04-A
FB-H960-C
FB-VT52
QJ628-GZ

KIT NAME: SM-30AVA, WA, WD, WE, WJ, DOCUMENTS

Kit Number: FB-1190

Contents

FB-1134A-2
FB-DD11-D
FB-RJP04-A
FB-H960-C
FB-VT55

KIT NAME: SM-30AVA, WK, WN, DOCUMENTS

Kit Number: FB-1200

Contents

FB-1134A-2
FB-DD11-D
FB-RJP04-A
FB-H960-C
FB-VT55
QJ628-GZ

KIT NAME: SM30FJA, LA, LB, LC, LD, LE, LF,
LH, LJ, DOCUMENTS

Kit Number: FB-1210

Contents

FB-1134A-2
FB-H960-C
FB-RK11J
FB-RK05
FB-LA36

KIT NAME: SM-30FJA, LK, LL, LM, LN, DOCUMENTS

Kit Number: FB-1220

Contents

FB-1134A-2
FB-H960-C
FB-RK11J
FB-RK05
FB-LA36
QJ628-GZ

KIT NAME: SM-30FJA, VA, VB, VC, VD, VE, VF,
VH, VJ, DOCUMENTS

Kit Number: FB-1230

Contents

FB-1134A-2
FB-H960-C
FB-RK11J
FB-RK05
FB-VT52

KIT NAME: SM-30FJA, VK, VL, VM, VN, DOCUMENTS

Kit Number: FB-1240

Contents

FB-1134A-2
FB-H960-C
FB-RK11J
FB-RK05
FB-VT52
QJ628-GZ

KIT NAME: CM-30FJA, LA, LB, LC, LD, LE, LF,
LH, LJ, DOCUMENTS

Kit Number: FB-1250

Contents

FB-1134A-7
FB-DD11-D
FB-H960-C
FB-RK11J
FB-RK05
FB-LA36

KIT NAME: CM-30FJA, LK, LL, LM, LN, DOCUMENTS

Kit Number: FB-1260

Contents

FB-1134A-7
FB-DD11-D
FB-H960-C
FB-RK11J
FB-RK05
FB-LA36
QJ628-GZ

KIT NAME: CM-30FJA, VA, VB, VC, VD, VE, VF,
VH, VJ, DOCUMENTS

Kit Number: FB-1270

Contents

FB-1134A-7
FB-DD11-D
FB-H960-C
FB-RK11J
FB-RK05
FB-VT52

KIT NAME: CM-30FJA, VK, VL, VM, VN, DOCUMENTS

Kit Number: FB-1280

Contents

FB-1134A-7
FB-DD11-D
FB-H960-C
FB-RK11J
FB-RK05
FB-VT52
QJ628-GZ

**KIT NAME: SM-30HHA, LA, LB, LC, LD, LE, LF,
LH, LJ, DOCUMENTS**

Kit Number: FB-1290

Contents

FB-1134A-2
FB-H960-C
FB-DD11-D
FB-LA36

KIT NAME: SM-30HHA, LK, LL, LM, LN, DOCUMENTS

Kit Number: FB-1300

Contents

FB-1134A-2
FB-H960-C
FB-DD11-D
FB-LA36
QJ628-GZ

KIT NAME: SM-30HHA, VA, VB, VC, VD, VE, VF,
VH, VJ, DOCUMENTS

Kit Number: FB-1310

Contents

FB-1134A-2
FB-H960-C
FB-DD11-D
FB-VT52

KIT NAME: SM-30HHA, VK, VL, VM, VN, DOCUMENTS

Kit Number: FB-1320

Contents

FB-1134A-2
FB-H960-C
FB-DD11-D
FB-VT52
QJ628-GZ

KIT NAME: SM-30HHA, WA, WD, WE, WJ, DOCUMENTS

Kit Number: FB-1330

Contents

FB-1134A-2
FB-H960-C
FB-DD11-D
FB-VT55

KIT NAME: SM-30HHA, WK, WN, DOCUMENTS

Kit Number: FB-1340

Contents

FB-1134A-2
FB-H960-C
FB-DD11-D
FB-VT55
QJ628-GZ

**KIT NAME: SM-30JJA, LA, LB, LC, LD, LE, LF, LH,
LJ, DOCUMENTS**

Kit Number: FB-1350

Contents

FB-1134A-2
FB-H960-C
FB-RK11J
FB-RK05
FB-LA36

KIT NAME: SM-30JJA, LK, LL, LM, LN, DOCUMENTS

Kit Number: FB-1360

Contents

FB-1134A-2
FB-H960-C
FB-RK11J
FB-RK05
FB-LA36
QJ628-GZ

KIT NAME: SM-30JJA, VA, VB, VC, VD, VE, VF,
VH, VJ, DOCUMENTS

Kit Number: FB-1370

Contents

FB-1134A-2
FB-H960-C
FB-RK11J
FB-RK05
FB-VT52

KIT NAME: SM30JJA, VK, VL, VM, VN, DOCUMENTS

Kit Number: FB-1380

Contents

FB-1134A-2
FB-H960-C
FB-RK11J
FB-RK05
FB-VT52
QJ628-GZ

KIT NAME: CM-30JJA, LA, LB, LC, LD, LE, LF, LH,
LJ, DOCUMENTS

Kit Number: FB-1390

Contents

FB-1134A-7
FB-H960-C
FB-RK11J
FB-RK05
FB-DD11-D
FB-LA36

KIT NAME: CM-30JJA, LK, LL, LM, LN, DOCUMENTS

Kit Number: FB-1400

Contents

FB-1134A-7
FB-H960-C
FB-RK11J
FB-RK05
FB-DD11-D
FB-LA36
QJ628-GZ

**KIT NAME: CM-30JJA, VA, VB, VC, VD, VE, VF,
VH, VJ, DOCUMENTS**

Kit Number: FB-1410

Contents

FB-1134A-7
FB-H960-C
FB-RK05
FB-DD11-D
FB-VT52

KIT NAME: CM-30JJA, VK, VL, VM, VN, DOCUMENTS

Kit Number: FB-1420

Contents

FB-1134A-7
FB-H960-C
FB-RK05
FB-DD11-D
FB-VT52
QJ628-GZ

**KIT NAME: SM-30KKA, LA, LB, LC, LD, LE, LF,
LH, LJ, DOCUMENTS**

Kit Number: FB-1430

Contents

FB-1134A-2
FB-RK611
FB-RK06-EA
FB-H960-C
FB-DD11-D
FB-LA36

KIT NAME: SM-30KKA, LK, LL, LM, LN, DOCUMENTS

Kit Number: FB-1440

Contents

FB-1134A-2
FB-RK611
FB-RK06-EA
FB-H960-C
FB-DD11-D
FB-LA36
QJ628-GZ

**KIT NAME: SM-30KKA, VA, VB, VC, VD, VE, VF,
VH, VJ, DOCUMENTS**

Kit Number: FB-1450

Contents

FB-1134A-2
FB-RK611
FB-RK06-EA

(Continued on Next Page)

KIT NAME: SM-30KKA, VA, VB, VC, VD, VE, VF,
VH, VJ, DOCUMENTS (Continued)

Contents

FB-H960-C
FB-DD11-D
FB-VT52

KIT NAME: SM-30KKA, VK, VL, VM, VN, DOCUMENTS

Kit Number: FB-1460

Contents

FB-1134A-2
FB-RK611
FB-RK06-EA
FB-H960-C
FB-DD11-D
FB-VT52
QJ628-GZ

KIT NAME: CM-30KKA, LA, LB, LC, LD, LE, LF,
LH, LJ, DOCUMENTS

Kit Number: FB-1470

Contents

FB-1134A-7
FB-RK611
FB-RK06-EA
FB-H960-C
FB-DD11-D
FB-LA36

KIT NAME: CM-30KKA, LK, LL, LM, LN, DOCUMENTS

Kit Number: FB-1480

Contents

FB-1134A-7
FB-RK611
FB-RK06-EA
FB-H960-C
FB-DD11-D
FB-LA36
QJ628-GZ

**KIT NAME: CM-30KKA, VA, VB, VC, VD, VE, VF,
VH, VJ, DOCUMENTS**

Kit Number: FB-1490

Contents

FB-1134A-7
FB-RK611
FB-RK06-EA
FB-H960-C
FB-DD11-D
FB-VT52

KIT NAME: CM-30KKA, VK, VL, VM, VN, DOCUMENTS

Kit Number: FB-1500

Contents

FB-1134A-7
FB-RK611
FB-RK06-EA
FB-H960-C
FB-DD11-D
FB-VT52
QJ628-GZ

KIT NAME: SM-30LLA, LA, LB, LC, LD, LE, LF, LH, LJ,
DOCUMENTS

Kit Number: FB-1510

Contents

FB-1134A-2
FB-H960-C
FB-DD11-D
FB-LA36

KIT NAME: SM-30LLA,LK, LL, LM, LN, DOCUMENTS

Kit Number: FB-1520

Contents

FB-1134A-2
FB-H960-C
FB-DD11-D
FB-LA36
QJ628-GZ

KIT NAME: SM-30LLA, VA, VB, VC, VD, VE, VF, VH,
VJ, DOCUMENTS

Kit Number: FB-1530

Contents

FB-1134A-2
FB-H960-C
FB-DD11-D
FB-VT52

KIT NAME: SM-30LLA,VK, VL, VM, VN, DOCUMENTS

Kit Number: FB-1540

Contents

FB-1134A-2
FB-H960-C
FB-DD11-D
FB-VT52
QJ628-GZ

KIT NAME: SM-30LLA,WA, WD, WE, WJ, DOCUMENTS

Kit Number: FB-1550

Contents

FB-1134A-2
FB-H960-C
FB-DD11-D
FB-VT55

KIT NAME: SM-30LLA,WK, WN, DOCUMENTS

Kit Number: FB-1560

Contents

FB-1134A-2
FB-H960-C
FB-DD11-D
FB-VT55
QJ628-GZ

KIT NAME: SM-30UVA,LA, LD, LE, LJ, DOCUMENTS

Kit Number: FB-1570

Contents

FB-1134A-2
FB-DD11-D
FB-H960-C
FB-LA36

KIT NAME: SM-30UVA,LK, LN, DOCUMENTS

Kit Number: FB-1580

Contents

FB-1134A-2
FB-DD11-D
FB-H960-C
FB-LA36
QJ628-GZ

KIT NAME: SM-30UVA,VA, VD, VE, VJ, DOCUMENTS

Kit Number: FB-1590

Contents

FB-1134A-2
FB-DD11-D
FB-H960-C
FB-VT52

KIT NAME: SM-30UVA, VK, VN, DOCUMENTS

Kit Number: FB-1600

Contents

FB-1134A-2
FB-DD11-D
FB-H960-C
FB-VT52
QJ628-GZ

KIT NAME: SM-30UVA, WA, WD, WE, WJ, DOCUMENTS

Kit Number: FB-1610

Contents

FB-1134A-2
FB-DD11-D
FB-H960-C
FB-VT55

KIT NAME: SM-30UVA, WK, WN, DOCUMENTS

Kit Number: FB-1620

Contents

FB-1134A-2
FB-DD11-D
FB-H960-C
FB-VT55
QJ628-GZ

KIT NAME: SM-50FJA, LA, LD, LE, LJ, DOCUMENTS

Kit Number: FB-1630

Contents

FB-11/55-B1
FB-FP11-C
FB-RK11J-D
FB-RK05

KIT NAME: SM-50FJA, LK, LN, DOCUMENTS

Kit Number: FB-1640

Contents

FB-11/55-B1
FB-FP11-C
FB-RK11J-D
FB-RK05
QJ628-GZ

**KIT NAME: CM-50FJA, LA, LB, LC, LD, LE, LF,
LH, LJ, DOCUMENTS**

Kit Number: FB-1650

Contents

FB-11T55-B
FB-BA11-K

KIT NAME: CM-50FJA, LK, LL, LM, LN, DOCUMENTS

Kit Number: FB-1660

Contents

FB-11T55-B

FB-BA11-K

QJ628-GZ

**KIT NAME: SM-50JJA, LA, LB, LC, LD, LE, LF,
LH, LJ, DOCUMENTS**

Kit Number: FB-1670

Contents

FB-11T55-B

KIT NAME: SM-50JJA, LK, LL, LM, LN, DOCUMENTS

Kit Number: FB-1680

Contents

FB-11T55-B

QJ628-GZ

KIT NAME: CM-50JJA, LA, LB, LC, LD, LE, LF, LH, LJ,
DOCUMENTS

Kit Number: FB-1690

Contents

FB-11T55-B1

FB-BA11-K

KIT NAME: CM-50JJA, LK, LL, LM, LN, DOCUMENTS

Kit Number: FB-1700

Contents

FB-11T55-B

FB-BA11-K

QJ628-GZ

KIT NAME: SM-60AVA, LA, LD, LE, LJ, DOCUMENTS

Kit Number: FB-1710

Contents

FB-11Y60-CA

FB-RJP04-A

FB-LA36

KIT NAME: SM-60AVA, LK, LN, DOCUMENTS

Kit Number: FB-1720

Contents

FB-11Y60-CA
FB-RJP04-A
FB-LA36
QJ628-GZ

KIT NAME: SM-60CVA, LA, LD, LE, LJ, DOCUMENTS

Kit Number: FB-1730

Contents

FB-11Y60-CA
FB-RJP06-A
FB-LA36

KIT NAME: SM-60CVA, LK, LN, DOCUMENTS

Kit Number: FB-1740

Contents

FB-11Y60-CA
FB-RJP06-A
FB-LA36
QJ628-GZ

KIT NAME: SM-60FJB, LA, LB, LC, LD, LE, LF, LH, LJ,
DOCUMENTS

Kit Number: FB-1750

Contents

FB-11Y60-CA
FB-RK11J
FB-RK05
FB-LA36

KIT NAME: SM-60FJB, LK, LL, LM, LN, DOCUMENTS

Kit Number: FB-1760

Contents

FB-11Y60-CA
FB-RK11J
FB-RK05
FB-LA36
QJ628-GZ

KIT NAME: SM-60HHA, LA, LB, LC, LD, LE, LF, LH, LJ,
DOCUMENTS

Kit Number: FB-1770

Contents

FB-11Y60-CA
FB-LA36

KIT NAME: SM-60HHA, LK, LL, LM, LN, DOCUMENTS

Kit Number: FB-1780

Contents

FB-11Y60-CA

FB-LA36

QJ628-GZ

**KIT NAME: SM-60HHB, LA, LB, LC, LD, LE, LF, LH, LJ,
DOCUMENTS**

Kit Number: FB-1790

Contents

FB-11X60-C

KIT NAME: SM-60HHB, LK, LL, LM, LN, DOCUMENTS

Kit Number: FB-1800

Contents

FB-11X60-C

QJ628-GZ

**KIT NAME: SM-60KKA, LA, LB, LC, LD, LE, LF, LH, LJ,
DOCUMENTS**

Kit Number: FB-1810

Contents

FB-11S60-C

KIT NAME: SM-60KKA, LK, LL, LM, LN, DOCUMENTS

Kit Number: FB-1820

Contents

FB-11S60-C
QJ628-GZ

**KIT NAME: SM-60LLA, LA, LB, LC, LD, LE, LF, LH, LJ,
DOCUMENTS**

Kit Number: FB-1830

Contents

FB-11Y60-CA
FB-DD11-C
FB-LA36

KIT NAME: SM-60LLA, LK, LL, LM, LN, DOCUMENTS

Kit Number: FB-1840

Contents

FB-11Y60-CA
FB-DD11-C
FB-LA36
QJ628-GZ

KIT NAME: SM-60UVA, LA, LD, LE, LJ, DOCUMENTS

Kit Number: FB-1850

Contents

FB-11Y60-CA
FB-LA36

KIT NAME: SM-60UVA, LK, LN, DOCUMENTS

Kit Number: FB-1860

Contents

FB-11Y60-CA
FB-LA36
QJ628-GZ

**KIT NAME: SM-70CVA, LA, LB, LC, LD, LE, LF, LH, LJ
CM-70CVA, LA, LB, LC, LD, LE, LF, LH, LJ
SM-70CWA, LA, LB, LC, LD, LE, LF, LH, LJ
CM-70CWA, LA, LB, LC, LD, LE, LF, LH, LJ,
DOCUMENTS**

Kit Number: FB-1870

Contents

FB-11/70-NV
FB-RWP06-A

KIT NAME: SM-70CVA, LK, LL, LM, LN
CM-70CVA, LK, LL, LM, LN
SM-70CWA, LK, LL, LM, LN
CM-70CWA, LK, LL, LM, LN, DOCUMENTS

Kit Number: FB-1880

Contents

FB-11/70-NV
FB-RWP06-A
QJ628-GZ

KIT NAME: SM-70TVA, LA, LD, LE, LJ
CM-70TVA, LA, LD, LE, LJ, DOCUMENTS

Kit Number: FB-1890

Contents

FB-11/70-NV

KIT NAME: SM-70TVA, LK, LN
CM-70TVA, LK, LN, DOCUMENTS

Kit Number: FB-1900

Contents

FB-11/70-NV
QJ628-GZ

KIT NAME: SP-30AVB, LA, LB, LC, LD, LF, LH, LJ, LK,
LL, LM, LN, DOCUMENTS

Kit Number: FB-1910

Contents

FB-1134A-2
FB-DD11-D
FB-RJP04-A
FB-H960-C
FB-LA36

KIT NAME: SP-30AVB, VA, VB, VC, VD, VE, VF, VH, VJ,
VK, VL, VM, VN, DOCUMENTS

Kit Number: FB-1920

Contents

FB-1134A-2
FB-DD11-D
FB-RJP04-A
FB-H960-C
FB-VT52

KIT NAME: SP-30FJA, LA, LB, LC, LD, LE, LF, LH, LJ,
LK, LL, LM, LN, DOCUMENTS

Kit Number: FB-1930

Contents

FB-1134A-2
FB-H960-C
FB-RK11J
FB-LA36

KIT NAME: SP-30FJA, VA, VB, VC, VD, VE, VF, VH, VJ,
VK, VL, VM, VN, DOCUMENTS

Kit Number: FB-1940

Contents

FB-1134A-2
FB-H960-C
FB-RK11J
FB-VT52

KIT NAME: SP-30HTA, LA, LD, LE, LJ, LK, LN,
DOCUMENTS

Kit Number: FB-1950

Contents

FB-1134A-2
FB-H960-C
FB-TMB11-M
FB-DD11-D
FB-LA36

KIT NAME: SP-30HTA, VA, VD, VE, VJ, VK, VN,
DOCUMENTS

Kit Number: FB-1960

Contents

FB-1134A-2
FB-H960-C
FB-TMB11-M
FB-DD11-D
FB-VT52

KIT NAME: CP-30JJA, LA, LB, LC, LD, LE, LF, LH, LJ,
LK, LL, LM, LN, DOCUMENTS

Kit Number: FB-1970

Contents

FB-1134A-7
FB-H960-C
FB-RK11J
FB-RK05
FB-DD11-D
FB-LA36

KIT NAME: CP-30JJA, VA, VB, VC, VD, VE, VF, VH, VJ,
VK, VL, VM, VN, DOCUMENTS

Kit Number: FB-1980

Contents

FB-1134A-7
FB-H960-C
FB-RK11J
FB-RK05
FB-DD11-D
FB-VT52

KIT NAME: SP-30UVA, LA, LD, LE, LJ, LK, LN,
DOCUMENTS

Kit Number: FB-1990

Contents

FB-1134A-2
FB-DD11-D
FB-H960-C
FB-LA36

KIT NAME: SP-30UVA, VA, VD, VE, VJ, VK, VN,
DOCUMENTS

Kit Number: FB-2000

Contents

FB-1134A-2
FB-DD11-D
FB-VT52

KIT NAME: SP-60AVA, LA, LD, LE, LJ, LK, LN,
DOCUMENTS

Kit Number: FB-2010

Contents

FB-11Y60-CA
FB-RJP04-A
FB-LA36

KIT NAME: SP-60CVB, LA, LD, LE, LJ, LK, LN,
DOCUMENTS

Kit Number: FB-2020

Contents

FB-11Y60-CA
FB-RJP06-A
FB-LA36

KIT NAME: SP-60FJB, LA, LB, LC, LD, LE, LF, LH, LJ,
LK, LL, LM, LN, DOCUMENTS

Kit Number: FB-2030

Contents

FB-11Y60-CA
FB-RK11J
FB-RK05
FB-LA36

KIT NAME: SP-60HTA, LA, LD, LE, LJ, LK, LN,
DOCUMENTS

Kit Number: FB-2040

Contents

FB-11X60-C
FB-TMB11-M

KIT NAME: SP-60UVA, LA, LD, LE, LJ, LK, LN,
DOCUMENTS

Kit Number: FB-2050

Contents

FB-11Y60-CA
FB-LA36

KIT NAME: SP-70CVA, LA, LB, LC, LD, LE, LF, LH, LJ,
LK, LL, LM, LN
CP-70CVA, LA, LB, LC, LD, LE, LF, LH, LJ,
LK, LL, LM, LN
SP-70CWA, LA, LB, LC, LD, LE, LF, LH, LJ,
LK, LL, LM, LN
CP-70CWA, LA, LB, LC, LD, LE, LF, LH, LJ,
LK, LL, LM, LN, DOCUMENTS

Kit Number: FB-2060

Contents

FB-11/70-NV
FB-RWP06-A

KIT NAME: SP-70TVA, LA, LD, LE, LJ, LK, LN
CP-70TVA, LA, LD, LE, LJ, LK, LN,
DOCUMENTS

Kit Number: FB-2070

Contents

FB-11/70-NV

KIT NAME: SR-20FJA, LA, LB, LC, LD, LE, LF, LH, LJ,
LK, LL, LM, LN
SR-20JJA, LA, LB, LC, LD, LE, LF, LH, LJ,
LK, LL, LM, LN, DOCUMENTS

Kit Number: FB-2080

Contents

FB-11/04-3
FB-H960-C
FB-RK11J
FB-RK05
FB-LA36
QJ013-GZ

KIT NAME: SR-20FJA, VA, VB, VC, VD, VE, VF, VH, VJ,
VK, VL, VM, VN,
SR-20JJA, VA, VB, VC, VD, VE, VF, VH, VJ,
VK, VL, VM, VN, DOCUMENTS

Kit Number: FB-2090

Contents

FB-11/04-3
FB-H960-C
FB-RK11J

(Continued on Next Page)

KIT NAME: SR-20FJA, VA, VB, VC, VD, VE, VF, VH, VJ,
VK, VL, VM, VN
SR-20JJA, VA, VB, VC, VD, VE, VF, VH, VJ,
VK, VL, VM, VN, DOCUMENTS (Continued)

Contents

FB-RK05
FB-VT52
QJ013-GZ

KIT NAME: SR-20FJA, WA, WD, WE, WJ, WK, WN
SR-20JJA, WA, WD, WE, WJ, WK, WN,
DOCUMENTS

Kit Number: FB-2100

Contents

FB-11/04-3
FB-H960-C
FB-RK11J
FB-RK05
FB-VT55
QJ013-GZ

KIT NAME: CR-20JJA, LA, LB, LC, LD, LE, LF, LH, LJ,
LK, LL, LM, LN, DOCUMENTS

Kit Number: FB-2110

Contents

FB-11/04-7
FB-H960-C
FB-RK11J
FB-RK05
FB-LA36
QJ013-GZ

KIT NAME: CR-20JJA, VA, VB, VC, VD, VE, VF, VH, VJ,
VK, VL, VM, VN, DOCUMENTS

Kit Number: FB-2120

Contents

FB-11/04-7
FB-H960-C
FB-RK11J
FB-RK05
FB-VT52
QJ013-GZ

KIT NAME: CR-20JJA, WA, WD, WE, WJ, WK, WN,
DOCUMENTS

Kit Number: FB-2130

Contents

FB-11/04-7
FB-H960-C
FB-RK11J
FB-RK05
FB-VT55
QJ013-GZ

KIT NAME: SR-20LLA, LA, LB, LC, LD, LE, LF, LH, LJ,
LK, LL, LM, LN, DOCUMENTS

Kit Number: FB-2140

Contents

FB-11/04-1
FB-H967
FB-DL11-W
FB-LA36
QJ013-GZ

KIT NAME: SR-20LLA, VA, VB, VC, VD, VE, VF, VH, VJ, VK,
VL, VM, VN, DOCUMENTS

Kit Number: FB-2150

Contents

FB-11/04-1
FB-H967
FB-DL11-W
FB-VT52
QJ013-GZ

KIT NAME: SR-20LLA, WA, WD, WE, WJ, WK, WN,
DOCUMENTS

Kit Number: FB-2160

Contents

FB-11/04-1
FB-H967
FB-DL11-W
FB-VT55
QJ013-GZ

KIT NAME: SR-20RRA, LA, LC, LD, LE, LH, LJ, LK, LM,
LN, DOCUMENTS

Kit Number: FB-2170

Contents

FB-11/04-3
FB-H960-C
FB-LA36
QJ013-GZ

KIT NAME: SR-20RRA, VA, VC, VE, VH, VJ, VK, VM,
VN, DOCUMENTS

Kit Number: FB-2180

Contents

FB-11/04-3
FB-H960-C
FB-VT52
QJ013-GZ

KIT NAME: SR-20RRA, WA, WD, WE, WJ, WK, WN,
DOCUMENTS

Kit Number: FB-2190

Contents

FB-11/04-3
FB-H960-C
FB-VT55
QJ013-GZ

KIT NAME: CR-20RRA, LA, LC, LD, LE, LH, LJ, LK,
LM, LN, DOCUMENTS

Kit Number: FB-2200

Contents

FB-11/04-7
FB-H967
FB-LA36
QJ013-GZ

KIT NAME: CR-20RRA, VA, VC, VD, VE, VH, VJ, VK, VM,
VN, DOCUMENTS

Kit Number: FB-2210

Contents

FB-11/04-7
FB-H967
FB-VT52
QJ013-GZ

KIT NAME: CR-20RRA, WA, WD, WE, WJ, WK, WN,
DOCUMENTS

Kit Number: FB-2220

Contents

FB-11/04-7
FB-H967
FB-VT55
QJ013-GZ

KIT NAME: SR-30FJA, LA, LB, LC, LD, LE, LF, LH, LJ, LK,
LL, LM, LN, DOCUMENTS

Kit Number: FB-2230

Contents

FB-1134A-2
FB-H960-C
FB-RK11J
FB-RK05
FB-LA36
QJ013-GZ

KIT NAME: SR-30FJA, VA, VB, VC, VD, VE, VF, VH, VJ,
VK, VL, VM, VN, DOCUMENTS

Kit Number: FB-2240

Contents

FB-1134A-2
FB-H960-C
FB-RK11J
FB-RK05
FB-VT52
QJ013-GZ

KIT NAME: SR-30FJA, WA, WD, WE, WJ, WK, WN,
DOCUMENTS

Kit Number: FB-2250

Contents

FB-1134A-2
FB-H960-C
FB-RK11J
FB-RK05
FB-VT55
QJ013-GZ

KIT NAME: CR-30FJA, LA, LB, LC, LD, LE, LF, LH, LJ,
LK, LL, LM, LN, DOCUMENTS

Kit Number: FB-2260

Contents

FB-1134A-7
FB-H960-C
FB-RK11J

(Continued on Next Page)

KIT NAME: CR-30FJA, LA, LB, LC, LD, LE, LF, LH, LJ,
LK, LL, LM, LN, DOCUMENTS (Continued)

Contents

FB-RK05
FB-DD11-D
FB-LA36
QJ013-GZ

KIT NAME: CR-30FJA, VA, VB, VC, VD, VE, VF, VH, VJ,
VK, VL, VM, VN, DOCUMENTS

Kit Number: FB-2270

Contents

FB-1134A-7
FB-H960-C
FB-RK11J
FB-RK05
FB-DD11-D
FB-VT52
QJ013-GZ

KIT NAME: CR-30FJA, WA, WD, WE, WJ, WK, WN,
DOCUMENTS

Kit Number: FB-2280

Contents

FB-1134A-7
FB-H960-C
FB-RK11J
FB-RK05
FB-DD11-D
FB-VT55
QJ013-GZ

KIT NAME: SR-30JJA, LA, LB, LC, LD, LE, LF, LH, LJ,
LK, LL, LM, LN, DOCUMENTS

Kit Number: FB-2290

Contents

FB-1134A-2
FB-H960-C
FB-RK11J
FB-RK05
FB-LA36
QJ013-GZ

KIT NAME: SR-30JJA, VA, VB, VC, VD, VE, VF, VH, VJ,
VK, VL, VM, VN, DOCUMENTS

Kit Number: FB-2300

Contents

FB-1134A-2
FB-H960-C
FB-RK11J
FB-RK05
FB-VT52
QJ013-GZ

KIT NAME: SR-30JJA, WA, WD, WE, WJ, WK, WN,
DOCUMENTS

Kit Number: FB-2310

Contents

FB-1134A-2
FB-H960-C
FB-RK11J

(Continued on Next Page)

KIT NAME: SR-30JJA, WA, WD, WE, WJ, WK, WN,
DOCUMENTS (Continued)

Contents

FB-RK05
FB-VT55
QJ013-GZ

KIT NAME: CR-30JJA, LA, LB, LC, LD, LE, LF, LH, LJ, LK,
LL, LM, LN, DOCUMENTS

Kit Number: FB-2320

Contents

FB-1134A-7
FB-H960-C
FB-RK11J
FB-DD11-D
FB-LA36
QJ013-GZ

KIT NAME: CR-30JJA, VA, VB, VC, VD, VE, VF, VH, VJ,
VK, VL, VM, VN, DOCUMENTS

Kit Number: FB-2330

Contents

FB-1134A-7
FB-H960-C
FB-RK11J
FB-DD11-D
FB-VT52
QJ013-GZ

KIT NAME: CR-30JJA, WA, WD, WE, WJ, WK, WN,
DOCUMENTS

Kit Number: FB-2340

Contents

FB-1134A-7
FB-H960-C
FB-RK11J
FB-DD11-D
FB-VT55
QJ013-GZ

KIT NAME: SR-30LLA, LA, LB, LC, LD, LE, LF, LH, LJ,
LK, LL, LM, LN, DOCUMENTS

Kit Number: FB-2350

Contents

FB-1134A-2
FB-H960-C
FB-DD11-D
FB-LA36
QJ013-GZ

KIT NAME: SR-30LLA, VA, VB, VC, VD, VE, VF, VH, VJ,
VK, VL, VM, VN, DOCUMENTS

Kit Number: FB-2360

Contents

FB-1134A-2
FB-H960-C
FB-DD11-D
FB-VT52
QJ013-GZ

**KIT NAME: SR-30LLA, WA, WD, WE, WJ, WK, WN,
DOCUMENTS**

Kit Number: FB-2370

Contents

FB-1134A-2
FB-H960-C
FB-VT55
FB-DD11-D
QJ013-GZ

**KIT NAME: SR-30RRA, LA, LC, LD, LE, LH, LJ, LK, LM,
LN, DOCUMENTS**

Kit Number: FB-2380

Contents

FB-1134A-2
FB-H960-C
FB-LA36
QJ013-GZ

**KIT NAME: SR-30RRA, VA, VC, VD, VE, VH, VJ, VK, VM,
VN, DOCUMENTS**

Kit Number: FB-2390

Contents

FB-1134A-2
FB-H960-C
FB-VT52
QJ013-GZ

KIT NAME: SR-30RRA, WA, WD, WE, WJ, WK, WN,
DOCUMENTS

Kit Number: FB-2400

Contents

FB-1134A-2
FB-H960-C
FB-VT55
QJ013-GZ

KIT NAME: CR-30RRA, LA, LC, LD, LE, LH, LJ, LK,
LM, LN, DOCUMENTS

Kit Number: FB-2410

Contents

FB-1134A-5
FB-H960-C
FB-LA36
QJ013-GZ

KIT NAME: CR-30RRA, VA, VC, VD, VE, VH, VJ, VK,
VM, VN, DOCUMENTS

Kit Number: FB-2420

Contents

FB-1134A-5
FB-H960-C
FB-VT52
QJ013-GZ

KIT NAME: CR-30RRA, WA, WD, WE, WJ, WK, WN,
DOCUMENTS

Kit Number: FB-2430

Contents

FB-1134A-5
FB-H960-C
FB-VT55
QJ013-GZ

KIT NAME: SR-60FJB, LA, LB, LC, LD, LE, LF, LH, LJ,
LK, LL, LM, LN, DOCUMENTS

Kit Number: FB-2440

Contents

FB-11Y60-CA
FB-RK11J
FB-RK05
FB-LA36
QJ013-GZ

KIT NAME: SR-60LLA, LA, LB, LC, LD, LE, LF, LH, LJ,
LK, LL, LM, LN, DOCUMENTS

Kit Number: FB-2450

Contents

FB-11Y60-CA
FB-DD11-C
FB-LA36
QJ013-GZ

KIT NAME: SR-VXFJA, LA, LB, LC, LD, LE, LF, LH, LJ,
LK, LL, LM, LN, DOCUMENTS

Kit Number: FB-2460

Contents

FB-11/03
FB-REV11
FB-DLV11
FB-RK05
FB-RKV11-D
FB-H967
FB-LA36
QJ013-GZ

KIT NAME: SR-VXFJA, VA, VB, VC, VD, VE, VF, VH, VJ,
VK, VL, VM, VN, DOCUMENTS

Kit Number: FB-2470

Contents

FB-11/03
FB-REV11
FB-DLV11
FB-RKV11-D
FB-RK05
FB-H967
FB-VT52
QJ013-GZ

KIT NAME: SR-VXLLA, LA, LB, LC, LD, LE, LF, LH, LJ,
LK, LL, LM, LN, DOCUMENTS

Kit Number: FB-2480

Contents

FB-11/03
FB-MSV11-C
FB-DLV11
FB-LA36
QJ013-GZ

KIT NAME: SR-VXLLA, VA, VB, VC, VD, VE, VF, VH, VJ,
VK, VL, VM, VN, DOCUMENTS

Kit Number: FB-2490

Contents

FB-11/03
FB-MSV11-D
FB-DLV11
FB-VT52
QJ013-GZ

KIT NAME: SR-VXRRA, LA, LC, LD, LE, LH, LJ, LK, LM,
LN, DOCUMENTS

Kit Number: FB-2500

Contents

FB-11/03
FB-DLV11
FB-RXV11
FB-REV11
FB-LA36
QJ013-GZ

KIT NAME: SR-VXRRA, VA, VC, VD, VE, VH, VJ, VK, VM,
VN, DOCUMENTS

Kit Number: FB-2510

Contents

FB-11/03
FB-DLV11
FB-RXV11
FB-REV11
FB-VT52
QJ013-GZ

KIT NAME: SG-70CVA, LA, LD, LK, LN
SG-70CVB, LA, LD, DOCUMENTS

Kit Number: FB-2520

Contents

FB-11/70-NV
FB-RWP06-A

KIT NAME: SG-70TVA, LA, LD, LK, LN
SG-70TVB, LA, LD, DOCUMENTS

Kit Number: FB-2530

Contents

 
FB-11/70-NV

KIT NAME: ST-30HVA, LA, LD, LK, LN
ST-31HVA, LA, LD, LK, LN
ST-30UVA, LA, LD, LK, LN
ST-31UVA, LA, LD, LK, LN, DOCUMENTS

Kit Number: FB-2540

Contents

FB-1134A-2
FB-MJ11
FB-DD11-D
FB-LA36
FB-DZ11
FB-H775
FB-KMC11



| Kit Name | Kit Number | Page |
|-------------------------------|-------------------|-------------|
| 11/03,LC,LD,WC,WD | FB-11/03-1 | 1 |
| 11/03,EA,EB,FA,FB,KA,KB,JA,JB | FB-11/03-2 | 1 |
| 11/04,BC,BD,DC,DD,LC,LD | FB-11/04-1 | 2 |
| 11/04,DH,DJ,LH,LJ | FB-11/04-2 | 3 |
| 11/04,DM,DN | FB-11/04-3 | 3 |
| 11/04,FC,FD | FB-11/04-4 | 4 |
| 11/04,HC,HD | FB-11/04-5 | 5 |
| 11/04,HH,HJ,MH,MJ | FB-11/04-6 | 6 |
| 11/04,HM,HN | FB-11/04-7 | 6 |
| 11/04,MC,MD | FB-11/04-8 | 7 |
| 11/05,LA,LB,NC,ND | FB-11/05-LN | 8 |
| 11/05,S | FB-11/05-S | 9 |
| 11/15 | FB-11/15 | 9 |
| 1134A,DC,DD,LC,LD | FB-1134A-1 | 10 |
| 1134A,DE,DF,LE,LF | FB-1134A-2 | 10 |
| 1134A,DH,DJ,LH,LJ | FB-1134A-3 | 11 |
| 1134A,HC,HD,MC,MD | FB-1134A-4 | 12 |
| 1134A,HE,HF | FB-1134A-5 | 13 |
| 1134A,HH,HJ,MH,MJ | FB-1134A-6 | 14 |
| 1134A,ME,MF | FB-1134A-7 | 15 |
| 11/35,FC,FD | FB-11/35-F | 16 |
| 11/35,JA,JB | FB-11/35-JA | 17 |
| 11/35,JC,JD | FB-11/35-JC | 17 |
| 11/35,SE,SF | FB-11/35-S | 18 |
| 11/40 | FB-11/40 | 18 |
| 11/45 | FB-11/45 | 19 |
| 11/55,BA,BB | FB-11/55-B1 | 20 |
| 11/55,BC,BD | FB-11/55-B2 | 21 |
| 11L03,CA,CC,CD | FB-11L03-C | 22 |
| 11/70 ALL N & V VAR. | FB-11/70-NV | 23 |
| 11L03,DA,DC,DD | FB-11L03-D | 24 |
| 11L34,EF,HE,HF,JE,JF | FB-11L34-1 | 24 |
| 11L34,FE,FF | FB-11L34-2 | 25 |
| 11L34,KE,KF,ME,MF | FB-11L34-3 | 27 |
| 11L34,LE,LF,NE,NF | FB-11L34-4 | 28 |
| 11L34,PE,PF | FB-11L34-5 | 29 |
| 11L34,RE,RF | FB-11L34-6 | 30 |

| Kit Name | Kit Number | Page |
|-------------------------|-------------|------|
| 11S55,BC,BD | FB-11S55-B | 32 |
| 11S60,B | FB-11S60-B | 33 |
| 11S60,C | FB-11S60-C | 34 |
| 11T05 | FB-11T05 | 35 |
| 11T35,A | FB-11T35-A | 36 |
| 11T40,A | FB-11T40-A | 37 |
| 11T55,BC,BD | FB-11T55-B | 38 |
| 11W40 | FB-11W40 | 39 |
| 11W45 | FB-11W45 | 40 |
| 11X60,B | FB-11X60-B | 41 |
| 11X60,C | FB-11X60-C | 42 |
| 11Y60,BA,BB | FB-11Y60-B | 43 |
| 11Y60,CA | FB-11Y60-CA | 43 |
| 11Y60,CB | FB-11Y60-CB | 44 |
| 861,A,B,C,D,E | FB-861 | 45 |
| 8A100,A | FB-8A100-A | 46 |
| 8A100,F | FB-8A100-F | 46 |
| 8A205 | FB-8A205 | 47 |
| 8A400,B | FB-8A400-B | 47 |
| 8A400,CM,CN,CP,CR,CS,CT | FB-8A400-C1 | 48 |
| 8A400,CU,CV | FB-8A400-C2 | 48 |
| 8A400,DM,DN,DP,DR | FB-8A400-D1 | 49 |
| 8A400,DS,DT,EM,EN | FB-8A400-DE | 49 |
| 8A400,DU,DV | FB-8A400-D2 | 50 |
| 8A400,EP,ER,ES,ET,EU,EV | FB-8A400-E | 50 |
| 8A420,B | FB-8A420-B | 51 |
| 8A420,C | FB-8A420-C | 51 |
| 8A420,D | FB-8A420-D | 52 |
| 8A425 | FB-8A425 | 52 |
| 8A600,B | FB-8A600-B | 53 |
| 8A600,C | FB-8A600-C | 53 |
| 8A600,D | FB-8A600-D | 54 |
| 8A620,B | FB-8A620-B | 54 |
| 8A620,C | FB-8A620-C | 55 |
| 8A620,D | FB-8A620-D | 55 |
| 8A620,E | FB-8A620-E | 56 |
| 8A625 | FB-8A625 | 56 |

| Kit Name | Kit Number | Page |
|---------------|-------------|------|
| 8A800-P | FB-8A800-P | 57 |
| 8A800,R | FB-8A800-R | 57 |
| 8A820,P | FB-8A820-P | 58 |
| 8A820,R | FB-8A820-R | 58 |
| 8A820,S | FB-8A820-S | 59 |
| AA11 | FB-AA11-D | 59 |
| AA11-FA | FB-AA11-FA | 60 |
| AA11,K,KT | FB-AA11-KT | 60 |
| AA50,AN,BN,BP | FB-AA50 | 60 |
| AAV11,A | FB-AAV11-A | 61 |
| AD01 | FB-AD01 | 61 |
| AD11,K | FB-AD11-K | 61 |
| AD8,A | FB-AD8-A | 62 |
| AD8,B | FB-AD8-B | 62 |
| ADK11,KT | FB-ADK11-KT | 62 |
| ADV11,A | FB-ADV11 | 63 |
| AFC8 | FB-AFC8 | 63 |
| AFC8,PA | FB-AFC8-PA | 63 |
| AH04 | FB-AH04 | 64 |
| AH05 | FB-AH05 | 64 |
| AM11,K | FB-AM11-K | 64 |
| AR11 | FB-AR11 | 64 |
| AR11,KT | FB-AR11-K | 65 |
| BA11,ES | FB-BA11-E | 65 |
| BA11,FD,FE | FB-BA11-F | 65 |
| BA11,K | FB-BA11-K | 66 |
| BA11,L | FB-BA11-L | 66 |
| BA11,ME | FB-BA11-M | 66 |
| BA11,MF | FB-BA11-MF | 66 |
| BA614 | FB-BA614 | 67 |
| BA8,AA,AB | FB-BA8-A | 67 |
| BA8,C | FB-BA8-C | 67 |
| BARII,EC | FB-BARII-EC | 67 |
| B11,A,B | FB-BB11 | 68 |
| BB11,D | FB-BB11-D | 68 |
| BB11,F | FB-BB11-F | 68 |
| BB11,H | FB-BB11-H | 69 |

| Kit Name | Kit Number | Page |
|-----------------|-------------------|-------------|
| BB11,K | FB-BB11-K | 69 |
| BB11,M | FB-BB11-M | 69 |
| BL01 | FB-BL01 | 70 |
| BM792 | FB-BM792 | 70 |
| BM873,YB | FB-BM873-YB | 70 |
| CB11,B | FB-CB11 | 71 |
| CD11 | FB-CD11 | 71 |
| CM11,FA | FB-CM11-FA | 72 |
| CM11,FB | FB-CM11-FB | 72 |
| CM8,FA,FB | FB-CM8-F | 73 |
| CR11 | FB-CR11 | 73 |
| CSV11,B | FB-CSV11-B | 73 |
| DA11,B | FB-DA11-B | 74 |
| DB11,A | FB-DB11-A | 74 |
| DB8,EA,EB | FB-DB8-E | 74 |
| DC08,CM | FB-DC08-CM | 75 |
| DC08,CS | FB-DC08-CS | 75 |
| DC08,D | FB-DC08-D | 75 |
| DC08,EB | FB-DC08-EB | 76 |
| DC10,B | FB-DC10-B | 76 |
| DC11 | FB-DC11 | 76 |
| DC14 | FB-DC14 | 77 |
| DD11,A | FB-DD11-A | 77 |
| DD11,B | FB-DD11-B | 77 |
| DD11,CF,CK | FB-DD11-C | 77 |
| DD11,D,DF,DK | FB-DD11-D | 78 |
| DF10,A,B | FB-DF10-A | 78 |
| DF10,CA,CB | FB-DF10-C | 78 |
| DF11,A | FB-DF11-A | 78 |
| DF11,BA,BB | FB-DF11-B | 79 |
| DF32D | FB-DF32D | 79 |
| DFC11,A | FB-DFC11-A | 79 |
| DJ11,AA,AB,AC | FB-DJ11-A | 80 |
| DK8,EA | FB-DK8-EA | 80 |
| DK8,EC | FB-DK8-EC | 80 |
| DK8,EF | FB-DK8-EF | 81 |
| DK8,EP | FB-DK8-EP | 81 |

| Kit Name | Kit Number | Page |
|-----------------|-------------------|-------------|
| DK8,ES | FB-DK8-ES | 81 |
| DKC8,AA | FB-DKC8-AA | 82 |
| DL11,A,B | FB-DL11-A | 82 |
| DL11,C,D | FB-DL11-C | 83 |
| DL11,E | FB-DL11-E | 83 |
| DL11,WA,WB,WC | FB-DL11-W | 84 |
| DLV11 | FB-DLV11 | 84 |
| DM11,B | FB-DM11-B | 84 |
| DM11,D | FB-DM11-D | 85 |
| DMC11 | FB-DMC11 | 85 |
| DN11 | FB-DN11 | 86 |
| DP11 | FB-DP11 | 86 |
| DP8,EA,EB | FB-DP8-E | 87 |
| DQ11 | FB-DQ11 | 87 |
| DR11,B | FB-DR11-B | 87 |
| DR11,C | FB-DR11-C | 88 |
| DR11,K | FB-DR11-K | 88 |
| DR11,KT | FB-DR11-KT | 89 |
| DR11,L | FB-DR11-L | 89 |
| DR11-M | FB-DR11-M | 90 |
| DR8,EA | FB-DR8-EA | 90 |
| DR8,EC | FB-DR8-EC | 91 |
| DR8,ED | FB-DR8-ED | 91 |
| DRV11 | FB-DRV11 | 91 |
| DRV11,B | FB-DRV11-B | 92 |
| DRV11,P | FB-DRV11-P | 92 |
| DS310 | FB-DS310 | 92 |
| DS3RK | FB-DS3RK | 93 |
| DS3RX,BA,BD | FB-DS3RX-B | 93 |
| DT03,FM,FP | FB-DT03-F | 94 |
| DU11,DA | FB-DU11-DA | 94 |
| DUP11,DA | FB-DUP11-DA | 94 |
| DV11,AA | FB-DV11-AA | 95 |
| DV11,B | FB-DV11-B | 95 |
| DW08,A | FB-DW08-A | 95 |
| DW08,B | FB-DW08-B | 96 |
| DX11,BA,BB | FB-DX11-B | 96 |

| Kit Name | Kit Number | Page |
|---------------------|------------|------|
| DZ11,A,B,C,D,E,F | FB-DZ11 | 97 |
| FP11,A | FB-FP11-A | 97 |
| FP11,AU | FB-FP11-AU | 98 |
| FP11,B | FB-FP11-B | 98 |
| FP11,C | FB-FP11-C | 98 |
| FPP12,A | FB-FPP12-A | 99 |
| FPP8,A | FB-FPP8-A | 99 |
| FPP8,EA,EB | FB-FPP8-E | 99 |
| GT41,BA,BB | FB-GT41-BA | 100 |
| GT41,BH,BJ | FB-GT41-BH | 100 |
| GT43,AA,AB | FB-GT43-AA | 102 |
| GT43,AH,AJ | FB-GT43-AH | 102 |
| H720 | FB-H720 | 103 |
| H721-C | FB-H721-C | 103 |
| H740-D | FB-H740 | 104 |
| H742,A,B | FB-H742 | 104 |
| H7420 | FB-H7420 | 104 |
| H744 | FB-H744 | 105 |
| H745 | FB-H745 | 105 |
| H746 | FB-H746 | 105 |
| H754 | FB-H754 | 105 |
| H765 | FB-H765 | 106 |
| H775 | FB-H775 | 106 |
| H777,AA,AB | FB-H777-A | 106 |
| H777,BA,BB | FB-H777-B | 106 |
| H780 | FB-H780 | 107 |
| H7832 | FB-H7832 | 107 |
| H9300 | FB-H9300 | 107 |
| H960,BC,BD | FB-H960-B | 108 |
| H960,CA,CB | FB-H960-C | 108 |
| H960,DA,DB,DH,DJ | FB-H960-D | 108 |
| H960,EA,EB | FB-H960-E | 109 |
| H961 | FB-H961 | 109 |
| H964,AA,AB,CA,CB,CC | FB-H964 | 110 |
| H964,FA | FB-H964-FA | 110 |
| H964,FB | FB-H964-FB | 111 |
| H967 | FB-H967 | 111 |

| Kit Name | Kit Number | Page |
|-------------|------------|------|
| IBV11 | FB-IBV11 | 111 |
| ICR11,AA,AB | FB-ICR11-A | 112 |
| ICS11,MA,MB | FB-ICS11-M | 112 |
| ICS8,MA,MB | FB-ICS8-M | 112 |
| ICS8-XA,XB | FB-ICS8-X | 113 |
| KA8-E | FB-KA8-E | 113 |
| KC8,AA | FB-KC8-AA | 113 |
| KC8-E | FB-KC8-E | 114 |
| KC8-EA | FB-KC8-EA | 114 |
| KC8,HA | FB-KC8-HA | 114 |
| KC8-HB | FB-KC8-HB | 114 |
| KC8,ML | FB-KC8-ML | 115 |
| KE11-A | FB-KE11-A | 115 |
| KE11-B | FB-KE11-B | 115 |
| KE11-E | FB-KE11-E | 116 |
| KE11-F | FB-KE11-F | 116 |
| KE8-E | FB-KE8-E | 116 |
| KE8-I | FB-KE8-I | 117 |
| KEV11 | FB-KEV11 | 117 |
| KG11-A | FB-KG11-A | 117 |
| KG8,EA | FB-KG8-EA | 118 |
| KJ11-A | FB-KJ11-A | 118 |
| KL8-A | FB-KL8-A | 118 |
| KL8-E | FB-KL8-E | 119 |
| KL8-JA | FB-KL8-JA | 119 |
| KL8-KA | FB-KL8-KA | 119 |
| KL8-KB | FB-KL8-KB | 120 |
| KL8-KC | FB-KL8-KC | 120 |
| KL8-KD | FB-KL8-KD | 120 |
| KL8-M | FB-KL8-M | 120 |
| KM8-AA | FB-KM8-AA | 121 |
| KM8-E | FB-KM8-E | 121 |
| KMC11-A | FB-KMC11 | 121 |
| KP8-E | FB-KP8-E | 122 |
| KP8-I | FB-KP8-I | 122 |
| KP8-L | FB-KP8-L | 122 |
| KT11-C | FB-KT11-C | 123 |

| Kit Name | Kit Number | Page |
|-------------------|-------------------|-------------|
| KT11-D | FB-KT11-D | 123 |
| KW11-K | FB-KW11-K | 123 |
| KW11-L | FB-KW11-L | 124 |
| KW11-P | FB-KW11-P | 124 |
| KW11-W | FB-KW11-W | 125 |
| KWV11-A | FB-KWV11-A | 125 |
| KY11-C | FB-KY11-C | 125 |
| KY11-LA | FB-KY11-LA | 126 |
| KY11-LB | FB-KY11-LB | 126 |
| LA11-PA,PB,PC,PD | FB-LA11-P | 126 |
| LA180 | FB-LA180 | 127 |
| LA35 | FB-LA35 | 127 |
| LA36 | FB-LA36 | 127 |
| LA8,PA,PB,PC,PD | FB-LA8-P | 128 |
| LAV11,PA,PD | FB-LAV11-P | 128 |
| LAXX,NW,NX,NY | FB-LAXX-N | 129 |
| LK02 | FB-LK02 | 129 |
| LK03,A | FB-LK03-A | 129 |
| LK11,A,B | FB-LK11 | 130 |
| LK40,A,B | FB-LK40 | 130 |
| LP100 | FB-LP100 | 130 |
| LP11,RA,RB,SA | FB-LP11-1 | 131 |
| LP11,V,W,Y,Z | FB-LP11 | 131 |
| LPD11,AA,AB | FB-LPD11-A | 131 |
| LPS11,SA,SB,SC | FB-LPS11 | 132 |
| LPV11,VA,VB,VC,VD | FB-LPV11-V | 132 |
| LQP8,E | FB-LQP8-E | 132 |
| LS120,HE,HJ | FB-LS120-H | 133 |
| LT33 | FB-LT33 | 133 |
| M7850 | FB-M7850 | 133 |
| M9301,Y | FB-M9301-Y | 134 |
| MC8,EJ | FB-MC8-EJ | 134 |
| ME11,LA,LB,LE | FB-ME11-L | 135 |
| MF11,L | FB-MF11-L | 135 |
| MF11,LP | FB-MF11-LP | 136 |
| ME15 | FB-ME15 | 136 |
| MF11,U,UP,UR,US | FB-MF11-U | 136 |

| Kit Name | Kit Number | Page |
|------------------|-------------|------|
| MF11,WP | FB-MF11-WP | 137 |
| MF15 | FB-MF15 | 137 |
| MG10,HA | FB-MG10-HA | 137 |
| MI8 | FB-MI8 | 138 |
| MJ11 | FB-MJ11 | 138 |
| MM11,CP | FB-MM11-CP | 138 |
| MM11,DP | FB-MM11-DP | 139 |
| MM11,E | FB-MM11-E | 139 |
| MM11,F | FB-MM11-F | 140 |
| MM11,L | FB-MM11-L | 140 |
| MM11,LP | FB-MM11-LP | 141 |
| MM11,S | FB-MM11-S | 141 |
| MM11,U | FB-MM11-U | 141 |
| MM11,UP | FB-MM11-UP | 142 |
| MM11,WP | FB-MM11-WP | 142 |
| MM8,EJ | FB-MM8-EJ | 142 |
| MR8,A | FB-MR8-A | 143 |
| MR8,EC | FB-MR8-EC | 143 |
| MR8,FB | FB-MR8-FB | 143 |
| MR8,SL | FB-MR8-SL | 144 |
| MRV11,AA | FB-MRV11-AA | 144 |
| MRV11,BA | FB-MRV11-B | 144 |
| MS11,AP | FB-MS11-AP | 145 |
| MS11,BC,BD,BR,BT | FB-MS11-B | 145 |
| MS11,CC | FB-MS11-CC | 145 |
| MS11,FP | FB-MS11-FP | 146 |
| MS11,JP | FB-MS11-JP | 146 |
| MS8,A | FB-MS8-A | 147 |
| MS8,CA,CB | FB-MS8-C | 147 |
| MSV11,B | FB-MSV11-B | 147 |
| MSV11,CD | FB-MSV11-C | 148 |
| MX10,C | FB-MX10-C | 148 |
| NCS11 | FB-NCS11 | 148 |
| NCS8 | FB-NCS8 | 149 |
| PA611 | FB-PA611 | 150 |
| PA63 | FB-PA63 | 150 |
| PA68,F | FB-PA68-F | 150 |

| Kit Name | Kit Number | Page |
|--------------------|-------------------|-------------|
| PC11,A | FB-PC11-A | 151 |
| PC8 | FB-PC8 | 151 |
| PDL11 | FB-PDL11 | 151 |
| PDM70 | FB-PDM70 | 152 |
| PDP8E | FB-PDP8E | 152 |
| PDP8F | FB-PDP8F | 153 |
| PDP8M | FB-PDP8M | 153 |
| PMK01 | FB-PMK01 | 154 |
| PR68,D,DA | FB-PR68 | 154 |
| PR8,E | FB-PR8 | 154 |
| PRS01 | FB-PRS01 | 155 |
| REV11,A,C | FB-REV11 | 156 |
| RF11,AA,AB | FB-RF11 | 156 |
| RF15 | FB-RF15 | 157 |
| RJP04,A | FB-RJP04-A | 157 |
| RJP04,B | FB-RJP04-B | 158 |
| RJP04,C | FB-RJP04-C | 158 |
| RJP05,AA,AB | FB-RJP05-A | 159 |
| RJP05,BA,BB | FB-RJP05-B | 159 |
| RJP06,AA,AB | FB-RJP06-A | 160 |
| RJP06,BA,BB | FB-RJP06-B | 160 |
| RJS03,BA,BB,BC,BD | FB-RJS03-B | 161 |
| RJS04,BA,BB,BC,BD | FB-RJS04-B | 161 |
| RK05 | FB-RK05 | 162 |
| RK06,EA | FB-RK06-EA | 162 |
| RK06,ED | FB-RK06-ED | 163 |
| RK06,F | FB-RK06-F | 164 |
| RK11J,A,A,AB,BA,BB | FB-RK11J | 164 |
| RK11J,DE,DJ | FB-RK11J-D | 165 |
| RK611 | FB-RK611 | 166 |
| RK8J,EA,EB,ED | FB-RK8J-E | 166 |
| RKV11,DE,DF,DH,DJ | FB-RKV11-D | 167 |
| RM03 | FB-RM03 | 167 |
| RP02 | FB-RP02 | 167 |
| RP03,AS,BS | FB-RP03 | 168 |
| RP04 | FB-RP04 | 168 |
| RP05,AA,AB,BA,BB | FB-RP05 | 169 |

| Kit Name | Kit Number | Page |
|--------------|------------|------|
| RP06 | FB-RP06 | 169 |
| RP11,CE,CJ | FB-RP11-C | 170 |
| RPR02,AM,BM | FB-RPR02 | 170 |
| RPR11-AA,AB | FB-RPR11-A | 171 |
| RS03 | FB-RS03 | 171 |
| RS04 | FB-RS04 | 172 |
| RS08-TA | FB-RS08-TA | 172 |
| RS09 | FB-RS09 | 172 |
| RS64-TA | FB-RS64-TA | 173 |
| RWP04,AA,AB | FB-RWP04-A | 173 |
| RWP04,BA,BB | FB-RWP04-B | 174 |
| RWP04,CA,CB | FB-RWP04-C | 174 |
| RWP05,AA,AB | FB-RWP05-A | 175 |
| RWP05,BA,BB | FB-RWP05-B | 176 |
| RWP05,CA,CB | FB-RWP05-C | 176 |
| RWP06,AA | FB-RWP06-A | 177 |
| RWP06,BA,BB | FB-RWP06-B | 177 |
| RWP06,CA,CB | FB-RWP06-C | 178 |
| RWS04,B | FB-RWS04-B | 178 |
| RX11,AA,AC | FB-RX11-A | 179 |
| RX8 | FB-RX8 | 179 |
| RXV11 | FB-RXV11 | 180 |
| TA11,AA,AB | FB-TA11-A | 180 |
| TA8,AA,AB | FB-TA8-A | 181 |
| TC11 | FB-TC11 | 181 |
| TC59,D | FB-TC59-D | 182 |
| TD10,CA,CB | FB-TD10-C | 182 |
| TD8,EH,EJ,EM | FB-TD8-E | 183 |
| TD8,ER | FB-TD8-ER | 183 |
| TE10N | FB-TE10N | 184 |
| TE10W | FB-TE10W | 185 |
| TE16 | FB-TE16 | 185 |
| TM8,MA,MB | FB-TM8-M | 186 |
| TMB11,MA,MB | FB-TMB11-M | 186 |
| TS03,S | FB-TS03-S | 187 |
| TU10,FJ | FB-TU10-FJ | 187 |
| TU45 | FB-TU45 | 188 |

| Kit Name | Kit Number | Page |
|------------------|-------------------|-------------|
| TU45A,EA,EB | FB-TU45A-EA | 188 |
| TU45A,EE,EF | FB-TU45A-EE | 188 |
| TU56,H | FB-TU56 | 189 |
| TU60,K | FB-TU60-K | 189 |
| VC8,E | FB-VC8-E | 189 |
| VS60 | FB-VS60 | 190 |
| VSV01 | FB-VSV01 | 190 |
| VT05B | FB-VT05B | 190 |
| VT11 | FB-VT11 | 191 |
| VT14,AA,AB | FB-VT14-A | 191 |
| VT100 | FB-VT100 | 192 |
| VT20 | FB-VT20 | 192 |
| VT50,AA,AB,CA,CB | FB-VT50 | 193 |
| VT52 | FB-VT52 | 193 |
| VT55 | FB-VT55 | 193 |
| VT61,AA,AE | FB-VT61-A | 194 |
| VT61T | FB-VT61T | 194 |
| VT71T | FB-VT71T | 194 |
| VT62T | FB-VT62 | 195 |
| VW01 | FB-VW01 | 195 |
| XY8,E | FB-XY8 | 195 |

| Kit Name | Kit Number | Page | | | | | | | | | |
|-------------------|------------|-------|-----|---|-----|---|---|---|---|---|-----|
| D322A-AA,AD,AY,AZ | FB010 | 197 | | | | | | | | | |
| D322A-BA,BD,BY,BZ | FB020 | 197 | | | | | | | | | |
| D324A-AA,AD,AY,AZ | FB030 | 197 | | | | | | | | | |
| D324A-BA,BD,BY,BZ | FB040 | 198 | | | | | | | | | |
| D325A-AA,AD,AY,AZ | FB050 | 198 | | | | | | | | | |
| D325A-BA,BD,BY,BZ | FB060 | 198 | | | | | | | | | |
| D354B-AA,AD,AY,AZ | } | 198 | | | | | | | | | |
| D354B-BA,BD,BY,BZ | | } | 199 | | | | | | | | |
| D354B-CA,CD,CY,CZ | | | | } | | | | | | | |
| D354B-DA,DD,DY,DZ | | | | | } | | | | | | |
| D354B-FA,FD,FY,FZ | | | | | | } | | | | | |
| D354B-GA,GD,GY,GZ | } | | | | | | | | | | |
| D355A-AA,AD,AY,AZ | | FB080 | 199 | | | | | | | | |
| D355A-GA,GD,GY,GZ | | FB090 | 199 | | | | | | | | |
| D355A-AA,AD,AY,AZ | | FB100 | 200 | | | | | | | | |
| D355A-HA,HD,HY,HZ | | FB110 | 200 | | | | | | | | |
| D357B-AA,AD,AY,AZ | FB120 | 200 | | | | | | | | | |
| D538A-AA,AD,AY,AZ | FB130 | 201 | | | | | | | | | |
| D531A-CA,CD,CY,CZ | } | 201 | | | | | | | | | |
| D531B-CA,CD,CY,CZ | | | } | | | | | | | | |
| D531C-CA,CD,CY,CZ | | | | } | | | | | | | |
| D531D-CA,CD,CY,CZ | | | | | } | | | | | | |
| D533A-CA,CD,CY,CZ | } | | | | | | | | | | |
| D533B-CA,CD,CY,CZ | | } | | | | | | | | | |
| D533C-CA,CD,CY,CZ | | | } | | | | | | | | |
| D533D-CA,CD,CY,CZ | | | | } | | | | | | | |
| D534A-CA,CD,CY,CZ | } | | | | 202 | | | | | | |
| D534A-DA,DD,DY,DZ | | } | | | | | | | | | |
| D534B-CA,CD,CY,CZ | | | } | | | | | | | | |
| D534B-DA,DD,DY,DZ | | | | } | | | | | | | |
| D534C-CA,CD,CY,CZ | | | | | | } | | | | | |
| D534C-DA,DD,DY,DZ | | | | | | | } | | | | |
| D534D-CA,CD,CY,CZ | | | | | | | | } | | | |
| D534D-DA,DD,DY,DZ | | | | | | | | | } | | |
| D536A-DA,DD,DY,DZ | | | | | | | | | | } | 202 |
| D536B-DA,DD,DY,DZ | | | | | | | | | | | |
| D536C-DA,DD,DY,DZ | } | | | | | | | | | | |
| D536D-DA,DD,DY,DZ | | } | | | | | | | | | |
| D538A-DA,DD,DY,DZ | | | } | | | | | | | | |
| D538B-DA,DD,DY,DZ | | | | } | | | | | | | |
| D538C-DA,DD,DY,DZ | | | | | } | | | | | | |
| D538D-DA,DD,DY,DZ | | | | | | } | | | | | |

| Kit Name | Kit Number | Page |
|-------------------|------------|------|
| D537A-CA,CD,CY,CZ | FB180 | 203 |
| D537B-CA,CD,CY,CZ | | |
| D537C-CA,CD,CY,CZ | | |
| D537D-CA,CD,CY,CZ | | |
| D563A-AA,AD,AY,AZ | FB190 | 203 |
| D563B-AA,AD,AY,AZ | | |
| D563C-AA,AD,AY,AZ | | |
| D563D-AA,AD,AY,AZ | | |
| D563E-AA,AD | FB200 | 203 |
| D563E-AY,AZ | FB210 | 204 |
| D566A-BA,BD,BY,BZ | FB220 | 204 |
| D566B-BA,BD,BY,BZ | | |
| D566C-BA,BD,BY,BZ | | |
| D566D-BA,BD,BY,BZ | | |
| D567A-AA,AD,AY,AZ | FB230 | 204 |
| D567B-AA,AD,AY,AZ | | |
| D567D-AA,AD,AY,AZ | | |
| D567E-AA,AD | FB240 | 205 |
| D567E-AY,AZ | FB250 | 205 |
| D568A-BA,BD,BY,BZ | FB260 | 205 |
| D568B-BA,BD,BY,BZ | | |
| D568C-BA,BD,BY,BZ | | |
| D568D-BA,BD,BY,BZ | | |
| D571A-AA,AD,AY,AZ | FB270 | 206 |
| D571B-AA,AD,AY,AZ | | |
| D571C-AA,AD,AY,AZ | | |
| D571D-AA,AD,AY,AZ | | |
| D573A-AA,AD,AY,AZ | FB280 | 206 |
| D573B-AA,AD,AY,AZ | | |
| D573C-AA,AD,AY,AZ | | |
| D573D-AA,AD,AY,AZ | | |
| D576A-AA,AD,AY,AZ | FB290 | 207 |
| D576B-AA,AD,AY,AZ | | |
| D576C-AA,AD,AY,AZ | | |
| D576D-AA,AD,AY,AZ | | |
| D577A-AA,AD,AY,AZ | FB300 | 207 |
| D577B-AA,AD,AY,AZ | | |
| D577C-AA,AD,AY,AZ | | |
| D577D-AA,AD,AY,AZ | | |

| Kit Name | Kit Number | Page |
|--|------------|------|
| DA-70CVA-LA,LD,LE,LJ,LK,LN | } FB310 | 208 |
| DA-70CVC-LA,LD,LE,LJ,LK,LN | | |
| DA-70CWA-LA,LB,LC,LD,LE, LF,LH,LJ,LK,LL,LM,LN | | |
| DA-70CWC-LA,LB,LC,LD,LE, LF,LH,LJ,LK,LL,LM,LN | | |
| DA-70KKB-LA,LB,LC,LD,LE, LF,LH,LJ,LK,LL,LM,LN | } FB320 | 208 |
| DA-70KKC-LA,LB,LC,LD,LE, LF,LH,LJ,LK,LL,LM,LN | | |
| DA-70TVA-LA,LD,LE,LJ,LK,LN | } FB330 | 209 |
| DA-70TVC-LA,LD,LE,LJ,LK,LN | | |
| DD-72CVA-LA,LD,LE,LJ,LK,LN | } FB340 | 209 |
| DD-72CWA-LA,LB,LC,LD,LE, LF,LH,LJ,LK,LL,LM,LN | | |
| DM-30AVA-LA,LD,LE,LJ | FB350 | 209 |
| DM-30AVA-LK,LN | FB360 | 210 |
| DM-30CVB-LA,LD,LE,LJ | FB370 | 210 |
| DM-30CVB-LK,LN | FB380 | 210 |
| DM-30FJA-LA,LB,LC,LD,LE, LF,LH,LJ | } FB390 | 211 |
| DM-30FJA-LK,LL,LM,LN | FB400 | 211 |
| DM-30HHA-LA,LB,LC,LD,LE, LF,LH,LJ | } FB410 | 211 |
| DM-30HHA-LK,LL,LM,LN | FB420 | 212 |
| DM-30JJA-LA,LB,LC,LD,LE, LF,LH,LJ | } FB430 | 212 |
| DM-30JJA-LK,LL,LM,LN | FB440 | 212 |
| DM-30KKA-LA,LB,LC,LD,LE, LF,LH,LJ | } FB450 | 213 |
| DM-30KKA-LK,LL,LM,LN | FB460 | 213 |
| DM-30LLA-LA,LB,LC,LD,LE, LF,LH,LJ | } FB470 | 213 |
| DM-30LLA-LK,LL,LM,LN | FB480 | 214 |
| DM-30UVA-LA,LD,LE,LJ | FB490 | 214 |
| DM-30UVA-LK,LN | FB500 | 214 |

| Kit Name | Kit Number | Page |
|--|-------------|------|
| DM-70CVA-LA,LD,LE,LJ | } — FB510 — | 215 |
| DM-70CVC-LA,LD,LE,LJ | | |
| DM-70CWA-LA,LB,LC,LD,LE, LF,LH,LJ | | |
| DM-70CWC-LA,LB,LC,LD,LE, LF,LH,LJ | | |
| DM-70CVA-LK,LN | } — FB520 — | 215 |
| DM-70CVC-LK,LN | | |
| DM-70CWA-LK,LL,LM,LN | | |
| DM-70CWC-LK,LL,LM,LN | | |
| DM-70HHA-LA,LB,LC,LD,LE, LF,LH,LJ | — FB530 — | 215 |
| DM-70HHA-LK,LL,LM,LN | — FB540 — | 216 |
| DM-70KKC-LA,LB,LC,LD,LE, LF,LH,LJ | — FB550 — | 216 |
| DM-70KKC-LK,LL,LM,LN | — FB560 — | 216 |
| DM-70TVA-LA,LD,LE,LJ | } — FB570 — | 217 |
| DM-70TVC-LA,LD,LE,LJ | | |
| DM-70TVA-LK,LN | } — FB580 — | 217 |
| DM-70TVC-LK,LN | | |
| DP-30CVB-LA,LD,LE,LJ,LK,LN | — FB590 — | 217 |
| DP-30FJA-LA,LB,LC,LD,LE,LF, LH,LJ,LK,LL,LM,LN | — FB600 — | 218 |
| DP-30UVA-LA,LD,LE,LJ,LK,LN | — FB610 — | 218 |
| DP-70CVA-LA,LD,LE,LJ,LK,LN | } — FB620 — | 218 |
| DP-70CVC-LA,LD,LE,LJ,LK,LN | | |
| DP-70CWA-LA,LB,BC,LD,LE, LF,LH,LJ,LK,LL,LM,LN | | |
| DP-70CWC-LA,LB,LC,LD,LE, LF,LH,LJ,LK,LL,LM,LN | | |
| DP-70TVA-LA,LD,LE,LJ,LK,LN | } — FB630 — | 219 |
| DP-70TVC-LA,LD,LE,LJ,LK,LN | | |
| RE-31FJA-LA,LD | — FB640 — | 219 |
| RE-32KKA-LA,LD | } — FB650 — | 219 |
| RE-33KKA-LA,LD | | |
| RE-34KKA-LA,LD | } — FB660 — | 220 |
| RE-35KKA-LA,LD | | |
| RE-36KKA-LA,LD | — FB670 — | 220 |
| RE-37KKA-LA,LD | — FB680 — | 221 |
| RE-71CVA-LA,LD | — FB690 — | 221 |

| Kit Name | Kit Number | Page |
|---|------------|------|
| RE-71TVA-LA,LD | FB700 | 222 |
| RE-72CVA-LA,LD | FB710 | 222 |
| RE-72TVA-LA,LD | FB720 | 223 |
| RE-73CVA-LA,LD | FB730 | 223 |
| RE-73TVA-LA,LD | FB740 | 224 |
| RE-74CVA-LA,LD | FB750 | 224 |
| RE-74TVA-LA,LD | FB760 | 225 |
| RE-77CVA-LA,LD | FB770 | 225 |
| RE-77TVA-LA,LD | FB780 | 225 |
| RR-21RRA-LA,LD | FB790 | 226 |
| SA-60AVA-LA,LD,LE,LJ,LK,LN | FB800 | 226 |
| SA-60CVB-LA,LD,LE,LJ,LK,LN | FB810 | 227 |
| SA-60KKA-LA,LB,LC,LD,LE, LF,LH,LJ,LK,LL,LM,LN | FB820 | 227 |
| SA-60UVA-LA,LD,LE,LJ,LK,LN | FB830 | 227 |
| SA-70CVA-LA,LB,LC,LD,LE, LF,LH,LJ,LK,LL,LM,LN | FB840 | 228 |
| SA-70CWA-LA,LB,LC,LD,LE, LF,LH,LJ,LK,LL,LM,LN | | |
| CA-70CWA-LA,LB,LC,LD,LE, LF,LH,LJ,LK,LL,LM,LN | | |
| CA-70CVA-LA,LB,LC,LD,LE, LF,LH,LJ,LK,LL,LM,LN | | |
| SA-70TVA-LA,LD,LE,LJ,LK,LN | FB850 | 228 |
| CA-70TVA-LA,LD,LE,LJ,LK,LN | | |
| SE-30AVA-LA,LB,LC,LD,LE, LF,LH,LJ,LK,LL,LM,LN | FB860 | 229 |
| SE-30AVA-VA,VA,VB,VC,VD, VE,VF,VH,VJ,VK,VL,VM,VN | FB870 | 229 |
| SE-30FJA-LA,LB,LC,LD,LE, LF,LH,LJ,LK,LL,LM,LN | FB880 | 230 |
| SE-30HHA-LA,LB,LC,LD,LE, LF,LH,LJ,LK,LL,LM,LN | FB890 | 230 |
| SE-30HHA-VA,VB,VC,VD,VE, VF,VH,VJ,VK,VL,VM,VN | FB900 | 231 |
| SE-30JJA-LA,LB,LC,LD,LE,LF, LH,LJ,LK,LL,LM,LN | FB910 | 231 |
| CE-30JJA-LA,LB,LC,LD,LE,LF, LH,LJ,LK,LL,LM,LN | FB920 | 232 |

| Kit Name | Kit Number | Page |
|--|------------|------|
| SE-30KKA-LA, LB, LC, LD, LE, LF, LH, LJ, LK, LL, LM, LN | }— FB930 | 232 |
| CE-30KKA-LA, LB, LC, LD, LE, LF, LH, LJ, LK, LL, LM, LN | }— FB940 | 233 |
| SE-30UVA-LA, LD, LE, LJ, LK, LN | —FB950 | 233 |
| SE-30UVA-VA, VD, VE, VJ, VK, VN | }— FB960 | 233 |
| SE-60AVA-LA, LD, LE, LJ, LK, LN | —FB970 | 234 |
| SE-60CVB-LA, LD, LE, LJ, LK, LN | —FB980 | 234 |
| SE-60FJB-LA, LB, LC, LD, LE, LF, LH, LJ, LK, LL, LM, LN | }— FB990 | 234 |
| SE-60HHA-LA, LB, LC, LD, LE, LF, LH, LJ, LK, LL, LM, LN | }— FB1000 | 235 |
| SE-60KKA-LA, LB, LC, LD, LE, LF, LH, LJ, LK, LL, LM, LN | }— FB1010 | 235 |
| SE-60UVA-LA, LD, LE, LJ, LK, LN | —FB1020 | 235 |
| SE-70CVA-LA, LB, LC, LD, LE, LF, LH, LJ, LK, LL, LM, LN | }—FB1030 | 236 |
| CE-70CVA-LA, LB, LC, LD, LE, LF, LH, LJ, LK, LL, LM, LN | | |
| SE-70CWA-LA, LB, LC, LD, LE, LF, LH, LJ, LK, LL, LM, LN | | |
| CE-70CWA-LA, LB, LC, LD, LE, LF, LH, LJ, LK, LL, LM, LN | }—FB1040 | 236 |
| SE-70TVA-LA, LD, LE, LJ, LK, LN | | |
| CE-70TVA-LA, LD, LE, LJ, LK, LN | }— FB1050 | 236 |
| CM-20FJA-LA, LB, LC, LD, LE, LF, LH, LJ, LK, LL, LM, LN | | |
| CM-20FJA-VA, VB, VC, VD, VE, VF, VH, VJ, VK, VL, VM, VN | }— FB1060 | 237 |
| SM-20JJA-LA, LB, LC, LD, LE, LF, LH, LJ, LK, LL, LM, LN | }— FB1070 | 237 |
| SM-20JJA-VA, VB, VC, VD, VE, VF, VH, VJ, VK, VL, VM, VN | }— FB1080 | 238 |
| SM-20LLA-LA, LB, LC, LD, LE, LF, LH, LJ | }— FB1090 | 238 |
| SM-20LLA-LK, LL, LM, LN | —FB1100 | 239 |
| SM-20LLA-VA, VB, VC, VD, VE, VF, VH, VJ | }— FB1110 | 239 |

| Kit Name | Kit Number | Page |
|--------------------------------------|------------|------|
| SM-20LLA-VK,VL,VM,VN | FB1120 | 239 |
| SM-20LLA-WA,WD,WE,WJ | FB1130 | 240 |
| SM-20LLA-WK,WN | FB1140 | 240 |
| SM-30AVA-LA,LB,LC,LD,LE, LF,LH,LJ | FB1150 | 240 |
| SM-30AVA-LK,LL,LM,LN | FB1160 | 241 |
| SM-30AVA-VA,VB,VC,VD,VE, VF,VH,VJ | FB1170 | 241 |
| SM-30AVA-VK,VL,LM,VN | FB1180 | 241 |
| SM-30AVA-WA,WD,WE,WJ | FB1190 | 242 |
| SM-30AVA-WK,WN | FB1200 | 242 |
| SM-30FJA-LA,LB,LC,LD,LE, LF,LH,LJ | FB1210 | 242 |
| SM-30FJA-LK,LL,LM,LN | FB1220 | 243 |
| SM-30FJA-VA,VB,VC,VD,VE, VF,VH,VJ | FB1230 | 243 |
| SM-30FJA-VK,VL,VM,VN | FB1240 | 243 |
| CM-30FJA-LA,LB,LC,LD,LE, LF,LH,LJ | FB1250 | 244 |
| CM-30FJA-LK,LL,LM,LN | FB1260 | 244 |
| CM-30FJA-VA,VB,VC,VD,VE, VF,VH,VJ | FB1270 | 244 |
| CM-30FJA-VK,VL,VM,VN | FB1280 | 245 |
| SM-30HHA-LA,LB,LC,LD,LE, LF,LH,LJ | FB1290 | 245 |
| SM-30HHA-LK,LL,LM,LN | FB1300 | 245 |
| SM-30HHA-VA,VB,VC,VD,VE, VF,VH,VJ | FB1310 | 246 |
| SM-30HHA-VK,VL,VM,VN | FB1320 | 246 |
| SM-30HHA-WA,WD,WE,WJ | FB1330 | 246 |
| SM-30HHA-WK,WN | FB1340 | 247 |
| SM-30JJA-LA,LB,LC,LD,LE,LF, LH,LJ | FB1350 | 247 |
| SM-30JJA-LK,LL,LM,LN | FB1360 | 247 |
| SM-30JJA-VA,VB,VC,VD,VE, VF,VH,VJ | FB1370 | 248 |
| SM-30JJA-VK,VL,VM,VN | FB1380 | 248 |
| CM-30JJA-LA,LB,LC,LD,LE,LF, LH,LJ | FB1390 | 248 |
| CM-30JJA-LK,LL,LM,LN | FB1400 | 249 |


| Kit Name | Kit Number | Page |
|--|------------|------|
| CM-30JJA-VA,VB,VC,VD,VE,VF, VH,VJ } ————— | FB1410 | 249 |
| CM-30JJA-VK,VL,VM,VN ————— | FB1420 | 249 |
| SM-30KKA-LA,LB,LC,LD,LE,LF, LH,LJ } ————— | FB1430 | 250 |
| SM-30KKA-LK,LL,LM,LN ————— | FB1440 | 250 |
| SM-30KKA-VA,VB,VC,VD,VE,VF, VH,VJ } ————— | FB1450 | 250 |
| SM-30KKA-VK,VL,VM,VN ————— | FB1460 | 251 |
| CM-30KKA-LA,LB,LC,LD,LE,LF, LH,LJ } ————— | FB1470 | 251 |
| CM-30KKA-LK,LL,LM,LN ————— | FB1480 | 252 |
| CM-30KKA-VA,VB,VC,VD,VE,VF, VH,VJ } ————— | FB1490 | 252 |
| CM-30KKA-VK,VL,VM,VN ————— | FB1500 | 252 |
| SM-30LLA-LA,LB,LC,LD,LE,LF, LH,LJ } ————— | FB1510 | 253 |
| SM-30LLA-LK,LL,LM,LN ————— | FB1520 | 253 |
| SM-30LLA-VA,VB,VC,VD,VE,VF, VH,VJ } ————— | FB1530 | 253 |
| SM-30LLA-VK,VL,VM,VN ————— | FB1540 | 254 |
| SM-30LLA-WA,WD,WE,WJ ————— | FB1550 | 254 |
| SM-30LLA-WK,WN ————— | FB1560 | 254 |
| SM-30UVA-LA,LD,LE,LJ ————— | FB1570 | 255 |
| SM-30UVA-LK,LN ————— | FB1580 | 255 |
| SM-30UVA-VA,VD,VE,VJ ————— | FB1590 | 255 |
| SM-30UVA-VK,VN ————— | FB1600 | 256 |
| SM-30UVA-WA,WD,WE,WJ ————— | FB1610 | 256 |
| SM-30UVA-WK,WN ————— | FB1620 | 256 |
| SM-50FJA-LA,LD,LE,LJ ————— | FB1630 | 257 |
| SM-50FJA-LK,LN ————— | FB1640 | 257 |
| CM-50FJA-LA,LB,LC,LD,LE,LF, LH,LJ } ————— | FB1650 | 257 |
| CM-50FJA-LK,LL,LM,LN ————— | FB1660 | 258 |
| SM-50JJA-LA,LB,LC,LD,LE,LF, LH,LJ } ————— | FB1670 | 258 |
| SM-50JJA-LK,LL,LM,LN ————— | FB1680 | 258 |
| CM-50JJA-LA,LB,LC,LD,LE,LF, LH,LJ } ————— | FB1690 | 259 |
| CM-50JJA-LK,LL,LM,LN ————— | FB1700 | 259 |

| Kit Name | Kit Number | Page |
|---|------------|------|
| SM-60AVA-LA,LD,LE,LJ | FB1710 | 259 |
| SM-60AVA-LK,LN | FB1720 | 260 |
| SM-60CVA-LA,LD,LE,LJ | FB1730 | 260 |
| SM-60CVA-LK,LN | FB1740 | 260 |
| SM-60FJB-LA,LB,LC,LD,LE,LF, LH,LJ | FB1750 | 261 |
| SM-60FJB-LK,LL,LM,LN | FB1760 | 261 |
| SM-60HHA-LA,LB,LC,LD,LE,LF, LH,LJ | FB1770 | 261 |
| SM-60HHA-LK,LL,LM,LN | FB1780 | 262 |
| SM-60HHB-LA,LB,LC,LD,LE,LF, LH,LJ | FB1790 | 262 |
| SM-60HHB-LK,LL,LM,LN | FB1800 | 262 |
| SM-60KKA-LA,LB,LC,LD,LE,LF, LH,LJ | FB1810 | 262 |
| SM-60KKA-LK,LL,LM,LN | FB1820 | 263 |
| SM-60LLA-LA,LB,LC,LD,LE,LF, LH,LJ | FB1830 | 263 |
| SM-60LLA-LK,LL,LM,LN | FB1840 | 263 |
| SM-60UVA-LA,LD,LE,LJ | FB1850 | 264 |
| SM-60UVA-LK,LN | FB1860 | 264 |
| SM-70CVA-LA,LB,LC,LD,LE,LF, LH,LJ | FB1870 | 264 |
| CM-70CVA-LA,LB,LC,LD,LE,LF, LH,LJ | | |
| SM-70CWA-LA,LB,LC,LD,LE,LF, LH,LJ | | |
| CM-70CWA-LA,LB,LC,LD,LE,LF, LH,LJ | | |
| SM-70CVA-LK,LL,LM,LN | FB1880 | 265 |
| CM-70CVA-LK,LL,LM,LN | | |
| SM-70CWA-LK,LL,LM,LN | | |
| CM-70CWA-LK,LL,LM,LN | | |
| SM-70TVA-LA,LD,LE,LJ | FB1890 | 265 |
| CM-70TVA-LA,LD,LE,LJ | | |
| SM-70TVA-LK,LN | FB1900 | 265 |
| CM-70TVA-LK,LN | | |
| SP-30AVB-LA,LB,LC,LD,LF,LH, LJ,LK,LL,LM,LN | FB1910 | 266 |

| Kit Name | Kit Number | Page |
|--|------------|------|
| SP-30AVB-VA,VB,VC,VD,VE,VF, VH,VJ,VK,VL,VM,VN | FB1920 | 266 |
| SP-30FJA-LA,LB,LC,LD,LE,LF,LH, LJ,LK,LL,LM,LN | FB1930 | 266 |
| SP-30FJA-VA,VB,VC,VD,VE,VF,VH,VJ, VK,VL,VM,VN | FB1940 | 267 |
| SP-30HTA-LA,LD,LE,LJ,LK,LN | FB1950 | 267 |
| SP-30HTA-VA,VD,VE,VJ,VK,VN | FB1960 | 267 |
| CP-30JJA-LA,LB,LC,LD,LE,LF,LH, LJ,LK,LL,LM,LN | FB1970 | 268 |
| CP-30JJA-VA,VB,VC,VD,VE,VF, VH,VJ,VK,VL,VM,VN | FB1980 | 268 |
| SP-30UVA-LA,LD,LE,LJ,LK,LN | FB1990 | 269 |
| SP-30UVA-VA,VD,VE,VJ,VK,VN | FB2000 | 269 |
| SP-60AVA-LA,LD,LE,LJ,LK,LN | FB2010 | 270 |
| SP-60CVB-LA,LD,LE,LJ,LK,LN | FB2020 | 270 |
| SP-60FJB-LA,LB,LC,LD,LE,LF, LH,LJ,LK,LL,LM,LN | FB2930 | 270 |
| SP-60HTA-LA,LD,LE,LJ,LK,LN | FB2040 | 271 |
| SP-60UVA-LA,LD,LE,LJ,LK,LN | FB2050 | 271 |
| SP-70CVA-LA,LB,LC,LD,LE,LF, LH,LJ,LK,LL,LM,LN | FB2060 | 271 |
| CP-70CVA-LA,LB,LC,LD,LE,LF, LH,LJ,LK,LL,LM,LN | | |
| SP-70CWA-LA,LB,LC,LD,LE,LF, LH,LJ,LK,LL,LM,LN | | |
| CP-70CWA-LA,LB,LC,LD,LE,LF, LH,LJ,LK,LL,LM,LN | | |
| SP-70TVA-LA,LD,LE,LJ,LK,LN | FB2070 | 272 |
| CP-70TVA-LA,LD,LE,LJ,LK,LN | | |
| SR-20FJA-LA,LB,LC,LD,LE,LF, LH,LJ,LK,LL,LM,LN | FB2080 | 272 |
| SR-20JJA,LA,LB,LC,LD,LE,LF, LH,LJ,LK,LL,LM,LN | | |
| SR-20FJA-VA,VB,VC,VD,VE,VF, VH,VJ,VK,VL,VM,VN | FB2090 | 272 |
| SR-20JJA-VA,VB,VC,VD,VE,VF, VH,VJ,VK,VL,VM,VN | | |
| SR-20FJA,WA,WD,WE,WJ,WK,WN | FB2100 | 273 |
| SR-20JJA-WA,WD,WE,WJ,WK,WN | | |

| Kit Name | Kit Number | Page |
|---|------------|------|
| CR-20JJA-LA, LB, LC, LD, LE, LF, LH, LJ, LK, LL, LM, LN } ——— | FB2110 | 273 |
| CR-20JJA-VA, VB, VC, VD, VE, VF, VH, VJ, VK, VL, VM, VN } ——— | FB2120 | 274 |
| CR-20JJA-WA, WD, WE, WJ, WK, WN ——— | FB2130 | 274 |
| SR-20LLA-LA, LB, LC, LD, LE, LF, LH, LJ, LK, LL, LM, LN } ——— | FB2140 | 274 |
| SR-20LLA-VA, VB, VC, VD, VE, VF, VH, VJ, VK, VL, VM, VN } ——— | FB2150 | 275 |
| SR-20LLA-WA, WD, WE, WJ, WK, WN ——— | FB2160 | 275 |
| SR-20RRA-LA, LC, LD, LE, LH, LJ, LK, LM, LN } ——— | FB2170 | 275 |
| SR-20RRA-VA, VC, VD, VE, VH, VJ, VK, VM, VN } ——— | FB2180 | 276 |
| SR-20RRA-WA, WD, WE, WJ, WK, WN ——— | FB2190 | 276 |
| CR-20RRA-LA, LC, LD, LE, LH, LJ, LK, LM, LN } ——— | FB2200 | 276 |
| CR-20RRA-VA, VC, VD, VE, VH, VJ, VK, VM, VN } ——— | FB2210 | 277 |
| CR-20RRA-WA, WD, WE, WJ, WK, WN ——— | FB2220 | 277 |
| SR-30FJA-LA, LB, LC, LD, LE, LF, LH, LJ, LK, LL, LM, LN } ——— | FB2230 | 277 |
| SR-30FJA-VA, VB, VC, VD, VE, VF, VH, VJ, VK, VL, VM, VN } ——— | FB2240 | 278 |
| SR-30FJA-WA, WD, WE, WJ, WK, WN ——— | FB2250 | 278 |
| CR-30FJA-LA, LB, LC, LD, LE, LF, LH, LJ, LK, LL, LM, LN } ——— | FB2260 | 278 |
| CR-30FJA-VA, VB, VC, VD, VE, VF, VH, VJ, VK, VL, VM, VN } ——— | FB2270 | 279 |
| CR-30FJA-WA, WD, WE, WJ, WK, WN ——— | FB2280 | 279 |
| SR-30JJA-LA, LB, LC, LD, LE, LF, LH, LJ, LK, LL, LM, LN } ——— | FB2290 | 280 |
| SR-30JJA-VA, VB, VC, VD, VE, VF, VH, VJ, VK, VL, VM, VN } ——— | FB2300 | 280 |
| SR-30JJA-WA, WD, WE, WJ, WK, WN ——— | FB2310 | 280 |
| CR-30JJA-LA, LB, LC, LD, LE, LF, LH, LJ, LK, LL, LM, LN } ——— | FB2320 | 281 |
| CR-30JJA-VA, VB, VC, VD, VE, VF, VH, VJ, VK, VL, VM, VN } ——— | FB2330 | 281 |
| CR-30JJA-WA, WD, WE, WJ, WK, WN ——— | FB2340 | 282 |

| Kit Name | Kit Number | Page |
|--|------------|------|
| SR-30LLA-LA, LB, LC, LD, LE, LF, } LH, LJ, LK, LL, LM, LN | FB2350 | 282 |
| SR-30LLA-VA, VB, VC, VD, VE, } VF, VH, VJ, VK, VL, VM, VN | FB2360 | 282 |
| SR-30LLA-WA, WD, WE, WJ, WK, WN | FB2370 | 283 |
| SR-30RRA-LA, LC, LD, LE, LH, LJ, } LK, LM, LN | FB2380 | 283 |
| SR-30RRA-VA, VC, VD, VE, VH, VJ, } VK, VM, VN | FB2390 | 283 |
| SR-30RRA-WA, WD, WE, WJ, WK, WN | FB2400 | 284 |
| CR-30RRA-LA, LC, LD, LE, LH, LJ, } LK, LM, LN | FB2410 | 284 |
| CR-30RRA-VA, VC, VD, VE, VH, VJ, } VK, VM, VN | FB2420 | 284 |
| CR-30RRA-WA, WD, WE, WJ, WK, WN | FB2430 | 285 |
| SR-60FJB-LA, LB, LC, LD, LE, LF, LH, } LJ, LK, LL, LM, LN | FB2440 | 285 |
| SR-60LLA-LA, LB, LC, LD, LE, LF, LH, } LJ, LK, LL, LM, LN | FB2450 | 285 |
| SR-VXFJA-LA, LB, LC, LD, LE, LF, } LH, LJ, LK, LL, LM, LN | FB2460 | 286 |
| SR-VXFJA-VA, VB, VC, VD, VE, VF, } VH, VJ, VK, VL, VM, VN | FB2470 | 286 |
| SR-VXLLA-LA, LB, LC, LD, LE, LF, } LH, LJ, LK, LL, LM, LN | FB2480 | 287 |
| SR-VXLLA-VA, VB, VC, VD, VE, VF, } VH, VJ, VK, VL, VM, VN | FB2490 | 287 |
| SR-VXRRA-LA, LC, LD, LE, LH, LJ, } LK, LM, LN | FB2500 | 287 |
| SR-VXRRA-VA, VC, VD, VE, VH, VJ, } VK, VM, VN | FB2510 | 288 |
| SG-70CVB-LA, LD, LK, LN } SG-70CVB-LA, LD | FB2520 | 288 |
| SG-70TVA-LA, LD, LK, LN | FB2530 | 288 |
| SG-70TVB-LA, LD | | |
| ST-30HVA-LA, LD, LK, LN } ST-31HVA-LA, LD, LK, LN ST-30UVA-LA, LD, LK, LN ST-31UVA-LA, LD, LK, LN | FB2540 | 289 |

 

DIGITAL EQUIPMENT CORPORATION, Corporate Headquarters: Maynard, Massachusetts 01754, Telephone: (617) 897-5111 - SALES AND SERVICE OFFICES: UNITED STATES - ALABAMA, Huntsville • ARIZONA, Phoenix and Tucson • CALIFORNIA, El Segundo, Los Angeles, Oakland, Ridgecrest, San Diego, San Francisco (Mountain View), Santa Ana, Santa Clara, Stanford, Sunnyvale and Woodland Hills • COLORADO, Englewood • CONNECTICUT, Fairfield and Meriden • DISTRICT OF COLUMBIA, Washington (Lanham, MD) • FLORIDA, Ft. Lauderdale and Orlando • GEORGIA, Atlanta • HAWAII, Honolulu • ILLINOIS, Chicago (Rolling Meadows) • INDIANA, Indianapolis • IOWA, Bettendorf • KENTUCKY, Louisville • LOUISIANA, New Orleans (Metairie) • MARYLAND, Odenton • MASSACHUSETTS, Marlborough, Waltham and Westfield • MICHIGAN, Detroit (Farmington Hills) • MINNESOTA, Minneapolis • MISSOURI, Kansas City (Independence) and St. Louis • NEW HAMPSHIRE, Manchester • NEW JERSEY, Cherry Hill, Fairfield, Metuchen and Princeton • NEW MEXICO, Albuquerque • NEW YORK, Albany, Buffalo (Cheektowaga), Long Island (Huntington Station), Manhattan, Rochester and Syracuse • NORTH CAROLINA, Durham/Chapel Hill • OHIO, Cleveland (Euclid), Columbus and Dayton • OKLAHOMA, Tulsa • OREGON, Eugene and Portland • PENNSYLVANIA, Allentown, Philadelphia (Bluebell) and Pittsburgh • SOUTH CAROLINA, Columbia • TENNESSEE, Knoxville and Nashville • TEXAS, Austin, Dallas and Houston • UTAH, Salt Lake City • VIRGINIA, Richmond • WASHINGTON, Bellevue • WISCONSIN, Milwaukee (Brookfield) • INTERNATIONAL - ARGENTINA, Buenos Aires • AUSTRALIA, Adelaide, Brisbane, Canberra, Melbourne, Perth and Sydney • AUSTRIA, Vienna • BELGIUM, Brussels • BOLIVIA, La Paz • BRAZIL, Rio de Janeiro and Sao Paulo • CANADA, Calgary, Edmonton, Halifax, London, Montreal, Ottawa, Toronto, Vancouver and Winnipeg • CHILE, Santiago • DENMARK, Copenhagen • FINLAND, Helsinki • FRANCE, Lyon, Grenoble and Paris • GERMAN FEDERAL REPUBLIC, Cologne, Frankfurt, Hamburg, Hannover, Munich, Nuremberg, Stuttgart and West Berlin • HONG KONG • INDIA, Bombay • INDONESIA, Djakarta • IRELAND, Dublin • ITALY, Milan, Rome and Turin • IRAN, Teheran • JAPAN, Osaka and Tokyo • MALAYSIA, Kuala Lumpur • MEXICO, Mexico City • NETHERLANDS, Utrecht • NEW ZEALAND, Auckland and Christchurch • NORWAY, Oslo • PUERTO RICO, Santurce • SINGAPORE • SPAIN, Madrid • SWEDEN, Gothenburg and Stockholm • SWITZERLAND, Geneva and Zurich • UNITED KINGDOM, Birmingham, Bristol, Epsom, Edinburgh, Leeds, Leicester, London, Manchester and Reading • VENEZUELA, Caracas •

digital

DIGITAL EQUIPMENT CORPORATION, Corporate Headquarters: Maynard, Massachusetts 01754, Telephone: (617) 897-5111 - SALES AND SERVICE OFFICES: UNITED STATES - ALABAMA, Huntsville • ARIZONA, Phoenix and Tucson • CALIFORNIA, El Segundo, Los Angeles, Oakland, Ridgecrest, San Diego, San Francisco (Mountain View), Santa Ana, Santa Clara, Stanford, Sunnyvale and Woodland Hills • COLORADO, Englewood • CONNECTICUT, Fairfield and Meriden • DISTRICT OF COLUMBIA, Washington (Lanham, MD) • FLORIDA, Ft. Lauderdale and Orlando • GEORGIA, Atlanta • HAWAII, Honolulu • ILLINOIS, Chicago (Rolling Meadows) • INDIANA, Indianapolis • IOWA, Bettendorf • KENTUCKY, Louisville • LOUISIANA, New Orleans (Metairie) • MARYLAND, Odenton • MASSACHUSETTS, Marlborough, Waltham and Westfield • MICHIGAN, Detroit (Farmington Hills) • MINNESOTA, Minneapolis • MISSOURI, Kansas City (Independence) and St. Louis • NEW HAMPSHIRE, Manchester • NEW JERSEY, Cherry Hill, Fairfield, Metuchen and Princeton • NEW MEXICO, Albuquerque • NEW YORK, Albany, Buffalo (Cheektowaga), Long Island (Huntington Station), Manhattan, Rochester and Syracuse • NORTH CAROLINA, Durham/Chapel Hill • OHIO, Cleveland (Euclid), Columbus and Dayton • OKLAHOMA, Tulsa • OREGON, Eugene and Portland • PENNSYLVANIA, Allentown, Philadelphia (Bluebell) and Pittsburgh • SOUTH CAROLINA, Columbia • TENNESSEE, Knoxville and Nashville • TEXAS, Austin, Dallas and Houston • UTAH, Salt Lake City • VIRGINIA, Richmond • WASHINGTON, Bellevue • WISCONSIN, Milwaukee (Brookfield) • INTERNATIONAL - ARGENTINA, Buenos Aires • AUSTRALIA, Adelaide, Brisbane, Canberra, Melbourne, Perth and Sydney • AUSTRIA, Vienna • BELGIUM, Brussels • BOLIVIA, La Paz • BRAZIL, Rio de Janeiro and Sao Paulo • CANADA, Calgary, Edmonton, Halifax, London, Montreal, Ottawa, Toronto, Vancouver and Winnipeg • CHILE, Santiago • DENMARK, Copenhagen • FINLAND, Helsinki • FRANCE, Lyon, Grenoble and Paris • GERMAN FEDERAL REPUBLIC, Cologne, Frankfurt, Hamburg, Hannover, Munich, Nuremberg, Stuttgart and West Berlin • HONG KONG • INDIA, Bombay • INDONESIA, Jakarta • IRELAND, Dublin • ITALY, Milan, Rome and Turin • IRAN, Teheran • JAPAN, Osaka and Tokyo • MALAYSIA, Kuala Lumpur • MEXICO, Mexico City • NETHERLANDS, Utrecht • NEW ZEALAND, Auckland and Christchurch • NORWAY, Oslo • PUERTO RICO, Santurce • SINGAPORE • SPAIN, Madrid • SWEDEN, Gothenburg and Stockholm • SWITZERLAND, Geneva and Zurich • UNITED KINGDOM, Birmingham, Bristol, Epsom, Edinburgh, Leeds, Leicester, London, Manchester and Reading • VENEZUELA, Caracas •

digital