

MAINDEC-08-DO7B-D

IDENTIFICATION

Product Code: MAINDEC-08-DO7B-D

Product Name: Random ISZ Test

Date Created: March 25, 1968

Maintainer: Diagnostic Group

Author: R. Green

1. ABSTRACT

This program is written to test the ISZ instruction of the PDP-8. An ISZ instruction is placed in a FROM location, and a TO location contains the OPERAND. Part 1 of the program selects FROM, TO, and OPERAND from a random number generator, with the option of holding any or all constant. Part 2 uses a fixed set of FROM, TO, and OPERAND numbers.

2. REQUIREMENTS

2.1 Equipment

One PDP-8 equipped with Teletype.

2.2 Storage

This program uses locations 0000 - 7600₈. The Binary Loader must be stored in the last memory page.

2.3 Preliminary Programs

MAINDEC-08-D01(n), MAINDEC-08-D02(n), and MAINDEC-08-D03(n)

3. LOADING PROCEDURE

The standard Binary Loader is used.

4. STARTING PROCEDURE

4.1 Switch Settings

SR0 = Halt on error

SR1 = Eliminate error printouts

SR3 = Fixed FROMS (1)
Random FROMS (0)

SR4 = Fixed TOS (1)
Random TOS (0)

SR5 = Fixed OPERAND (1)
Random OPERAND (0)

SR9 = Do one ISZ only

SR11 = Do part 2 (1) → SR3, 4, 5 must be 0s.
Do part 1 (0)

4.2 Starting Address

37

4.3 Operator Action

- a. Set SR (SWITCH REGISTER) to 0037 and press LOAD ADDRESS.
- b. Set SR to desired mode of operation; for most runs, SR9 = 1 allows the most testing in the least amount of time.

For fixed FROM, TO, or OPERAND usage, the fixed number may be selected and entered into the memory locations shown below:

FROM = 0002
 TO = 0020
 OPERAND = 0021

- c. Push START.

5. OPERATING PROCEDURE

Same as paragraph 4.

6. ERRORS

6.1 Error Halts and Description

<u>C (PC)</u>	<u>Cause</u>
0002	Peripheral interrupt
0254	Halt on error. SR0 = 1

6.2 Error Printouts

F xxxx T yyyy
 0 ZZZZ F mmmm R nnnn NS

6.2.1 Printout Explanation

(FROM)	F xxxx	- The ISZ instruction in location xxxx failed.
(TO)	T yyyy	- The operand address of the ISZ instruction was yyyy.
(OPERAND)	0 ZZZZ	- The starting count in the ISZ loop was ZZZZ.
(FAILED)	F mmmm	- The failure occurred trying to ISZ the number mmmm.
(RESULT)	R nnnn	- The result of this ISZ was nnnn.
	NS	- No skip occurred.
	S,	- Indicates a skip.

6.2.2 Examples

a. The following is a typical error printout.

```
F 3003 T 5470
O 3705 F 4777 R 5000 S
```

Line 1 of the printout is a statement of the problem. It says that located at 3003 is an ISZ instruction incrementing an operand stored in location 5470.

Line 2 of the printout gives information for error analysis. 3705 was the initial operand, 4777 was the operand being incremented when the error occurred, and 5000 is the operand following the failing increment. The S indicates that the increment resulted in a skip. The error here is obviously that the skip should not have occurred.

b. The following is another typical error printout.

```
F 3003 T 5470
O 3705 F 4777 R 5020 NS
```

This is identical to example (a) except that a different type error has occurred. The result of incrementing 4777 should be 5000, not 5020.

6.3 Error Recovery

The program continues on, following an error printout unless SR0 = 1. After a halt on error, push CONTINUE to resume testing.

When errors exist, a failing condition chosen from those typed out must be used with the scope mode. For the scope mode, perform the following steps:

- a. Stop the program.
- b. Insert chosen FROM into location 0002.
- c. Insert chosen TO into location 0020.
- d. Insert chosen failing OPERAND into location 0021.
- e. Restart program with control switches 1, 3, 4, 5, and 9 set to 1.

NOTE: By setting SR0 the program halts following the error printout. The operator may at this time set switches 1, 3, 4, 5 and 9 and push CONTINUE. The program enters a scope mode using the failing conditions just printed.

7. RESTRICTIONS

7.1 Starting Restrictions

None

7.2 Operating Restrictions

The interrupt is enabled during program operation. Any attached device, which might cause spurious interrupts, must be disabled.

8. MISCELLANEOUS


8.1 Execution Time

SR9 = 0. 11,000 ISZ operations/second.

SR9 = 1. 3,500 ISZ operations/second

9. PROGRAM DESCRIPTION

The test loop is shown below:

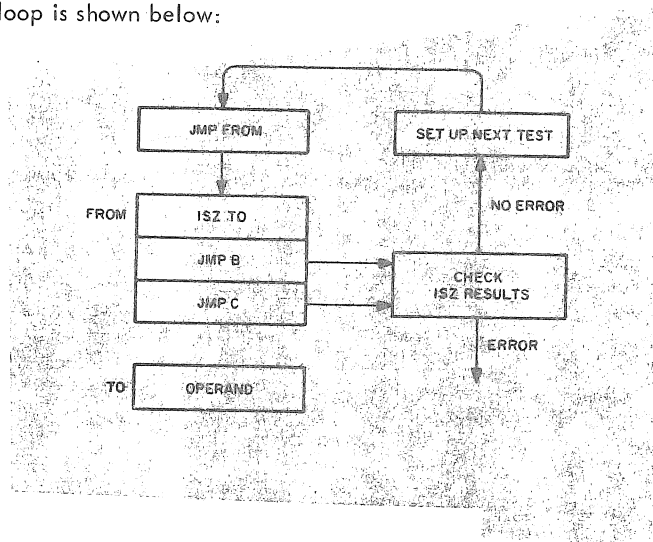

Part 1 of the program uses a random number generator to select the FROM, TO, and OPERAND numbers. Once selected, the OPERAND is incremented until it reaches zero. Each ISZ is checked by duplicating ISZ with TAD, IAC, DCA. Each iteration is also checked for the proper skip or no-skip condition.

Part 2 of the program is actually part 1, with the random number generator replaced by a fixed number generator. Sequencing of events is as follows, (note: $621_8 < \text{MEMORY TEST AREA} < 7600_8$):

- a. FROM = 621 TO = 624 Test a set of 24 selected OPERANDS.

To save time it is suggested that SR9 = 1, so that the ISZ is performed on each OPERAND only once instead of incrementing it until the ISZ instruction skips.

MAINDEC-08-DO7B-D

b. FROM = 621 TO = 625 Repeat the set of OPERANDS used in (a) above.

This sequence continues until TO reaches the upper limit of the memory test area. FROM is then incremented by 1 and the process is repeated. When FROM reaches the upper limit of the memory test area, the test is complete.

Ideally, it is desirable to ISZ every location from every other location in the test area and, in doing so, use all 24 of the selected worst case operands for each set of addresses. This is what Part 2 does, but it takes many days to complete the test. It is for this reason that the program uses the random number generator system of Part 1. Part 2 is an additional feature of the program with very limited use.

A 07 is printed after each group of 32,000 tests.


```

0000 0000 /PDP-05 ISZ TEST
0001 5001 /CONSTANTS AND VARIABLES
0002 0002
0003 0003
0004 0200
0005 0547
0006 7771
0007 0007
0010 0000
0011 0000
0012 7401
0013 3607
0014 0003

0015 2420
0016 5115
0017 5140
0020 0000
0021 0000
0022 0000
0023 0000
0024 0004
0025 0400
0026 0200
0027 0100
0030 0000
0031 0260
0032 0200
0033 0205
0034 0413
0035 1013
0036 0600

0000 0000 /PERIPHERAL INTERRUPT
0001 5001 /ISZ TEST INSTRUCTION LOCATION
0002 0002 /LOW LIMIT TEST AREA
0003 0003 /HIGH LIMIT TEST AREA
0004 0200
0005 0547
0006 7771
0007 0007 /DCTAL CONVERSION MASK
0010 0000 /IR0
0011 0000 /IR1
0012 7401
0013 3607 /THE RANDOM NUMBER LOCATION
0014 0003

0015 2420 ISZ I TULOC /MOVING ISZ
0016 5115 JMP BACK /TEST INSTRUCTION
0017 5140 JMP BAKBRN /GROUP
0020 0000 TO OC: 0 /LOCATION TO BE ISZ'D
0021 0000 PATRN: 0 /STARTING ISZ PATTERN
0022 0000 BEFOR: 0 /FAILING PATTERN BEFORE FAILING ISZ
0023 0000 AFTER: 0 /PREDICTED RESULTS OF EACH ISZ
0024 0004 K4: 4 /SWITCH REGISTER MASKS
0025 0400 K0400: 0400
0026 0200 K0200: 0200
0027 0100 K0100: 0100
0030 0000 NOTE: 0
0031 0260 PRINT: INF1=1
0032 0200 AERR1: ERR1
0033 0205 AERR2: ERR2
0034 0413 APDR: PUR
0035 1013 ITAUNM: TAD NUM
0036 0600 ATFCLP: TFCLF

```

```

/SR0=HALT AFTER ERROR PRINTOUT
/SR1=NO PRINTOUTS
/SR3 = HOLD FROM CONSTANT
/SR4 = HOLD TO CONSTANT
/SR5 = HOLD PATTERN CONSTANT
/SR9 = DO ONE ISZ ONLY
/SR11 = DO PART 2
/
/

```

```

/PROGRAM START
START, JMS I ,*1      /JON
      PATCH          /LAS
      AND THREE
      SZA CLA        /SKIP IF PART 1
      JMP I K0000    /GO TO PART 2
      TAD ITADNM
      DCA RANUM+1
      /CHECK FOR FIXED PATTERN
      LAS
      AND K0100
      SZA
      JMP CHEK2

```

```

0037 4440
0040 0614
0041 0014
0042 7640
0043 5425
0044 1035
0045 3164
0046 7604
0047 0027
0050 7440
0051 5054

```

CHEK1,

0052	4163		/SELECT THE PATTERN
0053	3021		JMS RANUM
			DCA PATRN
0054	7604		/CHECK FOR FIXED TO
0055	0026		LAS
0056	7640		AND K0200
0057	5064		SZA CLA
			JMP CHEK3
0060	4163		/SELECT THE TO LOCATION
0061	3020		JMS RANUM
0062	1020		DCA TOLOC
0063	4150		TAD TOLOC
			JMS LIMITST
0064	7604		/CHECK FOR FIXED FROM
0065	0025		LAS
0066	7640		AND K0400
0067	5074		SZA CLA
			JMP PLCINT
0070	4163		/SELECT THE FROM LOCATION
0071	3002		JMS RANUM
0072	1002		DCA FRMLOC
0073	4150		TAD FRMLOC
			JMS LIMITST
0074	7240		/PLACE FROM INSTRUCTIONS
0075	1002		CLA CMA
0076	3010		TAD FRMLOC
0077	1015		DCA WORK
0100	3410		TAD ISE1
0101	1016		DCA I WORK
0102	3410		TAD JMP1
0103	1017		DCA I WORK
0104	3410		TAD JMP2
			DCA I WORK

```

0105 1021 /DEPOSIT PATTERN IN TO LOCATION
0106 3420 TAD PATRN
DCA I TOLOC

LUP1,
0107 1021 /STORE PREDICTED ISZ RESULT
0110 3022 TAD PATRN
0111 1022 DCA BEFOR
0112 7001 TAD BEFOR
0113 3023 IAC
0114 5405 DCA AFTER
JMP I ASUC

BACK,
0115 7604 /RETURN FOR NO SKIP CONDITION
0116 7004 LAS
0117 7710 RAL
0120 5131 SPA CLA
0121 1420 JMP LAS1
0122 7041 TAD I TOLOC
0123 1023 CIA
0124 7640 TAD AFTER
0125 5432 SZA CLA
0126 1420 JMP I AERR1
0127 7650 TAD I TOLOC
0130 5432 SNA CLA
0131 7604 JMP I AERR1
0132 0024 LAS
0133 7440 AND K4
0134 5046 JMP CHEK1
0135 7001 IAC
0136 1022 TAD BEFOR
0137 5110 JMP LUP1=1

LAS1,
0140 7604 /RETURN FOR SKIP CONDITION
0141 7004 LAS
0142 7710 RAL
0143 5046 SPA CLA
0144 1420 JMP CHEK1
0145 7640 TAD I TOLOC
0146 5433 SZA CLA
0147 5046 JMP I AERR2
JMP CHEK1

BAKRN,
0150 0000 /TEST HIGH-LOW LIMITS
0151 7510 LIMTST, 0
0152 5157 SPA
0153 1003 JMP ,+5
0154 7700 TAD LIMLO
0155 5550 SMA CLA
0156 5164 JMP I LIMTST
0157 1004 JMP RANUN+1
0160 7700 TAD LIMHI
SMA CLA

```

```

/SKIP IF TO LOCATION OK
/ERROR IN ISZ LOCATION

```

```

/ERROR IN ISZ OPERATION

```

```

/ERROR IN ISZ SKIP DETECTION

```

```

/SKIP IF NOT ONE ISZ (SR9)

```

0161 5164
0162 5550

JMP RANUM*1
JMP I LIMITST

/RANDOM NUMBER GENERATOR

0163	0000		
0164	1013	TAD NUM	
0165	7104	RAL CLL	
0166	7430	S&L	
0167	1014	TAD THREE	
0170	3013	DCA NUM	
0171	1013	TAD NUM	/AC=NEW RANDOM NUMBER
0172	5563	JMP I RANUM	
0173	0333	SKPUAT	
0174	0334	SKPUAT+1	
0175	1000	K1000	
0176	0000	KP	0
0177	0000	CT	0

0200	*200	/ERROR ROUTINE 1
1341	ERR1,	TAD SKPDAT+6
3333		DCA SKPDAT
7040		CMA
3030		DCA NOTL
5207		JMP KPG0
0205	ERR2,	/ERROR ROUTINE 2
3333	KPG0,	TAD SKPDAT-1
1342		DCA SKPDAT
3334		TAD SKPDAT+7
1002		DCA SKPDAT+1
3010		TAD FRMLOC
1371		DCA WORK
4343		TAD A3
		JMS SETUP
1020		TAD TOLOC
3010		DCA WORK
1372		TAD A4
4343		JMS SETUP
1021		TAD PATRN
3010		DCA WORK
1373		TAD A5
4343		JMS SETUP
1022		TAD BEFOR
3010		DCA WORK
1374		TAD A6
4343		JMS SETUP
1420		TAD I TOLOC
3010		DCA WORK
1375		TAD A7
4343		JMS SETUP
6002	TTY,	/TTY PRINT ROUTINE
1031		IOF
3010		TAD PRINT
1410		DCA WORK
6046		TAD I WORK
6041		TLS
5242		TSF
1012		JMP F1
7640		TAD M377
5240		SZA CLA
6042		JMP TTY+3
6001		TCF
7604		ION
7710		LAS
7402		SPA CLA
		HLT
		/HALT AFTER ERROR (SR0)

0254 1030
0255 7650
0256 5046
0257 3030
0260 5131

TAD NOTE
SNA CLA
JMP CHECK1
DCA NOTE
JMP LAS1

/RETURN TO NO SKIP ROUTINE


```

/ERROR PRINT OUT LINE 1
INFI, 306 /F FROM (INSTRUCTION LOCATION)
      240 /SPACE
INDATA: 0 /X LOCATION
         0 /X
         0 /X
         0 /X
         0 /X
         240 /SPACE
         240 /SPACE
         324 /T TO (OPERAND ADDRESS)
         240 /SPACE ADDRESS
ONDATA: 0 /X
         0 /X
         0 /X
         0 /X
         215 /CR
         212 /LF
         215 /CR
         215 /CR
    
```

```

0261 0306
0262 0240
0263 0000
0264 0200
0265 0000
0266 0000
0267 0240
0270 0240
0271 0324
0272 0240
0273 0000
0274 0000
0275 0000
0276 0000
0277 0215
0300 0212
0301 0215
0302 0215
    
```

```

/ERROR PRINTOUT LINE 2
STDATA: 0 /F OPERAND (STARTING COUNT)
         0 /SPACE
         0 /X PATTERN
         0 /X
         0 /X
         0 /X
         240 /SPACE
         240 /SPACE
         306 /F FALLING COUNT
         240 /SPACE PATTERN BEFORE FAILING ISE
FLDATA: 0 /X
         0 /X
         0 /X
         0 /X
         240 /SPACE
         240 /SPACE
         322 /R RESULT AFTER FAILURE
         240 /SPACE
    
```

```

0303 0317
0304 0240
0305 0000
0306 0000
0307 0000
0310 0000
0311 0240
0312 0240
0313 0306
0314 0240
0315 0000
0316 0000
0317 0000
0320 0000
0321 0240
0322 0240
0323 0322
0324 0240
    
```

PATTERN AFTER FAILING ISZ

```

RSDATA, 0 /X
          0 /X
          0 /X
          0 /X
          240 /SPACE
          240 /SPACE
          316 /N
          323 /S
          215 /CR
          212 /LF
          212 /LF
          377 /RUBOUT
          316 /N
          323 /S

```

```

SKPUAT, 316 NO
         323 SKIP

```

SETUP:

```

0343 0000 DCA WORK1
0344 3011 TAD WORK
0345 1010 RTL
0346 7006 RTL
0347 7006 JMS MORSU
0350 4363 RTR
0351 7012 RTR
0352 7012 RTR
0353 7012 JMS MORSU
0354 4363 RTR
0355 7012 RAR
0356 7010 JMS MORSU
0357 4363 JMS MORSU
0360 4363 CLA
0361 7200 JMP I SETUP
0362 5743 AND MSK7
0363 0000 TAD TW6
0364 0007 DCA I WORK1
0365 1376 TAD WORK
0366 3411 JMP I MORSU
0367 1010
0370 5763

```

MORSU:

```

0371 0262 /PAGE 1 CONSTANTS
0372 0272 INDATA=1
0373 0304 ONDATA=1
0374 0314 STDATA=1
0375 0324 FLDATA=1
0376 0260 RSDATA=1

```

/PAGE 1 CONSTANTS

```

A3,
A4,
A5,
A6,
A7,
TW6,

```

```

0325 0000
0326 0000
0327 0000
0330 0000
0331 0240
0332 0240
0333 0316
0334 0323
0335 0215
0336 0212
0337 0212
0340 0377
0341 0316
0342 0323

```

```

0343 0000
0344 3011
0345 1010
0346 7006
0347 7006
0350 4363
0351 7012
0352 7012
0353 7012
0354 4363
0355 7012
0356 7010
0357 4363
0360 4363
0361 7200
0362 5743
0363 0000
0364 0007
0365 1376
0366 3411
0367 1010
0370 5763

```

```

0371 0262
0372 0272
0373 0304
0374 0314
0375 0324
0376 0260

```


0426 1713
0427 3312
0430 1312
0431 7450
0432 5240
0433 7201
0434 1313
0435 3313
0436 1312
0437 5563

PRJT,

/SELECT PATTERN AND OTHER THINGS
TAD I PATCYC
DCA PATT
TAD PATT
SNA
JMP ,*6
CLA IAC
TAD PATCYC
DCA PATCYC
TAD PATT
JMP I RANUM
/
/NO SKIP IF END OF PATTERN TABLE
/END PATTERN TABLE LOOK AROUND
/RETURN, AC=NEW PATTERN

0440 1345
0441 3313
0442 7001
0443 1311
0444 3311
0445 1311
0446 7041
0447 1310
0450 7640
0451 5255
0452 1311
0453 1014
0454 3311
0455 1311
0456 7500
0457 5276
0460 1004
0461 7710
0462 5276
0463 7201
0464 1310
0465 3310
0466 1003
0467 7041
0470 3311
0471 1310
0472 1004
0473 7640
0474 5276
0475 5200
0476 7200
0477 1312
0500 5563

TAD AK77/6
DCA PATCYC
IAC
TAD TO
DCA TO
TAD TO
CIA
TAD FROM
SZA CLA
JMP ,*4
TAD TO
TAD THREE
DCA TO
TAD TO
SMA
JMP GOUT
TAD LIMHI
SPA CLA
JMP GOUT
CLA IAC
TAD FROM
DCA FROM
TAD LIMLO
CIA
DCA TO
TAD FROM
TAD LIMHI
SZA CLA
JMP GOUT
JMP 400
CLA
TAD PATT
JMP I RANUM

/INCREMENT TO

/SKIP IF TO = FROM

/SKIP AROUND FROM

/SKIP IF END TEST AREA

/ADVANCE FROM

/RESET TO ADDRESS

GOUT,

0501	1311				
0502	5563	TURUT,	/SELECT TO ROUTINE		
		TAD TO			
		JMP I RANUM			
0503	1310	FRUT,	/SELECT FROM ROUTINE		
0504	5563	TAD FROM			
		JMP I RANUM			
0505	0071	GFROM,	/PAGE 3 CONSTANTS		
		SELFRM+1			
0506	0061	GTO,	SELTO+1	/RANDOM FROM IS REQUESTED	/STORED RETURN ADDRESS WHEN
				/STORED RETURN ADDRESS WHEN	
0507	0053	GPAT,	SELPAT+1	/RANDOM TO IS REQUESTED	/STORED RETURN ADDRESS WHEN
				/RANDOM PATTERN IS REQUESTED	
0510	0000	FROM,	Ø	/CURRENT FROM ADDRESS	
0511	0000	TO,	Ø	/CURRENT TO ADDRESS	
0512	0000	PATT,	Ø	/CURRENT PATTERN	
0513	0000	PATCYG,	Ø	/CURRENT PATTERN ADDRESS	
0514	5434	INST1,	JMP I APDR		
0515	7776	K7776,	7776		
0516	7775		7775		
0517	7773		7773		
0520	7767		7767		
0521	7757		7757		
0522	7737		7737		
0523	7677		7677		
0524	7577		7577		
0525	7377		7377		
0526	6777		6777		
0527	5777		5777		
0530	3777		3777		
0531	0001		0001		
0532	0003		0003		
0533	0007		0007		
0534	0017		0017		
0535	0037		0037		
0536	0077		0077		
0537	0177		0177		
0540	0377		0377		
0541	0777		0777		
0542	1777		1777		
0543	3777		3777		
0544	0000		Ø		
0545	0515	AK7776,	K7776		
0546	0544	AØ,	K3777*1		

0547 1177
 0550 7001
 0551 3177
 0552 1177
 0553 7640
 0554 5436
 0555 1176
 0556 1175
 0557 3176
 0560 1176
 0561 7640
 0562 5436
 0563 6002
 0564 1375
 0565 3573
 0566 1376
 0567 3574
 0570 1374
 0571 3010
 0572 5773
 0573 7602
 0574 0332
 0575 0260
 0576 0267

SUC,

TAD CT
 IAC CT
 DCA CT
 TAD CT
 SZA CLA
 JMP I ATFCLF
 TAD KP
 TAD K1000
 DCA KP
 TAD KP
 SZA CLA
 JMP I ATFCLF

IOF
 TAD ZERO
 DCA I A1
 TAD SVN
 DCA I A2
 TAD INF2
 DCA WORK
 JMP I .+1
 7602
 SKPUAT=1
 260
 267

INF2,
 ZERO,
 SVN,

*600 /CHECK FOR TO=FROM CONFLICT

0600	0600	TAD TOLC
0601	7041	CJA
0602	1002	TAD FRMLC
0603	7450	SNA
0604	5054	JMP CHEK2
0605	7001	IAC
0606	7450	SNA
0607	5054	JMP CHEK2
0610	7001	IAC
0611	7650	SNA CLA
0612	5054	JMP CHEK2
0613	5402	JMP I FRMLC

/RESTORE THEN GO AWAY

PATCH:	0	DCA 0
		TAD X
		DCA 1
		TAD X1
		DCA 2
		TAD X2
		DCA 3
		TAD X3
		DCA START
		TAD X4
		DCA START+1
		ION
		JMP I PATCH

X:	7402
X1:	0
X2:	7157
X3:	ION
X4:	LAS

*7602	TAD I WORK
	TLS
	TSF
	JMP :=1
	TAD M377
	SEA CLA
	JMP :=6
	JMP OVR

*7617	TAD I WORK
OVR:	ION
	JMP I ATFLC

SYMBOL TABLE

ALRR1	0032
ALRR2	0033
AFTER	0023
AK7776	0545
APDR	0034
ASUC	0005
ATFCLF	0036
A0	0546
A1	0173
A2	0174
A3	0371
A4	0372
A5	0373
A6	0374
A7	0375
BACK	0115
BAKBRN	0140
BEFOR	0022
CHEK1	0046
CHEK2	0054
CHEK3	0064
CT	0177
ERR1	0200
ERR2	0205
FLDATA	0315
FRMLC	0002
FROM	0510
FRUT	0503
GFROM	0505
GOUT	0476
GPAT	0507
GTO	0506
INDATA	0263
INF1	0261
INF2	0574
INST1	0514
ISZ1	0015
ITADNM	0035
JMP1	0016
JMP2	0017
KP	0176
KPGO	0207
K0100	0027
K0200	0026
K0400	0025
K1000	0175
K3777	0543
K4	0024
K7776	0515
LAS1	0131
LIMH1	0004
LIMLO	0003
LIMTST	0150

SYMBOL TABLE

LUP1	0111
MORSU	0363
MSK7	0007
M377	0012
M/	0006
NOTE	0030
NUM	0013
ONDATA	0273
OVR	7617
PATCH	0614
PATCYC	0513
PATRN	0021
PATT	0512
PUR	0413
PLCINT	0074
PRINT	0031
PHUT	0426
RANUM	0163
RSDATA	0325
SELFRM	0070
SELPAT	0052
SELTO	0060
SETUP	0343
SKPDAT	0333
START	0037
STDATA	0305
SUC	0547
SVN	0576
TFCLF	0600
THREE	0014
TO	0511
TULOC	0020
TORUT	0501
TTY	0235
TW6	0376
WORK	0010
WORK1	0011
X	0632
X1	0633
X2	0634
X3	0635
X4	0636
ZERO	0575

SYMBOL TABLE

FHML0C	0002
LJML0	0003
LJMH1	0004
ASUC	0005
M7	0006
MSK7	0007
WORK	0010
WORK1	0011
M377	0012
NUM	0013
THREE	0014
ISZ1	0015
JMP1	0016
JMP2	0017
TOLOC	0020
PATRN	0021
BEFOR	0022
AFTER	0023
K4	0024
K0400	0025
K0200	0026
K0100	0027
NOTE	0030
PRINT	0031
AERR1	0032
AERR2	0033
APDR	0034
ITADNM	0035
ATFCLF	0036
START	0037
CHEK1	0046
SELPAT	0052
CHEK2	0054
SELTO	0060
CHEK3	0064
SELFRM	0070
PLCINT	0074
LUP1	0111
BACK	0115
LAS1	0131
BAK0RN	0140
LIMITST	0150
RANUM	0163
A1	0173
A2	0174
K1000	0175
KP	0176
CT	0177
EHR1	0200
EHR2	0205
KPGU	0207
TTY	0235
INF1	0261

SYMBOL TABLE

INDATA	0263
ONDATA	0273
STDATA	0305
FLODATA	0315
RSDATA	0325
SKPDAT	0333
SETUP	0343
MURSU	0363
A3	0371
A4	0372
A5	0373
A6	0374
A7	0375
TW6	0376
PJR	0413
PRUT	0426
GOUT	0476
TORUT	0501
FRUT	0503
GFROM	0505
GTO	0506
GPAT	0507
FROM	0510
TO	0511
PATT	0512
PATCYC	0513
INST1	0514
K7776	0515
K5777	0543
AK7776	0545
A0	0546
SUC	0547
INF2	0574
ZERO	0575
SVN	0576
TFCLF	0600
PATCH	0614
X	0632
X1	0633
X2	0634
X3	0635
X4	0636
OVR	7617

THERE ARE NO ERRORS